

TECHNICAL HANDBOOK

iina70e1-h (0604)



Catalog No.:

UL1000:
550 - 000
550 - 001
550 - 002

UL1000 Fab:
550 - 100
550 - 101

from software version V 4.0

UL1000 Fab and UL1000

Helium Leak Detector

Table of Contents

1	General Information	1-1
1.1	Notes on the Use of this Handbook	1-1
1.1.1	Safety Symbols	1-1
1.1.2	Indications	1-1
1.1.3	Symbols of Vacuum Technology	1-2
1.1.4	Definiton of Terms	1-2
1.2	Support from INFICON Service	1-4
1.2.1	Service Centers	1-6
1.3	Introduction	1-6
1.3.1	Purpose	1-6
1.3.2	Technical Data	1-8
1.3.2.1	Physical Data	1-8
1.3.2.2	Electrical Data	1-9
1.3.2.3	Other Data	1-9
1.3.2.4	Ambient Conditions	1-9
1.4	Unpacking	1-10
1.4.1	Supplied Equipment	1-10
1.4.2	Accessories and Options	1-11
1.4.2.1	Sniffer line SL200	1-12
1.4.2.2	Toolbox	1-12
1.4.2.3	Helium Bottle Holder	1-12
1.4.2.4	ESD Mat	1-12
1.4.2.5	Hand set	1-12
1.4.2.6	Test chamber TC1000	1-12
2	Installation	2-1
2.1	Transportation	2-1
2.2	Working Location	2-3
2.3	Electrical Connections	2-4
2.3.1	Mains Power	2-4
2.3.2	Connections for the Data Acquisition Systems	2-6
2.3.2.1	Accessories	2-7
2.3.2.2	Digital Out	2-7
2.3.2.3	Digital In	2-8
2.3.2.4	Recorder	2-9
2.3.2.5	RS232	2-9
2.3.2.6	Hand Set	2-10
2.4	Vaccum Connections	2-10
2.4.1	Inlet Port	2-10
2.4.2	Exhaust	2-10
2.4.3	Vent	2-11
2.4.4	Purge-connection (UL1000 Fab) / Gas ballast (UL1000)	2-11
2.5	Default parameters	2-12

3	First Operation Check	3-1
3.1	Needed Equipment	3-1
3.2	Description of the Initial Operation	3-1
3.2.1	Start up and Measure	3-1
3.2.2	Internal Calibration	3-3
3.2.3	Verification	3-4
<hr/>		
4	Description and Working Principle	4-1
4.1	Introduction	4-1
4.2	Components of the UL1000 and UL1000 Fab	4-1
4.2.1	Vacuum System	4-2
4.2.2	Control Panel	4-3
4.2.2.1	LC Display	4-4
4.2.2.2	START Button	4-4
4.2.2.3	STOP Button	4-4
4.2.2.4	ZERO Button	4-4
4.2.2.5	MENU Button	4-6
4.2.2.6	Soft Keys	4-6
4.2.2.7	Numerical Entries	4-6
4.3	Working Modes	4-7
4.3.1	Vacuum Mode	4-7
4.3.2	Sniffer Mode	4-9
4.3.3	Auto Leak Test Mode	4-9
<hr/>		
5	Operation of the UL1000 and UL1000 Fab	5-1
5.1	Display	5-1
5.2	The Screen in Run-Up Mode	5-1
5.3	Display in stand-by mode	5-2
5.3.1	Purging	5-2
5.4	The Screen in Measurement Mode	5-2
5.4.1	Call for Calibration	5-2
5.4.2	Speaker Volume	5-3
5.4.3	Status Line in the Display	5-3
5.4.4	Numerical Display Mode	5-3
5.4.5	Trend Mode	5-4
<hr/>		
6	Description of the Menu	6-1
6.1	Main Menu	6-3
6.2	View	6-3
6.2.1	Scale linear/logarithmic	6-4
6.2.2	Display-range auto/manual	6-5
6.2.3	Time axis	6-5
6.2.4	Contrast	6-6
6.2.5	Background in Stand-by	6-6
6.2.6	Decimal places	6-7
6.2.7	Lower display limit	6-7
6.3	Mode	6-8
6.3.1	Auto Leak Test	6-9

6.4	Trigger & Alarms	6-11
6.4.1	Trigger Level 1	6-11
6.4.2	Trigger Level 2	6-12
6.4.3	Volume	6-12
6.4.4	Units	6-13
6.4.5	Alarm delay	6-14
6.4.6	Audio alarm type	6-14
6.4.6.1	Pinpoint	6-14
6.4.6.2	Leak rate prop.	6-15
6.4.6.3	Setpoint	6-15
6.4.6.4	Trigger alarm	6-15
6.5	Calibration	6-16
6.6	Settings	6-16
6.6.1	Vacuum settings	6-17
6.6.1.1	Automatic purge (UL1000 Fab only)	6-17
6.6.1.2	Vent delay	6-18
6.6.1.3	Vacuum ranges	6-18
6.6.1.4	Leak rate internal test leak	6-19
6.6.1.5	Machine factor	6-20
6.6.1.6	Auto Leak Test adjustments	6-20
6.6.2	Zero & Background	6-25
6.6.2.1	Background Suppression	6-25
6.6.2.2	Zero	6-26
6.6.3	Mass	6-26
6.6.4	Interfaces	6-27
6.6.4.1	Control Location	6-27
6.6.4.2	RS232 Protocol	6-27
6.6.4.3	Recorder output	6-28
6.6.4.4	Scaling Recorder Output	6-30
6.6.5	Miscellaneous	6-31
6.6.5.1	Time&Date	6-31
6.6.5.2	Language	6-31
6.6.5.3	Leak rate filter	6-32
6.6.5.4	Mains Frequency	6-32
6.6.5.5	Service interval exhaust filter	6-32
6.6.5.6	Service message exhaust filter	6-33
6.6.6	Parameter save / load	6-33
6.6.6.1	Load parameter set	6-33
6.6.6.2	Save parameter set 1	6-34
6.6.7	Monitoring functions	6-34
6.7	Information	6-37
6.7.1	Service	6-38
6.8	Access Control	6-38
6.8.1	Access to CAL function	6-38
6.8.2	Change Device PIN	6-39
6.8.3	Change Menu-PIN	6-39
<hr/>		
7	Calibration	7-1
7.1	Introduction	7-1
7.2	The calibration routines	7-1

7.2.1	Internal Calibration	7-1
7.2.1.1	Automatic Internal Calibration	7-2
7.2.1.2	Manual Internal Calibration	7-2
7.2.2	External Calibration	7-2
7.3	Factor of Calibration - Range of Values	7-5
<hr/>		
8	Error And Warning Messages	8-1
8.1	Hints	8-1
8.2	List of Errors & Warnings	8-2
<hr/>		
9	Maintenance works	9-1
9.1	Hints	9-1
9.2	INFICON Service	9-2
9.3	Key for Maintenance Schedule	9-2
9.4	Maintenance Plan	9-3
9.5	Maintenance groups	9-4
9.5.1	1500 hours maintenance	9-4
9.5.2	4000 hours maintenance	9-5
9.5.3	8000 hours maintenance	9-6
9.5.4	16000 hours maintenance	9-7
9.6	Description of the maintenance work	9-8
9.6.1	Opening the UL1000 and UL1000 Fab	9-8
9.7	Check/Replace the filter cell	9-9
9.8	Replacing the Exhaust Silencer	9-11
9.9	Check/Draining off the exhaust filter	9-12
9.9.1	Replace the filter cell	9-12
9.10	Check, supply Oil D16 B	9-14
9.11	Change oil D16 B	9-16
9.12	Turbomolecular pump TMH 071	9-17
9.13	Scroll Pump (UL1000 Fab only)	9-17
<hr/>		
	Appendix	10-1
A	Diagram	10-1
B	Index	10-2

1 General Information

Notice We recommend that you carefully read this technical handbook to ensure optimum operating conditions right from the start.

This technical handbook contains important informations on the functions, installation, start-up and operation of the UL1000 and UL1000 Fab.

General

We reserve the right to modify the design and the specified data. The illustrations are not binding.

1.1 Notes on the Use of this Handbook

1.1.1 Safety Symbols

Important remarks concerning operational safety and protection are emphasised as follows:



Caution

Information on correct handling or use. Disregard can lead to malfunctions or minor equipment damage.



Warning

Information on preventing extensive equipment and environmental damage.



Danger

Information on preventing any kind of physical injury.



Skilled personnel

Indicates procedures that must be performed by skilled personnel only.

1.1.2 Indications





Tip Information on helpful procedures.

Notice Information on special technical requirements that the user must comply with.

The references to diagrams consists of the chapter number, figure number and the item number in this order. For example: Fig. 2-4/7 refers to item 7 in the figure 4 of chapter 2.

1.1.3 Symbols of Vacuum Technology

Given in the following are some important vacuum symbols which are used in this manual.



1.1.4 Definiton of Terms

Autoranging

The range of the preamplifier and the vacuum ranges are selected automatically.

The autoranging feature of the UL1000 Fab covers the entire range or leak rates depending on the selected operating mode. Not only the leak rate signal, but also the pressure in the test sample (inlet pressure P1) and the forevacuum pressure (P2) are used for control purposes. Range switching between the main ranges is performed via valves. Fine range switching within the main ranges is implemented by switching over the gain factor of the preamplifier.

Autotune Mass alignment

This function automatically aligns the mass spectrometer so that a maximum leak rate is displayed. The control processor changes the voltage which erates the ions in the selected mass range until a maximum ion current is detected by the ion detector. During each calibration the mass alignment is run automatically.

Auto zero

Determination and automatic adaptation of the helium background.

Through this function, the internal zero level of the instrument is determined which is then subtracted from the current leak rate signal. This function is run during the calibration process or when operating the start pushbutton, provided the UL1000 and UL1000 Fab has been running previously for at least 20 seconds in the Stand-by or

vent mode. If the helium background previously suppressed should drop so that for the duration of the zero time only the display limit will be displayed, the zero level is adapted automatically.

Menu

The menu allows the user to program the UL1000 and UL1000 Fab according to his requirements. The menu has a tree architecture.

Default

Status of the UL1000 and UL1000 Fab when supplied by the factory.

GROSS

GROSS is a measurement mode which allows high inlet pressure (1 to 15 mbar). The smallest detectable leak rate is 1×10^{-6} mbar l/s.

FINE

FINE is the medium measurement mode with inlet pressure between 2 and 0,4 mbar. Detection limit is 1×10^{-10} mbar l/s.

ULTRA

ULTRA is the most sensitive measuring range with inlet pressures below 0,4 mbar. The minimum detectable leak rate is 5×10^{-12} mbar l/s.

Foreline pressure

Pressure in the foreline between Turbo pump and scroll pump.

Minimum detectable leak rate

The smallest leak rate the UL1000 and UL1000 Fab is able to detect ($\leq 5 \times 10^{-12}$ mbar l/s).

Internal helium background

The existing helium partial pressure in the measurement system. The level of the internal helium background is measured in the Stand-by mode and subtracted from the measured signal.

Measure mode

The UL1000 and UL1000 Fab measures the leak rate of the test sample.

1.2 Support from INFICON Service

If an instrument is returned to INFICON or an authorised representative of INFICON, please indicate whether the instrument is free of substances damaging to healths or whether it is contaminated. If it is contaminated also indicate the nature of the hazard. INFICON must return any appliances without a *Declaration of Contamination* to the sender's address. A form for stating details as to the type of contamination is reproduced in Fig. 1-1.

A maintenance and service contract is recommended.



Declaration of Contamination

The service, repair, and/or disposal of vacuum equipment and components will only be carried out if a correctly completed declaration has been submitted. Non-completion will result in delay.
This declaration may only be completed (in block letters) and signed by authorized and qualified staff.

1 Description of product
 Type _____
 Article Number _____
 Serial Number _____

2 Reason for return

3 Operating fluid(s) used (Must be drained before shipping.)

4 Process related contamination of product:

toxic	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>
caustic	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>
biological hazard	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)
explosive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)
radioactive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)
other harmful substances	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>

The product is free of any substances which are damaging to health
 yes

1) or not containing any amount of hazardous residues that exceed the permissible exposure limits

2) Products thus contaminated will not be accepted without written evidence of decontamination!

5 Harmful substances, gases and/or by-products
 Please list all substances, gases, and by-products which the product may have come into contact with:

Trade/product name	Chemical name (or symbol)	Precautions associated with substance	Action if human contact

6 Legally binding declaration:
 I/we hereby declare that the information on this form is complete and accurate and that I/we will assume any further costs that may arise. The contaminated product will be dispatched in accordance with the applicable regulations.

Organization/company _____
 Address _____ Post code, place _____
 Phone _____ Fax _____
 Email _____
 Name _____

Date and legally binding signature _____ Companystamp _____

This form can be downloaded from our website.

Copies: Original for addressee - 1 copy for accompanying documents - 1 copy for file of sender

INFICON GmbH

Bonner Str. 498, 50968 Cologne, Germany
 Tel: +49 221 3474 2222 Fax: +49 221 3474 2221
 www.inficon.com leakdetection.service@inficon.com

zisa01e1-a

Fig. 1-1: Declaration of Contamination form

1.2.1 Service Centers

In case you urgently need assistance please get in touch with the local INFICON Service in your country or the service hotline in Cologne, Germany:

Country	Company	City	Phone	Fax	E-Mail
Brazil	PV Prest Vácuo Ltda.	Santana de Parnaíba	+55.11.870.2665	+55.11.870.2665	pv@prestvacuo.com.br
China	INFICON LTD	Hongkong	+852.2520.2880	+852.2865.6883	reach.china@inficon.com
		Beijing	+86.10.6590.0164	+86.10.6590.0521	
		Guangzhou	+86.20.8723.6889	+86.20.8723.6003	
		Shanghai	+86.21.6209.3094	+86.21.6295.2852	
France	INFICON	Vif	+33.4.7672.5215	+33.4.7672.5235	
Germany	INFICON GmbH	Cologne	+49.221.3474.222 2	+49.221.3474.222 1	leakdetection.service@inficon.com
Israel	Mark Technologies Ltd.	Kiriat Ono	+972.3.534.6822	+972.3.534.2589	
Japan	INFICON Co. Ltd.	Ibariki-ken	+81.298.89.2741	+81.298.89.2838	reach.japan@inficon.com
Korea	INFICON Ltd.	Seoul	+82.31.206.0237	+82.31.206.0239	reach.korea@inficon.com
Singapore	INFICON PTE LTD.	Singapore	+65.6890.6250	+65.6890.6266	reach.singapore@inficon.com
Taiwan	INFICON Company Limited	Chupei City, HsinChu Hsien	+886.3.5525.828	+886.3.5525.829	Susan.Chang@inficon.com
United Kingdom	INFICON Ltd.	Bolton	+44 1204 46 9930	+44 12 04 69 07 10	reach.unitedkingdom@inficon.com
United States	Inficon Inc.	East Syracuse, NY	+1.315.434.1167	+1.315.434.2551	service.usa@inficon.com
		Santa Clara, CA	+1.408.361.1200	+1.408.362.1556	
		Austin, TX	+1.512.448.0488	+1.512.448.0398	

1.3 Introduction

1.3.1 Purpose

The UL1000 and UL1000 Fab are helium leak detectors. These instruments may be used to detect the location and the size of leaks on objects under test in two different ways:

- when the test sample has been evacuated first and is sprayed with helium on the outside. It is required that a vacuum connection is provided between the UL1000 and UL1000 Fab and the test sample (vacuum mode).

or

- when a helium overpressure is provided in the test sample and the test sample is searched from the outside with a sniffer probe which is attached to the inlet port (sniffer mode).

**Caution**

Use the UL1000 and UL1000 Fab for leak detection only. Don't use it as a pumping system (esp. pumping aggressive or humid gases.)

For UL1000 use only:

Notice Pumping condensable gases and steams: When pumping test sample water vapour that is inside can attain to the fore pump. With the water vapor that is in the air - especially in humid areas or when using humid or wet test samples - the acceptable compatibility of water vapor or capacity of water vapor respectively can be exceeded.

The steam in the oil of the pump condenses when the water vapor rises over the acceptable value. So the attribute of the oil changes and danger of corrosion occurs for the pump.

While using the leak detector with condensable gases and steams the oil of the fore pump has to be controlled regularly. So you can recognize a condensation of water vapor in the pump. Usually the oil is light and lucent. When water vapor is inside it gets clear and milky at operating state temperature.

When turning the pump off water vapor condensates and raises the part of water in the oil.

**Warning**

The leak detector must not directly be switched off after the process, in which condensable gases or steams are pumped, is finished. It must be running (at least 20 minutes) with open gas ballast valve (see Chapter 5.3.1) until the oil of the pump is free from detached steams.

When not taking care of this instruction there can be a corrosion within the pump. So damages will occur.

The height of the oil of the pump has to be controlled regularly.

The normal intervals of changing the oil from the producer have to be taken care of. See instructions of the rotary vane pump.

For UL1000 Fab use only:**Caution**

Condensable gases and steams can attain the inside of the leak detector and destruct the fore pump.

With the water vapor that is in the air - especially in humid areas or when using humid or wet test samples - the acceptable compatibility of water vapor or capacity of water vapor respectively can be exceeded.



Danger

Dangerous gases pollute the machine.

So you must not use the machine for detecting toxic, acidity, microbiological, explosive, radioactive or other noxious matters.

If you plan to detect noxious matters please contact the manufacturer. Rules for decontamination will be developed then. If the leak detector already has been in contact with dangerous gases please fill the declaration of contamination, too, and send it to INFICON **before** you send the parts.

1.3.2 Technical Data

1.3.2.1 Physical Data

Max. inlet pressure	15 mbar
Minimum detectable Helium leak rates	
• in vacuum mode (ULTRA)	$<5 \times 10^{-12}$ mbar l/s
limit of detection in sniffer mode	$<5 \times 10^{-8}$ mbar l/s
Maximum Helium leak rate which can be displayed	0.1 mbar l/s
Measurement range	12 decades
Time constant of the leak rate signal (blanked off, 63% of the final value)	<1 s
Pumping speed (Helium) at the inlet	
Max. roughing capability	25 m ³ /h (50 Hz) 17.6 cfm (50 Hz) 30 m ³ /h (60 Hz) 21.1 cfm (60 Hz)
• in vacuum mode	
– GROSS mode	8 l/s
– FINE mode	7 l/s
– ULTRA mode	2.5 l/s
Detectable masses	2, 3 and 4
Mass spectrometer	180° magnetic sector field
Ion source	2 filaments; Iridium/Yttria-oxide
Inlet port	DN 25 KF
Run-up time (after starting)	≤ 3 min

Notice To get down to the minimum detected leak rate range some conditions must be fulfilled:

- UL1000 and UL1000 Fab has fully warmed up
- Ambient conditions must be stable (temperature, no vibration/accelerations.)
- The part under test has been evacuated long enough (background is no longer decreasing)
- ZERO must be active

1.3.2.2 Electrical Data

Part no. 550 - 000, 550 - 100	230 V 50 Hz
Part no. 550 - 001, 550 - 101	115 V 60 Hz
Part no. 550 - 002	100 V 50/60 Hz
Power consumption	1100 VA
Type of protection	IP40
Power cords (EU, USA, UK)	3 m

1.3.2.3 Other Data

Valves	solenoid
Dimensions (L x W x H) incl. handle in mm	1068 x 525 x 850
Dimensions (L x W x H) incl. handle in inches	42 x 21 x 33
Weight in kg	110
Weight in lbs	242
Noise level dB (A)	< 70
Noise level dB (A) 0.5m distance	< 56
Audio alarm dB (A)	90
Contamination level (to IEC 60664-1)	2
Overvoltage category (to IEC 60664-1)	II

1.3.2.4 Ambient Conditions

For use within buildings	
Permissible ambient temperature (during operation)	+10 °C ... +40 °C
Permissible storage temperature	0 °C ... +60 °C
Max. rel. humidity	80% non condensing
Max. permissible height above sea level (during operation)	2000 m

1.4 Unpacking

Unpack the UL1000 and UL1000 Fab immediately after delivery, even if it will be installed later on.

Examine the shipping container for any external damage. Completely remove the packaging materials.

Check if the UL1000 and UL1000 Fab is complete (See Chapter 1.4.1) and carefully examine the leak detector visually.

If any damage is discovered, report it immediately to the forwarding agent and insurer. If the damaged part has to be replaced, please contact the orders department.

Notice Before starting up make sure that the transportation fixing is loosened. (Please refer to chapter 2.1)

Tip Retain the packaging materials in the event of complaints about damage.

Tip For unpacking please use the wedge which is part of the packaging.

1.4.1 Supplied Equipment

- Helium Leak Detector UL1000 or UL1000 Fab
- Exhaust hose adapter with clamps (see arrow 1)
- power cord fixture
- Set of fuses (see arrow 2)
- Set of tools (see arrow 7)
- Bellow Clips (2 + 2) (see arrow 5)
- Folder with documents
 - Technical Handbook UL1000 and UL1000 Fab
 - Spare Parts List UL1000 and UL1000 Fab
- hooks to wrap power cord (with screws) (see arrow 6)
- Tool to open the UL1000 and UL1000 Fab (see arrow 7)
- O-Ring with filter (for use at applications with particles)

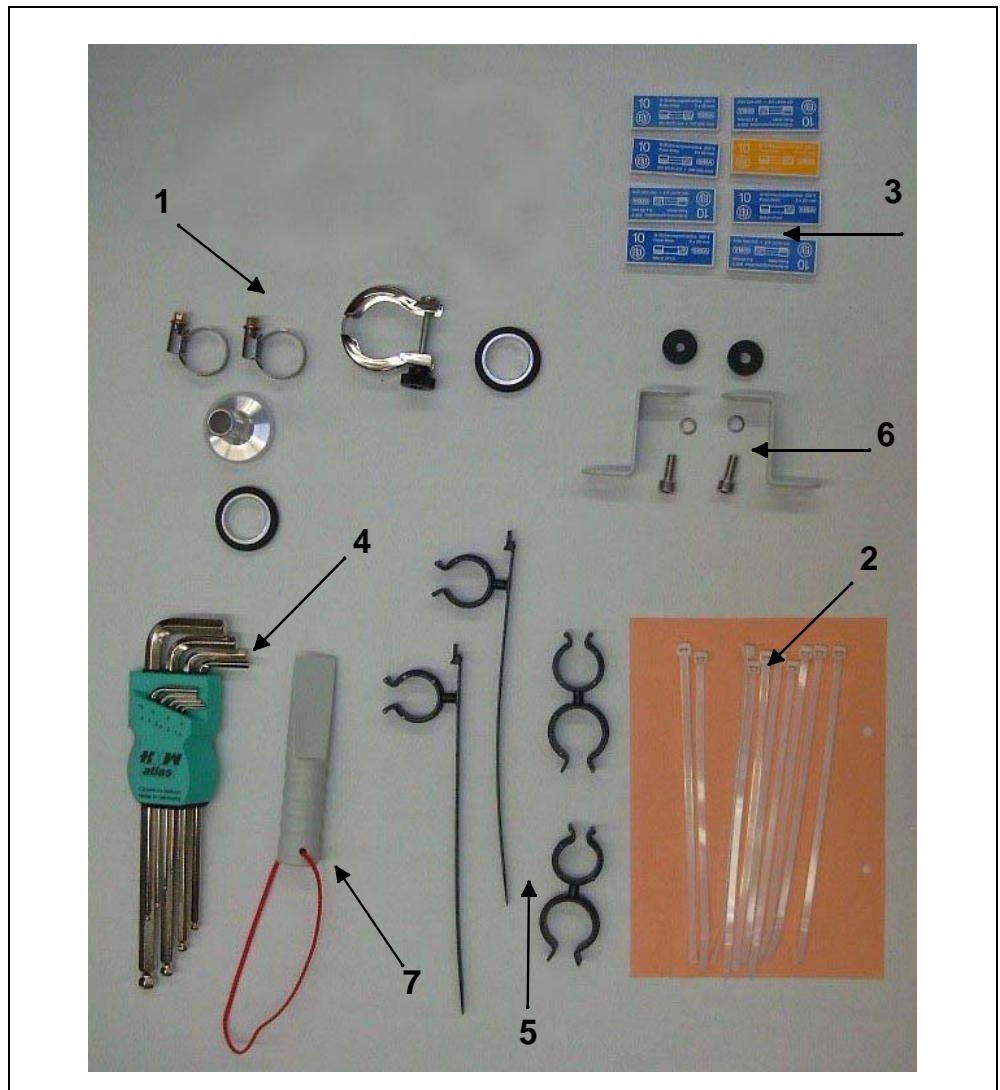


Fig. 1-2

1.4.2 Accessories and Options

The following parts can be ordered additionally:

- Sniffer Line SL200 14005
- Leak Ware 14090
- Helium Sniffer QUICK-TEST QT100 15594
- Tool Box (detachable) 551-000
- Helium Bottle Holder 551-001
- ESD Mat 551-002
- Hand Set Kit, consisting of
 - Hand Set 20099022
 - Cable (required), 4 m 20099027
 - Extension Cable, 10 m 14022

- | | |
|-------------------------------|----------|
| • Test chamber TC1000 | 551-005 |
| • spray gun with hose | 16555 |
| • set of plugs | 20099024 |
| • LeakWare (software package) | 14090 |

1.4.2.1 Sniffer line SL200

By use of the sniffer line the UL1000 and UL1000 Fab can easily be converted to a sniffer leak detector. The length of the sniffer line is 4m (i.e. 12 feet).

1.4.2.2 Toolbox

The toolbox is a detachable compartment with a lockable lid. Fittings and small fixtures can be stored plus the hand set (Please refer to Chapter 1.4.2.5). The storage volume is approximately 5 l.

The toolbox is placed on the working surface and jammed by the handle.

1.4.2.3 Helium Bottle Holder

The helium bottle holder allows you to carry a helium reservoir and a spray gun with the UL1000 and UL1000 Fab. Only small and midsize bottles (max 10 l, 200 bar) will fit without influencing the stability of the UL1000 and UL1000 Fab.

1.4.2.4 ESD Mat

This mat is put on the working surface of the UL1000 and UL1000 Fab and is clamped and grounded by the inlet port ring. It avoids electrical discharges between the working surface and sensitive test parts.

1.4.2.5 Hand set

The hand set is a remote control to operate the UL1000 and UL1000 Fab from distance up to 30 m. It provides the functions START, STOP/VENT, ZERO and speaker volume, and displays leak rate in bargraph.

The remote control is provided with a magnet. So it can be attached to metallic surfaces. When desposing you can stick the remote control to the side parts of the UL1000 and UL1000 Fab.


1.4.2.6 Test chamber TC1000


This test chamber turns the UL1000 / UL1000 Fab into a workstation to test hermetically sealed components.

testing according to MIL-STD 843 can be done easily, fast and accurate. The test starts automatically when the chamber lid is closed, test parameters like cycle time and rejectant level can be setted in the menu Auto Leak Test. The test cycle runs automatically, the test result is also displayed by red / green LEDs directly at the chamber.


2 Installation

2.1 Transportation


 **Caution**




The UL1000 and UL1000 Fab is not equipped with any crane eyes and must therefore not be transported using lifting equipment.

 **Caution**

The UL1000 and UL1000 Fab must only be pushed or pulled along using the handle provided for this purpose. Don't use the handle to lift.

 **Caution**



When transporting over longer distances the original packaging must be used. The castors must not be fixed when the UL1000 and UL1000 Fab is shipped in a crate.

UL1000 Fab with Triscroll TS 620

For transportation the chassis plate where the pump is mounted on has to be secured by a transportation fixing.

This transportation fixing consists of 2 screws at chassis of the UL1000 Fab (one on each side).

To get access to these screws remove the side covers of the UL1000 Fab.

There are orange labels on the bottom part pointing to the screws:



Fig. 2-1

For transportation fixing the screws are tightened to the chassis plate. For operation of the UL1000 Fab the screws should be loosened.

To loosen the screws first loosen the counter nut that is accessible from underneath:

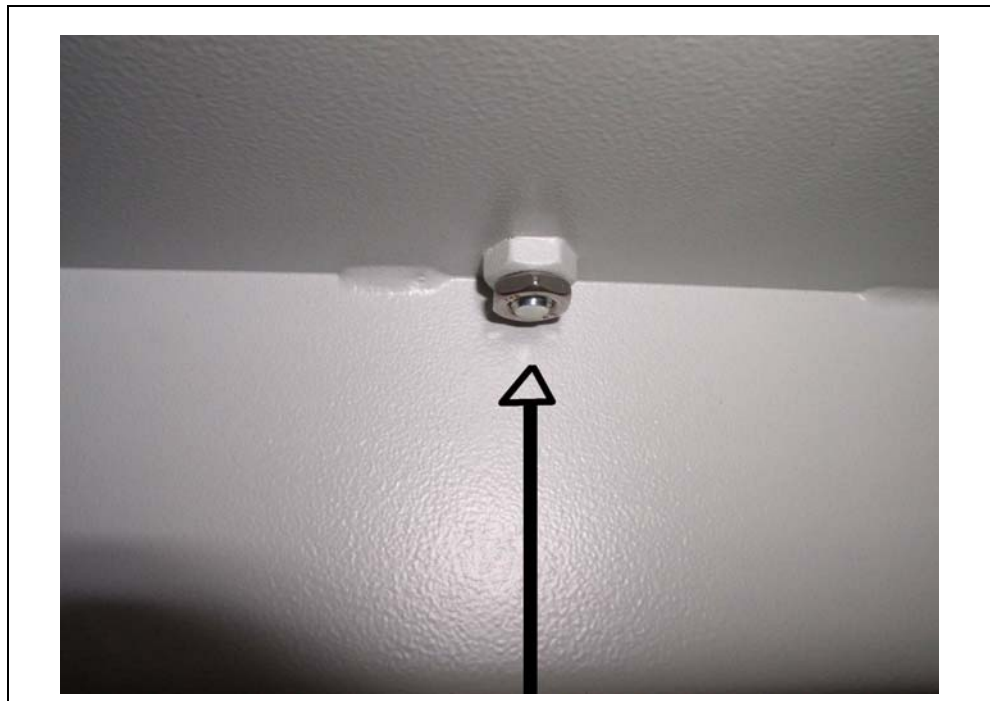


Fig. 2-2

Loosen the screws approximately 10 mm above the chassis plate and tighten then the counter nuts again:



Fig. 2-3

For transportation tighten the screws again and fix them by the counter nuts.

2.2 Working Location

Move the UL1000 and UL1000 Fab to the desired position and arrest the castors

Caution

Make sure that you can always reach the mains plug.

Warning



The UL1000 and UL1000 Fab must not be operated while standing in water or when exposed to drip water. The same applies to all other kinds of liquids.

Warning



Avoid contact with bases, acids or solvents as well as exposure to extreme climatic conditions.


Warning

The UL1000 and UL1000 Fab is designed for indoor use only.


Caution

Ensure a sufficient air cooling. The air inlet as well the air discharge openings must never be obstructed.


Caution

The UL1000 and UL1000 Fab can be locked by arresting the castors of the front wheels to avoid movements on skewness.

It is recommended that you check all major helium sources in the vicinity of the UL1000 and UL1000 Fab within a radius of about 10 m for the presence of any big leaks. You may use the sniffer probe for this.

2.3 Electrical Connections

2.3.1 Mains Power

Notice Generally the local regulations for electrical connections must be observed.


Warning



Before connecting the UL1000 and UL1000 Fab to the mains you must make sure that the mains voltage rating of the UL1000 and UL1000 Fab coincides with the locally available mains voltage. The instrument must exclusively be connected to a single phase supply with fuses for installation (Circuit breaker 16A max. according to IEC/EN 60898 with tripping characteristic B).

The mains voltage rating for the UL1000 and UL1000 Fab can be read off from the name plate beneath the mains socket [Fig. 2-3/7](#) at the back side. This voltage is fixed and can not be changed.

A separate fuse for each of the mains conductors has been integrated into the mains switch.

The mains voltage is applied to the instrument via the detachable mains cable which is supplied with the instrument. A mains socket [Fig. 2-3/7](#) is available for this purpose at the back side of the instrument.

STOP
Danger



Only 3-core mains cables having a protection ground conductor must be used. Operation of the UL1000 and UL1000 Fab where the ground conductor has been left unconnected is not permissible.

Notice The cable can be secured like shown in the following Figure.



Fig. 2-1 secure fixture power cord



Fig. 2-2 storing power cord

Notice If the machine is not operating the cable can be stored at the cable holders.

2.3.2 Connections for the Data Acquisition Systems

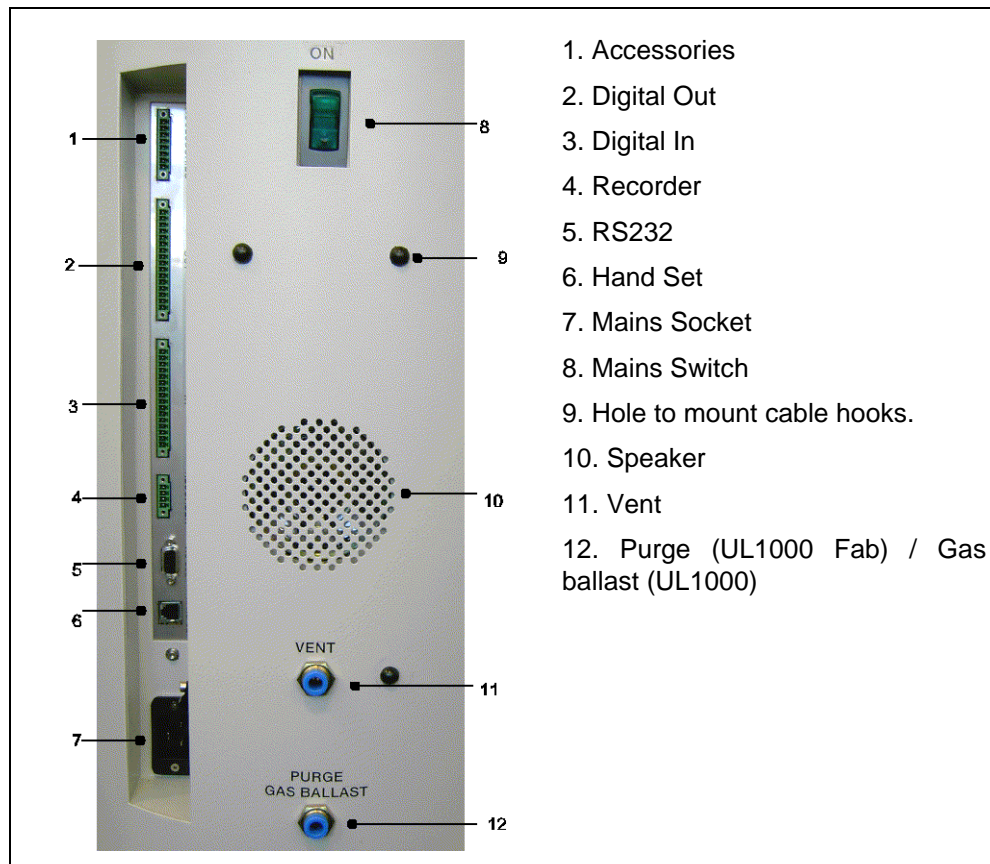


Fig. 2-3

Tip The sockets: Accessories, Digital Out, Digital In and Recorder have pin 1 on top. The pin numbers are counted downwards. The socket 2 and 3 are coded mechanically to avoid a confusion with the counter plug. For the connection with the counter plug (set of plugs 20099024) remove the plastic pins at the plug, accordingly the plug fits the socket.

Tip The connections for external devices are safely separated from the mains and safe low voltage.



Caution

The electronic of the device can be destroyed. So just connect devices to the leak detector that are separated from the mains.



Caution

Just connect devices that don't exceed 25V AC/Amp.

2.3.2.1 Accessories

The following accessories may be connected to the sniffer line SL200 (Please refer to Chapter Fig. 2-3/1) or the test chamber TC1000:

Contact pins 1 and 3 are fused with a 0.8 A slow-blow fuse. The amount of power which can be drawn is limited to 10 W. The contacts are numbered from top to bottom.

Pin	Assignment
1	+24 V, constantly applied, power supply for the sniffer line SL200.
2	GND24
3, 6	Input
4, 5, 7, 8	Output

2.3.2.2 Digital Out

The following relay outputs are available for further signal processing. The maximum rating for the relay contacts is 60V AC/1A.

Pin	Assignment
1	+24V, bridged with pin 1 of socket „Digital In“
2	GND_24V
3	Trigger 1
4	Trigger 2
5	Free
6	Zero active
7	Ready
8	CAL active
9	Cal request
10	Error
11	Warning
12	Purge
13	Measure
14	Recorder Strobe
15	Common dig. out
16	Free

Description of the operation mode of the Digital Out.

Trigger 1:

Is open in case Trigger Level 1 is exceeded or the machine is not in condition of measuring.

Trigger 2:

Is open in case Trigger Level 2 is exceeded or the machine is not in condition of measuring.

Zero active:

Is closed in case Zero function is running.

Ready:

Is closed in case machine is ready for measurement (Emission on, no error).

CAL active

Closed when machine is in calibrating routine.

CAL Request

Is open in case of calibration request. During external calibration a open output indicates that the external calibrated leak has to be closed.

Error

Open when an error is shown.

Warning

Open when a warning is shown.

Purge

Closed when purge is active.

Measure

Closed in case a machine is in measure mode.

Recorder Strobe

Closed in case recorder output is invalid. Only used when record output is set on „leak rate“.

2.3.2.3 Digital In

These inputs can be used to control the UL1000 and UL1000 Fab with a programmable logic control (PLC).

Pin	Assignment
1	+24V, bridged with pin 1 of socket „Digital Out“
2	GND_24V
3	Start
4	Stop
5	Zero
6	CAL
7	Clear
8	Purge
9	Free
10	Free
11	Common dig
12	Free
13	Free
14	Free
15	Free
16	Free

Description of operation mode of the Digital In.

Zero:

Change from low to high: activate zero
 Change from high to low: deactivate zero

Start:

Change from low to high: activate START

Stop:

Change from low to high: activate STOP

When this inlet is longer high than announced in chapter 6.6.1.2 then ventilate it additionally.

Purge:

Change from low to high: activate purge

Change from high to low: deactivate purge

Clear:

Change from low to high: confirm error message

CAL:

Change from low to high:

When machine is in stand-by mode: start internal calibration. In case machine is measurement mode: start external calibration. (Premise: external calibration test leak has to be open and leak rate signal is stable)

Change from high to low:

External calibration: approve that external test leak is closed and leak rate signal is stable.

High means: $U > 13 \text{ V}$ (approximately 7mA)

Low means: $U < 7 \text{ V}$

The level of the logic signals must not exceed 35V.

Notice Signals at these inputs are only accepted if the location of control is set to „PLC“ or „Local and PLC“. Refer to Chapter 6.6.4.1

2.3.2.4 Recorder

The recorder output see Fig. 2-3/4 may be used to log the leak rate, the inlet pressure and the forevacuum pressure.

The measured values are provided by way of an analogue signal in the range of 0 V ... 10 V. The resolution is limited to 10 mV. The instrument which is connected to the recorder output (e. g. X(t) chart recorder) should have an input resistance of no less than 2.5 k Ω . The measured values are available through pins 1 and 4. The reference potential (GND) is available at pins 2 and 3. The contacts are numbered from top to bottom.

Tip A diagram showing pressures and leakrate versus voltage is attached in the appendix.

Notice The chart recorder outputs are electrically isolated from other plugs. If, in spite of this, hum interference is apparent it is recommended to operate the UL1000 and UL1000 Fab and the chart recorder from the same mains phase. If this is not possible, you must make sure that the frame ground of both instruments is kept at the same potential.

Pin	Assignment
1	Analog 1
2	GND
3	GND
4	Analog 2

2.3.2.5 RS232

This RS232 C interface Fig. 2-3/5 is wired as data communication equipment (DCE) and permits the connection of a personal computer (PC) for monitoring and data logging. The connection is made through a 9 pin sub-D socket. For more information refer to the Interface Description.

Pin	Assignment
2	RXD
3	TXD
5	GND
7	RTS
8	CTS

2.3.2.6 Hand Set

This hand set interface [Fig. 2-3/6](#) is a serial interface to control the UL1000 and UL1000 Fab by the hand set. The hand set can be connected via an extension cable with a RJ45 plug. Refer to the Interface Description for more information. The hand set does not belong to the standard equipment.

Pin	Assignment
2	+24V (fuse 0.8 A time lag)
3	0 V
4	RXD (intern. RS232)
5	TXD (intern. RS232)

2.4 Vacuum Connections

2.4.1 Inlet Port

The inlet port is located on the top of the UL1000 and UL1000 Fab. The size of the flange is DN 25 KF.

A test object or a test chamber has to be connected to the inlet port if the vacuum mode is chosen (See [Chapter 6.3](#)).

The inlet port is also used for the connection of the sniffer line.

2.4.2 Exhaust

The exhaust [Fig. 2-3/12](#) flange is located underneath the UL1000 and UL1000 Fab at the back side. The size of the flange is DN 16 KF.

When shipped only the exhaust filter body is preassembled. The filter cartridge is supplied together with the leak detector and can be installed at the exhaust.

Instead of this an exhaust line can be connected to the exhaust by the exhaust adapter.



Warning

Depending on the chamber the UL1000 and UL1000 Fab is attached to and the gas inside the chamber lethal gases can be spoiled into the air through the exhaust.

2.4.3 Vent

Usually the parts under test are vented with ambient air when the test is finished. If it is required the parts can be vented with a different gas (i. e. fresh air, dry air, nitrogen, ...) at atmospheric pressure. In this case a vent hose has to be connected to the hose coupling [Fig. 2-3/10](#).

2.4.4 Purge-connection (UL1000 Fab) / Gas ballast (UL1000)

For purge modes it is recommended to use Helium-free gases at atmospheric pressure. Ambient air can be contaminated with Helium due to spraying or charging. In this case a gas supply line (i. e. nitrogen, fresh air, ...) should be connected to the hose coupling [Fig. 2-3/11](#). The pressure of these gas line must not exceed **1050** mbar.

The connector 10 and 11 in [Fig. 2-3](#) are quick connectors for hose diameters of 8/6 mm.

2.5 Default parameters

The following parameters are set like shown when in the menu of the UL1000 and UL1000 Fab under Settings → Parameters load/save, „load default values“ is chosen.

Auto-scaling:	On
Scaling	logarithmic
Display range:	4 decades
Time axis:	32 seconds
LCD invers:	OFF
Background in stand by mode:	OFF
Automatic calibration request:	OFF
Mass:	4 (helium)
Recorder Output:	leak rate
Volume:	2
Leak rate unit:	mbar l/s
Mode:	Vacuum
Trigger level 1:	1E-9 mbar l/s
Trigger level 2:	1E-8 mbar l/s
Leak rate external test leak (Vacuum):	1E-7 mbar l/s
Leak rate external test leak (Sniffer):	1E-5 mbar l/s
Vent delay:	2 seconds
Automatic purge:	OFF
Pressure unit:	mbar
Minimum volume:	0
Beep:	ON
Maximum evacuation time:	30 minutes
Audio Alarm Typ:	Trigger Alarm
Maximum inlet pressure when sniffing:	1 mbar
Minimum Inlet pressure when sniffing:	0,1 mbar
Number of decimal place at leak rate displayed:	1
Scroll display:	On
Particle protection:	Off
Direct access to calibration:	On
Contamination protection:	Off
Switch off limit for contamination protection:	1E-3 mbar l/s
Control location:	Local
Alarm delay:	30 seconds
Leak rate filter:	l•Cal
Zero:	enabled

3 *First Operation Check*

The steps for an initial operation are described in this chapter. It is explained how to switch on the UL1000 and UL1000 Fab, how to measure and how to carry out an internal calibration.

Notice If anything unexpected happens during the initial operation or the leak detector acts in a strange way the UL1000 and UL1000 Fab can be switched off by the mains switch at any time.

3.1 *Needed Equipment*

The following parts will be needed:

- A blind flange 25 KF (if not preassembled at the inlet port).
- A helium test leak with a DN 25 KF adapter (optional).

3.2 *Description of the Initial Operation*

Please proceed the following description step by step to start the initial operation. Refer to Chapter 5 [Operation of the UL1000 and UL1000 Fab](#) for a more detailed description.

3.2.1 *Start up and Measure*

- 1 Unpack the UL1000 and UL1000 Fab and inspect it for any external damage (Refer to Chapter 1.4 [Unpacking](#)).
- 2 Connect the instrument to the mains power (Refer to Chapter 2.3.1 [Mains Power](#)).
- 3 Switch on the leak detector by using the mains switch [Fig. 2-3/8](#).



Caution

Don't switch the UL1000 and UL1000 Fab on when ambient temperature is below 10°C.

After power on a welcoming picture appears on the screen of the control panel Fig. 3-1/1, then status information on the speed of the turbo pump, the foreline pressure, the emission and the active filament are given.

The start up procedure takes about 3 minutes and the end is indicated by a beep. The UL1000 and UL1000 Fab is in Stand-by mode now.



Fig. 3-1: Top view of the Standards

Pos.	Description	Pos.	Description
1	Control Panel	2	Inlet Port

- 4** Check if the inlet port Fig. 3-1/2 is blanked off. If not, please mount a blind flange with O-Ring on the inlet port.
- 5** Press the **START Button** Fig. 3-2/6. The inlet will be evacuated and the measured leak rate will be displayed a moment later.

This is the measurement mode. If a test part was connected you would start spraying Helium to identify leaks.



Fig. 3-2: Control Panel

Pos.	Description	Pos.	Description
1	LC Display	8	Soft Key no. 5
2	Soft Key no. 1	9	Soft Key no. 6
3	Soft Key no. 2	10	Soft Key no. 7
4	Soft Key no. 3	11	Soft Key no. 8
5	Soft Key no. 4	12	MENU Button
6	START Button	13	STOP Button
7	Control Panel	14	ZERO Button

- 6 To correct for any background signal (residual Helium in the part under test) you may press the **ZERO Button** Fig. 3-2/14. To undo ZERO please press the **ZERO Button** for 2 ... 3 seconds.
- 7 Press the **STOP Button** Fig. 3-2/13, the Standards will go to Stand-by. If you press STOP a few seconds the inlet of the Standards will be vented.
- 8 To finish the startup procedure please proceed with #16. For calibration proceed with #9.

3.2.2 Internal Calibration

- 9 Proceed the internal calibration (Please refer to Chapter 7.2.1 Internal Calibration). For better quantitative measurements please allow the unit to warm up (15 ... 20 minutes).
 - Press **Calibration** (Soft Key no. 5 Fig. 3-2/8) to get into the calibration menu.
 - Select *internal* (Soft Key no. 4 Fig. 3-2/5) to choose the internal calibration.
 - Select *automatic* (Soft Key no. 8 Fig. 3-2/11). The automatic procedure of the internal calibration is started and takes about 30 seconds.
- 10 Press the **STOP Button** Fig. 3-2/13 until the message *STAND-BY / VENTED* appears on the display. The inlet is vented now.

3.2.3 Verification

To verify the accuracy please proceed through the following steps. A test leak is required. If a test leak is not available please continue with #16.

- 11** Remove the blind flange from the inlet port and connect the open helium test leak to the inlet port.
- 12** Press the **START Button Fig. 3-2/6** again. The inlet will be evacuated and the leak rate of the test leak will be measured and displayed.
- 13** Press the **STOP Button Fig. 3-2/13** to interrupt the measurement. The Stand-by mode will be displayed.
- 14** Press the **STOP Button Fig. 3-2/13** again until the message *STAND-BY vented* appears on the display. The inlet is vented now.
- 15** Remove the helium test leak from the inlet port and put a blind flange onto the inlet port again.
- 16** Switch off the leakdetector by using the mains switch **Fig. 2-3/8**.

The first operation is finished.

4 *Description and Working Principle*

4.1 *Introduction*

The UL1000 and UL1000 Fab basically is a helium leak detector for vacuum applications, i.e. the part under test is evacuated while the test is performed. The vacuum is achieved with a pumping system that is part of the UL1000 and UL1000 Fab. In addition the vacuum can be generated by pumps which are set up in parallel to the leak detector.

Another operating mode of the UL1000 and UL1000 Fab is the Sniff mode which can only be used when a sniffer line (See Chapter [1.4.2 Accessories and Options](#)) is hooked up.

4.2 *Components of the UL1000 and UL1000 Fab*

The UL1000 and UL1000 Fab is a self-contained unit in a metal housing on wheels. This housing contains the entire vacuum system and the according power supplies. On top of the unit is the inlet port and the display.

4.2.1 Vacuum System

The vacuum diagram below shows the major components inside the UL1000 and UL1000 Fab:

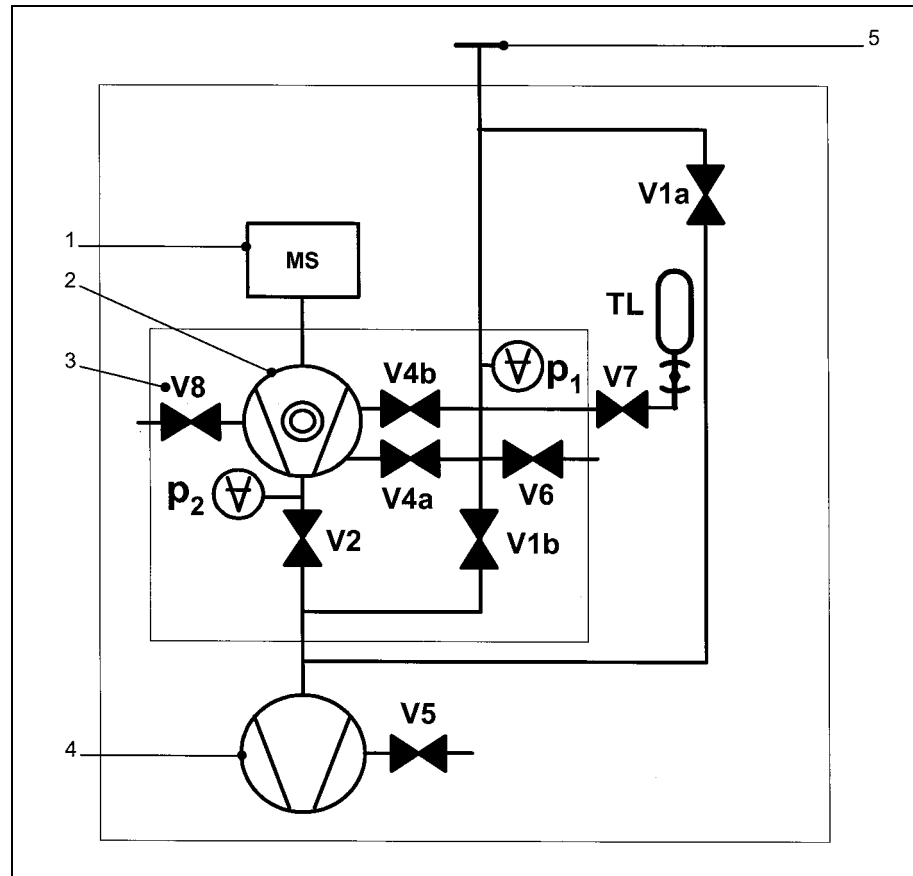


Fig. 4-1: Vacuum Diagramm UL1000 and UL1000 Fab

Pos. Description

- 1 MS: Mass Spectrometer, Helium sensor (180° magnetic field mass spectrometer)
- 2 Turbomolecular Pump (TMP, provides high vacuum conditions in the MS)
- 3 V1a ... V8: Electromagnetic Valves to control the gas flows
- 4 Scroll pump (provides the foreline pressure for the TMP und pumps down the parts under test)
- 5 Inlet Port

The mass spectrometer is mainly composed of the ion source, the magnetic separator and the ion collector.

Gas molecules getting into the mass spectrometer are ionized by the ion source. These positively charged particles are accelerated into the magnetic field following a circular path, the radius of which depends on the mass-to-charge ratio of the ions. Only helium ions can pass this filter and reach the ion collector where the stream of the ions is measured as a electrical current.

For operation the mass spectrometer requires a vacuum level in the range of 1×10^{-4} mbar and lower. This pressure is provided by the turbomolecular pump which in turn is backed up by a scroll pump.

Besides maintaining the pressure in the mass spectrometer the pump system is used to evacuate the test parts. It is made sure that the pressure in the mass spectrometer is low enough under all circumstances. The valves V1a, V1b, V2, V4a, V4b control the gas flows when measuring. Valves V5 (only UL1000), V6, and V8 are used to vent the system and the Turbo pump. Valve V7 opens and closes the internal test leak during calibration.

With the pressure in the test part being lower than ambient pressure sprayed helium can penetrate into the part in case of a leakage. As soon as the pressure conditions allow it one of the valves to the TMP opens. Now Helium can penetrate into the mass spectrometer contrary to the pumping direction of the TMP.

See Chapter 4.3 Working Modes for details.

4.2.2 Control Panel

The Control Panel Fig. 4-2/7 contains a liquid crystal display (LC Display), the *START*, *STOP*, *ZERO* and *MENU* buttons and also eight Soft Keys for the different menus and inputs.

The control panel itself is rotatable.



Fig. 4-2: Control Panel

Pos.	Description	Pos.	Description
1	LC Display	8	Soft Key no. 5
2	Soft Key no. 1	9	Soft Key no. 6
3	Soft Key no. 2	10	Soft Key no. 7
4	Soft Key no. 3	11	Soft Key no. 8
5	Soft Key no. 4	12	MENU Button
6	START Button	13	STOP Button
7	Control Panel	14	ZERO Button

4.2.2.1 LC Display

The **LC Display Fig. 4-2/1** is the communication interface to the operator. It displays the leak rates, the status report of the machine, messages, warnings and errors.

4.2.2.2 START Button

Pushing the **START Button Fig. 4-2/6** enables the UL1000 and UL1000 Fab to start the measure procedure. If the START button is pushed again in measurement mode, the maximum leak rate indicator („hold“ function) is activated. This indicator shows the maximum leak rate since „START“. By pressing the START-button again the „hold“ function will be started.

4.2.2.3 STOP Button

Pushing the **STOP Button Fig. 4-2/13** interrupts the measure procedure. If the button is pressed longer the inlet is vented according to the conditions defined in the menu **Vent delay**. Please refer to chapter **6.6.1.2 Vent delay** to select the time parameters of the venting.

4.2.2.4 ZERO Button

Pushing the **ZERO Button Fig. 4-2/14** enables the zero mode.

When pressing ZERO the currently measured leak rate is taken as a background signal and is subtracted from all further measurements. As a result the displayed leak rate then is

- 1×10^{-6} in *GROSS*
- 1×10^{-10} in *FINE*
- 1×10^{-12} in *ULTRA*

To reverse the ZERO function please keep the button pressed for about 3 seconds.

After pressing ZERO the decreasing background is fitted to the course automatically. So it is possible to recognize leaks even when the signal is decreasing rapidly.

Please also refer to the pictures below.

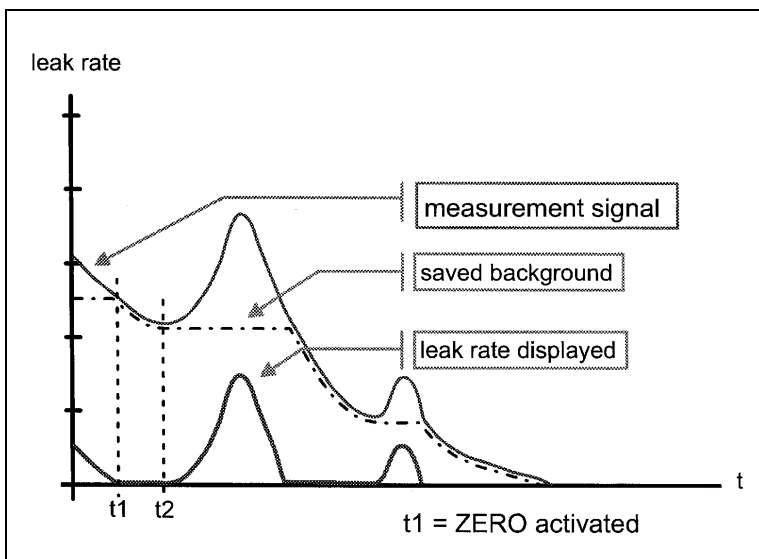


Fig. 4-3 decreasing background

When the measurement signal declines below the saved underground value the underground value will automatically be equated with the measurement signal. As soon as the measurement signal is increasing again the saved decreasing value remains constant. Increases of the signal are displayed clearly as a leak.

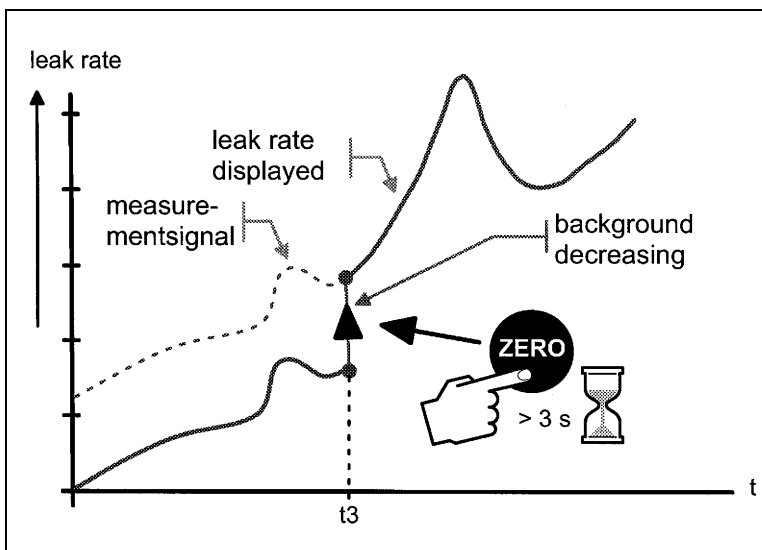


Fig. 4-4 undo ZERO

When you want to see the measurement signal (including underground) please press the ZERO button about 3 seconds. The saved value will be reset to zero. The underground signal will not be suppressed anymore.

Notice The ZERO functions can be selected to a special mode that allows to use it only when the signal of the falling background becomes stable (see Chapter 6.6.2.2).

4.2.2.5 MENU Button

This When pressing the MENU button (Fig. 4-2) the selecting menu is shown at the display. This function is not depending on the operating mode when calibrating.

If the menu is opened during the current session the operator will lead to the last screen before the menu was left.

Pushing the *MENU* button again leads back to the screen of the previous working mode. The software shows the last screen that was used before.

4.2.2.6 Soft Keys

The function of the eight Soft Keys Fig. 4-2/2 ... /5 and /8 ... /11 depends on the current menu. Only key 1 and 8 very often have the functions *Back/Cancel* (Softkey no. 1) and *OK* (Softkey no. 8.).

Special Functions

When inputs are allowed or when settings can be selected in a submenu two of the Soft Keys always have the same function:

- Soft Keys no. 1 Fig. 4-2/2 is *Cancel*.
It allows to escape from the submenu without any changes of the present settings and return to the previous menu page.
- Soft Keys no. 8 Fig. 4-2/11 is *OK*.
The selected settings or edited values will be stored and the previous menu page will be displayed again.

4.2.2.7 Numerical Entries

If you have opened a menu page where a number can be changed please proceed in the following way:

- If you don't want to change anything, press Soft Key no. 1 *Cancel*.
- The digit that can be changed is displayed inverted. With the arrows → (Soft Key no. 8) and ← (Soft Key no. 4) you can choose which digit you need to change.
- To change a digit to a specific number press the corresponding pair of numbers. A submenu opens and the desired number can be selected. The submenu closes automatically and the next digit of the total number now is inverted.
- Having reached the last digit all corrections have to be confirmed by *OK* (Soft Key no. 8).

Example

To change the trigger level 1.0×10^{-7} mbar l/s to 3×10^{-7} mbar l/s please press 2/3 (Soft Key no. 3) [Fig. 4-5](#).



Fig. 4-5: Numerical entry of the [Trigger Level 1](#)

In the submenu press 3 (Soft Key no. 4) [Fig. 4-6](#).

4.3 Working Modes

4.3.1 Vacuum Mode

As mentioned (Please refer to [Chapter 4.2.1 Vacuum System](#)) the sample has to be evacuated to allow Helium which is sprayed on the outside to enter through any leaks due to the pressure difference.

When pressing the [START Button](#) Valves V1a and V1b open and the sample is pumped down by the roughing pump (UL1000) or scroll pump (UL1000 Fab). At the same time valve V2 is closed to avoid an unacceptable pressure increase in the turbo pump and the mass spectrometer. With valve V2 being closed the turbomolecular pump is operated without being backed up by the scroll pump. Since the mass spectrometer is already under vacuum no further gas is pumped. Thus the pressure p_2 remains constant or increases only slowly.

If the pressure p_2 even though increases (e.g because of a very long pumping down process), then the evacuation will be broken (V1a and V1b closed) at $p_2 > 10$ mbar and V2 will open shortly to restore an appropriate foreline ($p_2 < 1$ mbar).

The following diagrams show the gas flow during evacuation and during the modes GROSS, FINE and ULTRA.

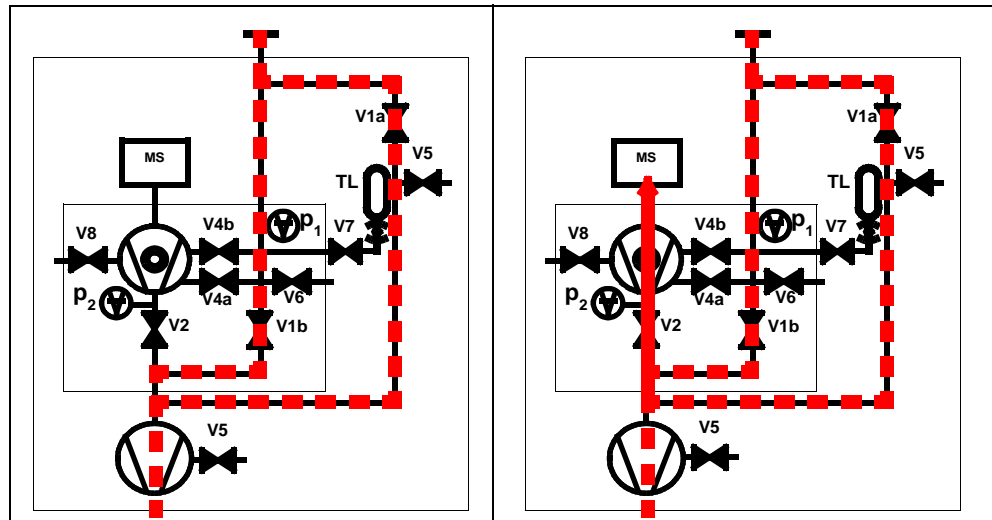


Fig. 4-6: left: Evacuation (no measurement), right: GROSS Mode

The condition for the evacuation process described is maintained until the inlet pressure p_1 has dropped below 15 mbar. Now valve V2 opens. Possibly present helium may now flow upstream against the pumping direction of the turbo molecular pump into the mass spectrometer where it is detected. This mode is called GROSS, the detection limit is 1×10^{-6} mbar l/s.

Since the scroll pump continues to evacuate the test sample the inlet pressure p_1 will continue to drop. Below 2 mbar the UL1000 and UL1000 Fab will switch to FINE mode, i.e. V4a will open and V1b will close. The gas stream enters the turbo pump at an intermediate level. The sensitivity of the system now is higher, the detection limit is 1×10^{-10} mbar l/s.

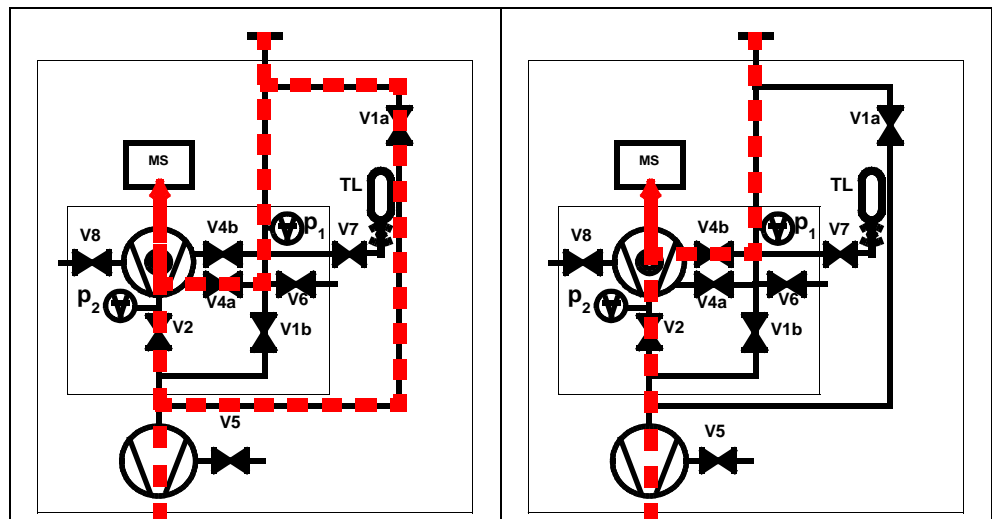


Fig. 4-7: left: FINE Mode, right: ULTRA Mode

Now the lower part of the turbo pump further evacuates the sample and after the pressure p_1 has reduced below 0.4 mbar the UL1000 and UL1000 Fab switches into ULTRA mode, i.e. V1a and V4a close and V4b opens. The entrance into the turbo pump is on a higher level now. The pumping speed at the inlet port is now 2.5 l/s, the detection limit is 5×10^{-12} mbar l/s.

Tip A special set up of the UL1000 and UL1000 Fab stops the autoranging procedure as described above. With the mode *FINE ONLY* (Please refer to Chapter 6.3 Mode) the unit will stay in FINE Mode Fig. 4-7 (left) regardless the inlet pressure. The valve V1a is closed.

4.3.2 Sniffer Mode

In sniff mode a sniffer line (preferably the INFICON standard sniffer line 14005) is connected to the inlet port. When pressing the **START Button** the system starts to pump air through the sniffer line. Due to the constant gas flow through the sniffer line the software will range directly into FINE mode and stay there. The inlet pressure will not drop further down. By measuring the inlet pressure the system software makes sure that the flow through the sniffer line is at the right level. Otherwise warning messages are generated. The detection limit in sniff mode is $<1 \times 10^{-7}$ mbar l/s.

INFICON's sniffersystem QT100 may also be used to sniff. Since the QT100 provides a lower inlet pressure it is recommended to keep the system in vacuum mode to avoid a wrong generation of pressure warnings. The machine factor has to be adjusted to value 400.

4.3.3 Auto Leak Test Mode

In this mode the test of hermetically sealed testing objects can be performed automatically. By use of the optional test chamber TC1000 this test mode starts automatically when closing the chamber lid. Fast test results within seconds are achieved by using the internal test leak of the UL1000 or UL1000 Fab for a dynamic calibration, matched to the required test cycle. Leak rates in the 10^{-9} mbar l/s range can be detected within 5 seconds.

5 Operation of the UL1000 and UL1000 Fab

The UL1000 and UL1000 Fab is switched on by pushing the mains switch (Please refer to Chapter [3.2.1 Start up and Measure](#)). After about 3 min the run-up procedure is finished; the unit is in Stand-by-mode and ready to measure.

Please connect the part to be tested to the inlet port and press *START*. The UL1000 and UL1000 Fab starts to evacuate the part. The evacuation time depends on the volume of the test part. During evacuation the screen shows the inlet pressure online.

Once the pressure of 15 mbar (11 Torr or 1500 Pa) is reached the unit switches to measurement mode. The corresponding leak rate is displayed. For further explanations of the screen please refer to [Fig. 5-1](#).

The displayed leak rate corresponds to the helium background concentration in the part under test. Since the UL1000 and UL1000 Fab continues to pump down the part this background leak rate will further reduce. As soon as the leak rate is low enough in respect to your requirements you may start spraying Helium to search for possible leaks.

When you are finished please press *STOP* and hold the button a few seconds to vent the part under test.

5.1 Display

The display is used to either show leak rate signals or program specific set-ups and get information by means of the software menu (Please refer to Chapter [6 Description of the Menu](#)). In addition messages and maintenance instructions are displayed on the screen (Please refer to Chapter [8 Error And Warning Messages](#)).

5.2 The Screen in Run-Up Mode

In run-up mode the display shows:

- Speed of the number of revolutions
- Foreline pressure
- State of emission
- Active filament
- A bar graph which shows the run-up progress

Notice If the display is too bright or too dark you can change the contrast. Please see Chapter [6.2.4](#). During run-up phase the menu button can be pushed (see Chapter [4.2.2.5](#)) to get to the selection menu.

5.3 Display in stand-by mode

In stand by mode the states are shown in the lower edge of the display (see Chapter 5.4.3). Furthermore calibration (Please refer to Chapter 7) can also be started in stand by mode and purging, too (see Chapter 5.3.1)

5.3.1 Purging

Every time when the UL1000 Fab changes into stand by mode it can start purging automatically after 20 seconds. During this purging the scroll pump is flushed through purge connection (See Fig. 2-3/11).

When the machine is in stand by mode this operation also can be activated manually (Key 7). By pressing the key again the purging will be discontinued. By pressing START the activity will be discontinued, too.

5.4 The Screen in Measurement Mode

In measurement mode the leak rates can be displayed in two different modes:

- Numerically, combined with a bargraph Fig. 5-1
- Trend mode (leak rate versus time) Fig. 5-2

In the lower right corner of the display (next to the Soft Key no. 8) you will find a symbol that allows to switch between the display modes by pressing Soft Key no. 8. Please refer to chapters 5.4.4 Numerical Display Mode and 5.4.5 Trend Mode for explanations of the different display modes.

Access to calibration (Soft Key no. 5) and access to the speaker volume (Soft Keys no. 2 and no. 3) is the same in all modes. Also the status icons in the bottom line are in common in all display modes.

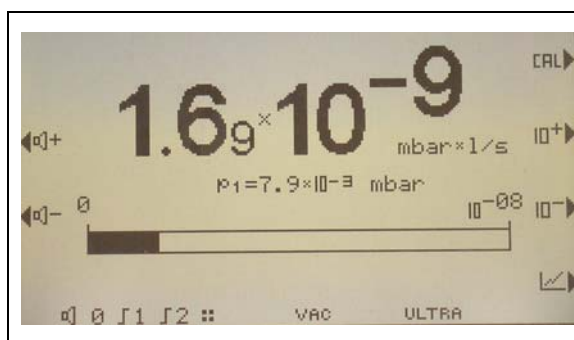


Fig. 5-1: Display, measurement mode

5.4.1 Call for Calibration

In all modes the Soft Key no. 5 is used to get to the calibration routine. Refer to Chapter 7 Calibration for further information regarding calibration.



5.4.2 Speaker Volume

On the left hand side two loud speaker symbols are shown, combined with the signs + and -. By pressing the corresponding softkeys (Soft Keys no. 2 and no. 3) the volume can be adjusted for convenient loudness. In the bottom line of the display another loud speaker symbol is shown, combined with a number. This number indicates the level of the current loudness (ranges from 0 to 15).

Refer to Chapter [6.4.3 Volume](#) for information on loudness, alarms, and sound tracks.

5.4.3 Status Line in the Display

The status line at the bottom of the display informs about (reading from left to right):

Symbol of display	Meaning	Explanation
	<ul style="list-style-type: none"> Volume level 	Please refer to Chapter 5.4.2 Speaker Volume .
S1	<ul style="list-style-type: none"> Trigger 1 	If the trigger values are exceeded these signs are inverted. (White on black background.)
S2	<ul style="list-style-type: none"> Trigger 2 	see: Trigger 1
••	<ul style="list-style-type: none"> Detected mass 	Number of dots indicates the mass number (4 dots = Helium, 2 dots = Hydrogen)
	<ul style="list-style-type: none"> Warning triangle 	Please refer to Chapter 8.1
VAC	<ul style="list-style-type: none"> Working mode 	VAC or <i>SNIFF</i> indicate which working mode was selected (Please refer to Chapter 6.3 Mode).
ULTRA	<ul style="list-style-type: none"> Vacuum area 	Depending on the inlet pressure the UL1000 and UL1000 Fab may be in GROSS, FINE or ULTRA, which is indicated here (Chapter 4.3 Working Modes)
ZERO	<ul style="list-style-type: none"> ZERO 	Indicates if ZERO-function is active.
COR	<ul style="list-style-type: none"> corrected leak rate 	Indicates if the leak rate is displayed as air equivalent.
Auto Leak Test	<ul style="list-style-type: none"> Auto Leak Test 	Indicates if this mode is active

5.4.4 Numerical Display Mode

The display shows the leak rate in big digital figures, see [Fig. 5-1](#). The unit of the leak rate is shown, too. Underneath the leak rate the inlet pressure is displayed in smaller digits. The units of leak rate and pressure can be defined in the menu (See Chapter [6.4.4 Units](#)).

Below this the same leak rate is shown graphically as a bar. The scale of this bar, i.e. the number of decades included in this bar can be defined in the menu (Please refer to Chapter 6.2.2 [Display-range auto/manual](#)). The programmed trigger levels (Please refer to Chapters 6.4.1 and 6.4.2) are indicated at the bar by short vertical lines: a straight line for trigger 1 and a dotted line for trigger 2.

In addition the inlet pressure is displayed in smaller figures above the bargraph.

5.4.5 Trend Mode

In trend mode the leak rates are displayed over time [Fig. 5-2](#). In addition the actual leak rate and inlet pressure also are displayed digitally. The time axis can be defined in the menu (Please refer to Chapter 6.2.3 [Time axis](#)). The intensity axis (y-axis) is defined the same way as the bargraph (Please refer to Chapter 6.2.1 [Scale linear/ logarithmic ff](#)).



Fig. 5-2: Display, trend mode

6 Description of the Menu

By pressing the MENU push button [Fig. 6-1](#) the main menu will be displayed regardless of the current working mode.



Fig. 6-1: The [Main Menu](#)

The main menu [Fig. 6-1](#) leads the operator to several submenus described in the following chapters.

The next page gives an overview of the entire menu architecture [Fig. 6-2](#).

1. Level	2. Level	3. Level	
Main Menu	View (See 6.2)	Scale linear/logarithmic	
		Display-range auto/manual	
		Time axis	
		Contrast	
		Background in Stand-by	
		Decimal places	
		Lower display limit	
	Mode (See 6.3)	Sniff/Vacuum / Auto Leak Test	
	Trigger & Alarms (See 6.4)	Trigger Level 1	
		Trigger Level 2	
		Volume	
		Units	
		Alarm delay	
		Audio alarm type	
	Calibration (See 6.5)	internal	manual automatic
		external	Edit leakrate
			Start
	Settings (See 6.6)	Vacuum settings	Automatic purge (UL1000 Fab only)
			Vent delay
			Vacuum ranges
			Leak rate internal test leak
			Machine factor
			Background Suppression
		Zero	
		Zero & Background	
		Mass	
		Interfaces	Control Location
			RS232 Protocol
			Scaling Recorder Output
			Recorder output
		Miscellaneous	Time&Date
Language			
Leak rate filter			
Mains Frequency			
Service interval exhaust filter			
Service message exhaust filter			
Parameter save / load		Load parameter set	
		Save parameter set 1	
Monitoring functions		Calibration request	
		Particle protection	
	Contamination protection		
	Pressure limits for vacuum ranges		
	Pressure limits for sniff mode		
	Maximum evacuation time		
Information (See 6.7)	View settings		
	View internal data		
	Vacuum diagram		
	View error list		
	Calibration history		
	Calibration factors		
	Service		
Access Control (See 6.8)	Access to CAL function		
	Change Device PIN		
	Change Menu-PIN		

Fig. 6-2: Menu structure overview

6.1 Main Menu

The main menu shows 7 sub-menus. In these sub-menus groups of technical features are put together logically. From here the next levels of the menu tree can be reached.

Tip All following chapters show the path to get to the described menu line right underneath the headline. This path is indicated by a dot (•).

Key No.	Name	Description
1	Back	Return to the previous screen.
2	View	Display settings like scaling, contrast, system background. Please refer to Chapter 6.2.
3	Mode	Selection of different working modes like Vacuum, Sniff Please refer to Chapter 6.3.
4	Trigger & Alarms	Settings of units, trigger levels and alarms. Please refer to Chapter 6.4.
5	Calibration	Calibration of the UL1000 and UL1000 Fab. Please refer to Chapter 6.5.
6	Settings	Settings of internal machine parameters. Please refer to Chapter 6.6.
7	Information	Information on the UL1000 and UL1000 Fab (electrical and vacuum data) and service menu. Please refer to Chapter 6.7.
8	Access Control	Access restrictions. Please refer to Chapter 6.8.

6.2 View

- [Main Menu > View](#)

In this menu [Fig. 6-3](#) all features that influence the way data are displayed are put together.



Fig. 6-3: The [View](#) Menu

Key No.	Name	Description
1	Back	Return to the main menu.
2	Scale linear/logarithmic	Settings for bargraph and trend mode. Please refer to Chapter 6.2.1.
3	Display-range auto/manual	Manual or automatic scaling. Please refer to Chapter 6.2.2
4	Time axis	Time axis in trend. Please refer to Chapter 6.2.3
5	Contrast	Display contrast. Please refer to Chapter 6.2.4
6	Background in Stand-by	Background displayed or not. Please refer to Chapter 6.2.5
7	Decimal places	Number of decimal places. Please refer to Chapter 6.2.6
8	Lower display limit	Choice of electrical filters. Please refer to Chapter 6.6.2

6.2.1 Scale linear/logarithmic

- [Main Menu](#) > [View](#) > [Scale linear/logarithmic](#)

These settings apply to the bargraph (= bar underneath the digital figures in the measurement mode) and Y-axis in the trend mode.

The scale of the bargraph can either be linear or logarithmic. With the arrows (up and down) it can be determined how many decades the bargraph covers.

Usually a logarithmic scale is recommended because leak rates may change easily over several decades.

Softkey 2: Linear

Pressing this key switches the display to a linear scale, starting at zero.

Softkey 3: Arrow down (Number of decades)

Pressing this key reduces the number of displayed decades. The minimum value is 2 decades. Only available if *log* (softkey 6) was chosen.

Softkey 6: Logarithmic

The scaling will be displayed logarithmically.

Softkey 7: Arrow up (Number of decades)

Increase the number of displayed decades. Maximum value is 9 decades. Only available if *log* (softkey 6) was chosen.

6.2.2 Display-range auto/manual

- [Main Menu](#) > [View](#) > [Display-range auto/manual](#)

The upper limit of the displayed leak rate range can be set manually or automatically. These settings apply to the bargraph (=bar underneath the digital figures in the measurement mode and y-axis in the trend mode).

With the upper limit defined here the lower limit is set to a value based on the number of decades (See Chapter [6.2.1 Scale linear/logarithmic](#)).

Softkey 2: Manual

The upper limit of the displayed range can be set manually.

Softkey 3: Arrow down

.Decrease the upper limit if *manual* is chosen. The minimum value is 10^{-11} mbar l/s.

Softkey 6: Automatic

The limit of the displayed range will be chosen automatically.

Softkey 7: Arrow up

Increase the upper limit if *manual* is chosen. The maximum value is 10^{+3} mbar l/s.

Softkey 8:

Save the settings and return to the previous menu.

If linear scale is selected, the lower limit is always zero. The upper limit is only a default value. You can change this on the measurement screen with the Soft Key 6 and 7 if you have chosen manual display ranging.

6.2.3 Time axis

- [Main Menu](#) > [View](#) > [Time axis](#)

The length of the time axis in trend mode can be changed in steps of 16 ... 960 s.

Softkey 3: Arrow down

Decrease the length of the time axis. The minimum time value is 16 seconds.

The time slice is extended during the measurement mode. (Up to max. 960 s) It is displayed automatically during the AUTO mode.

Softkey 5: ?

Help

Softkey 7: Arrow up

Increase the length of the time axis. The maximum adjustable value is 960 seconds.

6.2.4 Contrast

- [Main Menu](#) > [View](#) > [Contrast](#)

The contrast of the display can be changed. The changes are applied synchronously. The recommended value under regular conditions is 50 (or close to it).

Tip If by accident the display has been set too bright or too dark so that it can not be read off, this may be changed as follows:
Switch off the UL1000 and UL1000 Fab and turn it on again. During the run-up phase press the key no. 3 or 7 so long until the display can be read properly again. This setting is saved to the EPROM only after confirming this through the contrast menu. If this setting is not confirmed, the former setting will be applied after switching on the instrument on again.

Softkey 3: Arrow down

Fade the contrast to dark. The minimum values is 0.

Softkey 4: Invert display

Invert the contrast of the screen.

Softkey 5: ?

Help

Softkey 7: Arrow up

Fade the contrast to light. The maximum value is 99.

6.2.5 Background in Stand-by

- [Main Menu](#) > [View](#) > [Background in Stand-by](#)

The internal background leak rate can be displayed in Stand-by mode (ON) or not (OFF). The default setting is OFF.

Softkey 3: Off

The background leak rate will not be shown.

Softkey 5: ?

Help

Softkey 7: ON

The background leak rate will be shown.

The internal background is generated by residual gas (e. g. helium) that has not been pumped away yet. Sources for residual gas are air or absorbed gases from the inner surfaces of the leak detector. This internal background will never disappear totally. Very clean systems which have been pumped for a long time will show a background in the 10^{-11} mbar l/s range. Under normal conditions the background level is in the 10^{-10} mbar l/s or low 10^{-9} mbar l/s range.

When pressing START the current internal background is subtracted from all further measured signals automatically. Thus it is made sure that only the net leak rate from the part under test is measured.

When switched to Stand-by / Vent again a new internal background is calculated after 25 s. The updated value is underlined. This means that if you press START when the value is underlined, the actual background signal will be subtracted. If you press START when the value is not underlined, the old background signal from the last Stand-by will be subtracted.

6.2.6 Decimal places

- [Main Menu](#) > [View](#) > [Decimal places](#)

The number of the decimal places of the displayed leak rate can be chosen. The default setting is 1.

Softkey 3: 1

The leak rate will be displayed with one decimal place.

Softkey 7: 2

The leak rate will be displayed with two decimal places.

Two decimals are especially useful, when the I•CAL leak rate filter (Please refer to Chapter [6.6.5.3](#)) is used.

6.2.7 Lower display limit

- [Main Menu](#) > [View](#) > [Lower display limit](#)

This parameter defines the lower leak rate limit in the measurement ranges. This is valid for vacuum modes only.

Softkey 3, 7:

Changing of the lower detection limit between 1×10^{-5} and 1×10^{-12}

Softkey 5: ?

Help

6.3 Mode

- [Main Menu > Mode](#)

The mode menu [Fig. 6-4](#) enables the submenu to select the different working modes.

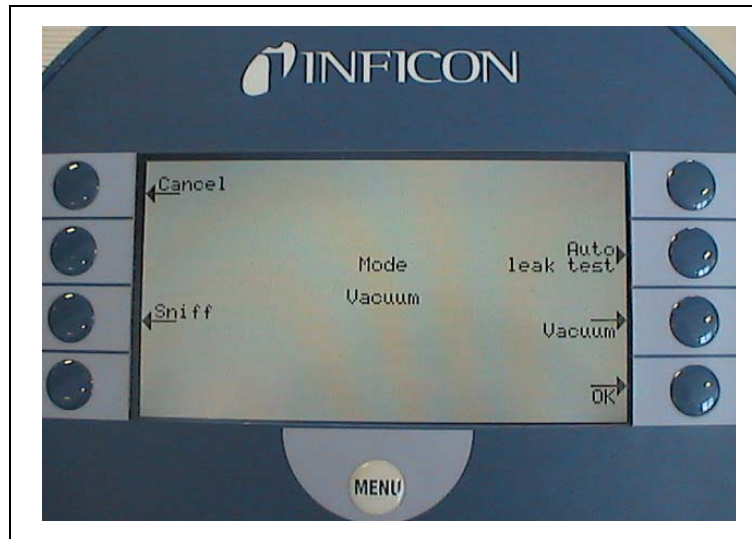


Fig. 6-4: The [Mode](#) Menu

Key No.	Name	Description
1	Cancel	Return to the main menu without any changes of the present settings.
3	Sniff	The normal vacuum mode will be used. See Chapter 4.3.2 , sniffer mode.
4		Not used in this menu.
5	Auto Leak Test	See Chapter 4.3.3 .
7	Vacuum	The normal vacuum mode is in use
8	OK	Save the settings and return to the previous menu.

6.3.1 Auto Leak Test

- Menu > Mode > Auto leak test

After selecting the Auto leak test mode this message pops up:



Fig. 6-5

By pressing OK button the settings menu is called (see 6.6.1.6)

Notice If the UL1000 requests a calibration due to the mode change a calibration message will come up.

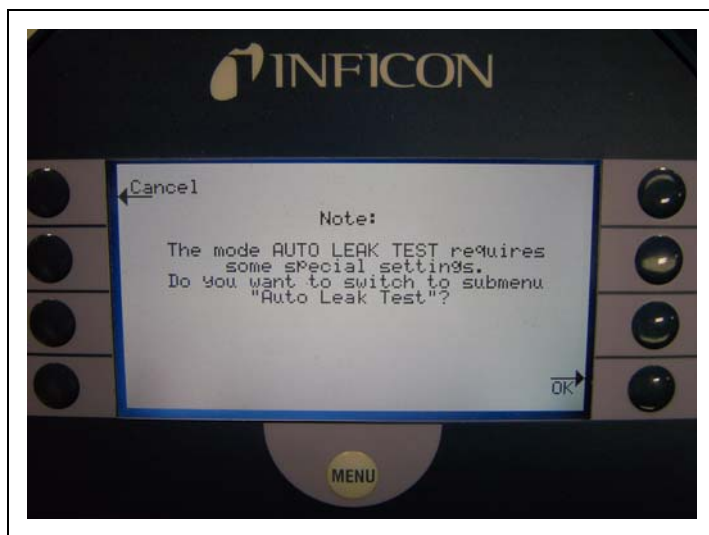


Fig. 6-6

After the settings the display screen shows in STAND-BY this picture:

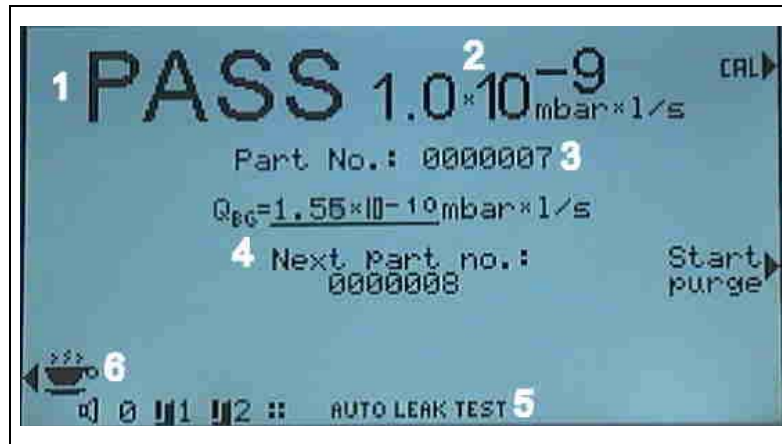


Fig. 6-7

- | | | | |
|---|---------------------|---|------------|
| 1 | Test result | 4 | Background |
| 2 | Measured leak rate | 5 | Mode |
| 3 | No. of tested parts | 6 | Standby |

Test of parts

The test can be started by START button. When using the test chamber TC1000, the test starts automatically when closing the chamber lid. After the setted cycle time the test stops and the chamber will be vented. The test can be stopped any time by STOP button.

After starting, the test procedure runs according to the setted measurement period:

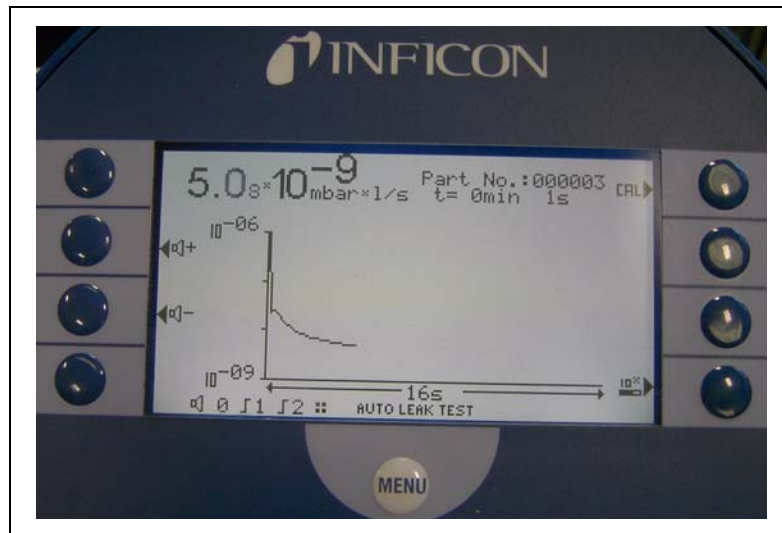


Fig. 6-8

Remaining measurement time

Shut down

When the test chamber should remain under vacuum after switching off the UL1000 or UL1000 Fab, push the button (cup of coffee), follow the instruction on the display and switch off the leak detector.

This function can also be used when a test of parts should be interrupted due to a brake. You can start the measurement cycle again by pushing the button RESTART.

6.4 Trigger & Alarms

- [Main Menu > Trigger & Alarms](#)

The trigger levels, the volume of the loudspeaker and the units of leak rates and pressures can be set in this menu [Fig. 6-9](#).

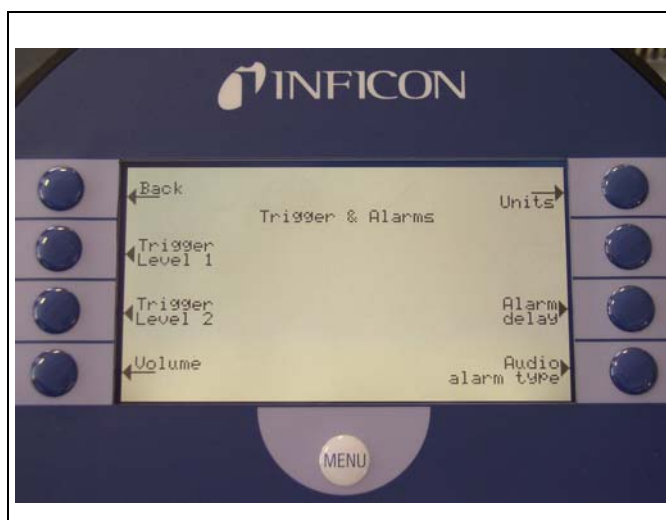


Fig. 6-9: The [Trigger & Alarms](#) Menu

Key No.	Name	Description
1	Back	Return to the main menu.
2	Trigger Level 1	Definition of Trigger level 1. See chapter 6.4.1
3	Trigger Level 2	Definition of Trigger level 2. See chapter 6.4.2
4	Volume	See chapter 6.4.3
5	Units	Selection of leak rate and pressure units. See chapter 6.4.4
6		Not used in this menu.
7	Alarm delay	See chapter 6.4.5
8	Audio alarm type	Choice of different alarm types. See chapter 6.4.6

6.4.1 Trigger Level 1

- [Main Menu > Trigger & Alarms > Trigger Level 1](#)

The value of the first trigger level can be set. See Chapter [4.2.2.7 Numerical Entries](#) for the description of the entry.

Trigger 1 and Trigger 2 are programmable switching thresholds. When these thresholds will be exceeded the UL1000 and UL1000 Fab reacts as follows:

Display

In the status line of the display the signs for Trigger 1 and Trigger 2 are displayed inverted if the leak rate exceeds (becomes higher than) the programmed value.

Relay Output

The trigger-relais of the digital out switches. Please refer to Chapter 2.3.2.2, Digital out, for further details.

Alarm/Loudspeaker

Additionally Trigger level 1 defines at which level the various alarm types react (See Chapter 6.4.6, [Audio alarm type](#))

6.4.2 Trigger Level 2

- [Main Menu > Trigger & Alarms > Trigger Level 2](#)

The value of the second trigger level can be set. Please refer to Chapter 4.2.2.7 [Numerical Entries](#) for the description of the entry.

If Trigger 2 is exceeded the corresponding relay will switch. This is also indicated at the display (see above).

6.4.3 Volume

- [Main Menu > Trigger & Alarms > Volume](#)

The minimum loudness and the regular volume of the loudspeaker can be adjusted.

The minimum loudness is the minimum speaker volume that cannot be exceeded to even lower values. Thus it is avoided that the actual volume is accidentally adjusted to a value that is below the noise level of the environment.

The actual volume can be adjusted between 15 (maximum) and the value defined as minimum loudness.

Softkey 2: Arrow down

Decrease the minimum loudness. The minimum value is 0.

Softkey 3: Arrow down

Decrease the actual volume. The minimum value is limited by the minimum volume.

Softkey 4: Beep off / Beep on

Softkey 5: ?

Help

Softkey 6: Arrow up

Increase the minimum volume. The maximum value is 15.

Softkey 7: Arrow up

Increase the regular volume. The maximum value is 15.

6.4.4 Units

- [Main Menu](#) > [Trigger & Alarms](#) > [Units](#)

The preferred leak rate unit can be selected. There is the choice of 4 (mbar, Pa, Torr, atm) pressure units and 5 leak rate units (mbar l/s, Pa m³/s-1, Torr l/s, atm cc/s).

Notice In Sniff mode the following measuring units are selectable (Refer to chapter [6.3](#)): ppm, g/a eq (helium leak rate is equivalent with leak rate R134a), oz/gr eq (helium leak rate is equivalent with leak rate R134a).

Softkey 2: Arrow up

Scroll up to select a pressure unit.

Softkey 3: Arrow down

Scroll down to select a pressure unit.

Softkey 6: Arrow up

Scroll up to select a leak rate unit.

Softkey 7: Arrow down

Scroll down to select a leak rate unit.

6.4.5 Alarm delay

- [Main Menu > Trigger & Alarms > Alarm delay](#)

In some applications (for instance during pump down in a „chamber test system“) it might be necessary to block an alarm for some time after pressing START.

This delay time of the alarm can be changed.

Softkey 3: Arrow down

Decrease the delay time. The minimum value is 0 seconds.

Softkey 7: Arrow up

Increase the delay time. The maximum value is 10 minutes up to infinity.

After pressing START the loudspeaker is activated as soon as the leak rate drops below trigger level 1 or after the entered alarm delay time has elapsed. This setting is only active for the audio alarm types SETPOINT and TRIGGER ALARM (See Chapter 6.4.6).

6.4.6 Audio alarm type

- [Main Menu > Trigger & Alarms > Audio alarm type](#)

The trigger of the audio alarm can be switched on or off.

Softkey 2: [Pinpoint](#)

Use this function to localize a leak with a well-known size. Please refer to Chapter 6.4.6.1

Softkey 3: [Leak rate prop.](#)

The sound will be proportional to the leak rate signal. Please refer to Chapter 6.4.6.2

Softkey 5: ?

Help

Softkey 6: [Setpoint](#)

Please refer to Chapter 6.4.6.3

Softkey 7: [Trigger alarm](#)

An alarm sounds when the trigger 1 is exceeded. Please refer to Chapter 6.4.6.4

6.4.6.1 Pinpoint

The tone of the acoustical signal changes its frequency only in a LR-window [Fig. 6-10](#) which ranges from one decade below the Trigger level 1 up to one decade above the Trigger level 1. Below the window the tone is constantly low, above the window it is constantly high.

Example: The Trigger level 1 is 4×10^{-7} mbar l/s. So the window where the tone changes reaches from 4×10^{-8} mbar l/s up to 4×10^{-6} mbar l/s.

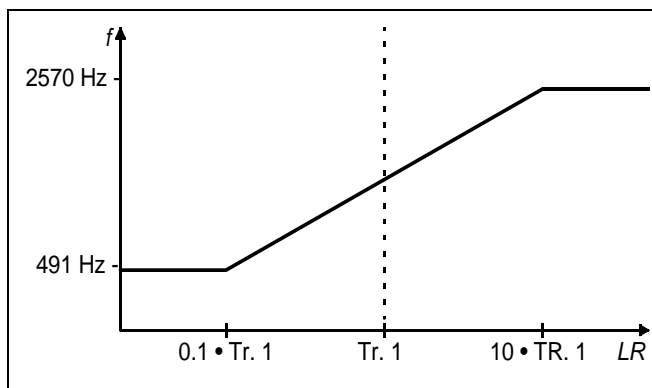


Fig. 6-10: Pinpoint

6.4.6.2 Leak rate prop.

The frequency of the acoustic output is proportional to the reading on the bargraph display. The frequency ranges from 300 Hz to 3300 Hz. Please refer to Chapter 6.2.1 Scale linear/logarithmic for the definition of the number of decades.

6.4.6.3 Setpoint

The tone is off as long as the leak rate is below the Trigger level 1. Above Trigger 1 the tone varies proportional to the leak rate Fig. 6-11.

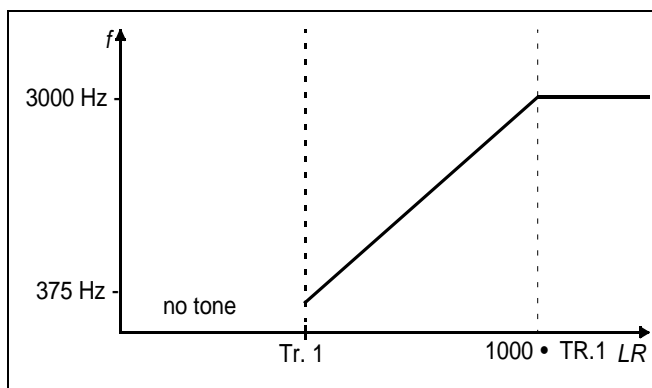


Fig. 6-11: Setpoint

6.4.6.4 Trigger alarm

As soon as the leak rate increases above trigger level 1, a multi-tone signal is generated. The tone does not vary with the leak rate.

6.5 Calibration

- [Main Menu > Calibration](#)

Please refer to Chapter [7 Calibration](#) for a detailed description of the calibration [Fig. 6-12](#).

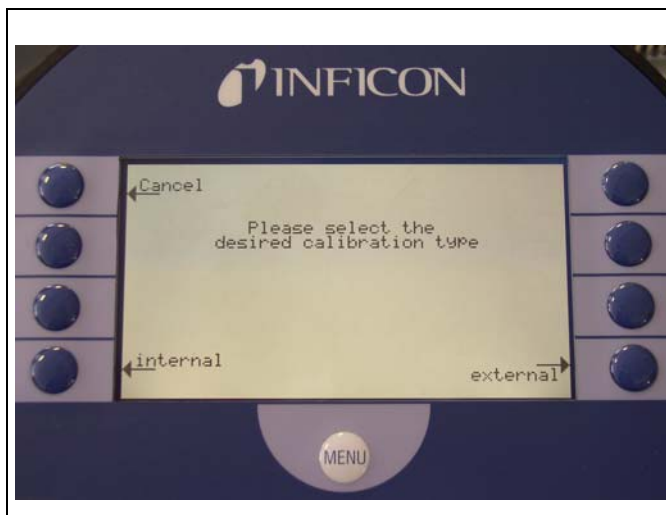


Fig. 6-12: The [Calibration](#) Menu

6.6 Settings

- [Main Menu > Settings](#)

This menu [Fig. 6-13](#) allows to observe and to change the settings of the internal machine controls.



Fig. 6-13: The [Settings](#) Menu

Key No.	Name	Description
1	Back	Return to the main menu.
2	Vacuum settings	Settings of vacuum system related functions. See chapter 6.6.1
3	Zero & Background	See Chapter 6.6.2
4	Mass	Switching between helium and hydrogen. See Chapter 6.6.3
5	Interfaces	Define the recorder output (analog output) and choose the control location (local, RS232, PLC). See Chapter 6.6.4
6	Miscellaneous	Change rarely necessary settings (Date, language). See Chapter 6.6.5
7	Parameter save / load	See Chapter 6.6.6
8	Monitoring functions	Choose functions of protection of the UL1000 and UL1000 Fab. See Chapter 6.6.7

6.6.1 Vacuum settings

- [Main Menu](#) > [Settings](#) > [Vacuum settings](#)

This menu allows to observe and to change the settings belonging to the vacuum system.

Softkey 2: [Automatic purge \(UL1000 Fab only\)](#)

Refer to chapter [6.6.1.1](#)

Softkey 3: [Vent delay](#)

Refer to chapter [6.6.1.2](#)

Softkey 4: [Vacuum ranges](#)

Refer to chapter [6.6.1.3](#)

Softkey 5: [Auto Leak Test adjustments](#)

Refer to chapter [6.6.1.6](#)

Softkey 6: [Leak rate internal test leak](#)

Refer to chapter [6.6.1.4](#)

Softkey 7: [Machine factor](#)

Refer to chapter [6.6.1.5](#)

6.6.1.1 Automatic purge (UL1000 Fab only)

- [Main Menu](#) > [Settings](#) > [Vacuum settings](#) > [Automatic purge \(UL1000 Fab only\)](#)

Through this menu it is possible to program the automatic purge (Please refer to Chapter [5.3.1](#)) for 20 seconds when switching from measuring to standby mode.

Softkey 3: OFF

Automatic purge is switched off at standby mode.

Softkey 7: ON

Automatic purge is activated. When switching from measurement to STANDBY the forepump is rinsed automatically for 20 seconds.

6.6.1.2 Vent delay

- [Main Menu](#) > [Settings](#) > [Vacuum settings](#) > [Vent delay](#)

Through this menu item it is possible to define the delay time until the inlet port is vented when operating the STOP button. When the STOP button is pressed for a period of time which is shorter than the delay time specified here, the UL1000 and UL1000 Fab will just change to Stand-by mode.

When the STOP button is pressed for a period of time which is longer than the delay time specified here, the UL1000 and UL1000 Fab will vent the inlet port.

Softkey 2: Immediately

The inlet port will be vented immediately after pressing the STOP button.

Softkey 3: After 1 second

The inlet port will be vented with a time delay of 1 second.

Softkey 4: After 1.5 seconds

The inlet port will be vented with a time delay of 1.5 seconds.

Softkey 5: ?

Help

Softkey 6: after 2 seconds

The inlet port will be vented with a time delay of 2 seconds.

Softkey 7: No vent

The inlet port cannot be vented with the STOP button.

6.6.1.3 Vacuum ranges

- [Main Menu](#) > [Settings](#) > [Vacuum settings](#) > [Vacuum ranges](#)

With this menu you can adjust different modes concerning the activity of leak detection. This setting is only active in mode vacuum (see Chapter 6.3).

Softkey No. 2: ULTRA ONLY

In this mode the UL1000 and UL1000 Fab remains in the area ULTRA after running under 0,4 mbar at the inlet flange (see Chapter 4.3.1). When showing the pressure at the inlet flange > 0,4 mbar the UL1000 and UL1000 Fab switches immediately into evacuation mode.

Softkey No. 3: FINE only

In this mode the UL1000 and UL1000 Fab remains after falling below 2 mbar at the inlet flange in FINE mode. Valve V1a will be closed. When the pressure at the inlet flange is increasing > 1 mbar the UL1000 and UL1000 Fab switches immediately into evacuation mode. The lower detection limit of FINE ONLY is 1×10^{-10} mbar l/s.

The advantage of FINE ONLY is that while this mode is running no valve will switch.

Softkey No. 4: SOFTPUMP

In this mode the UL1000 and UL1000 Fab keeps the valve V1a closed when pumping down in GROSS and FINE mode. So the pumping speed at the inlet is reduced approx. by factor 2.

Softkey No. 5: ?

Help

Softkey No. 6: HIGHPUMP (only UL1000)

In this mode the UL1000 keeps the valve V1a open in ULTRA mode to increase the pumping speed at the inlet in this mode. This helps shortening the pump down time at bigger testing objects.

Softkey No. 7: NORMAL (default settings)

This is the default setting. The activity runs as explained in Chapter 4.3.1.

6.6.1.4 Leak rate internal test leak

- [Main Menu](#) > [Settings](#) > [Vacuum settings](#) > [Leak rate internal test leak](#)

The value of the internal test leak can be set. See Chapter 4.2.2.7 Numerical Entries for the description of the entry.



Warning

Normally there is no reason to edit the leak rate of the internal test leak besides after a change of the internal test leak. A wrong leak rate of the internal test leak will lead to wrong leak rate readings!

6.6.1.5 Machine factor

- [Main Menu](#) > [Settings](#) > [Vacuum settings](#) > [Machine factor](#)

The machine factor takes into account that an additional external pump set is used. Based on an internal calibration only, all measured leak rate would be measured too small. The measured leak rate is multiplied with the machine factor and the result is displayed. This factor is only used for vacuum measurement modes (not for sniff mode). See Chapter [4.2.2.7 Numerical Entries](#) for the description of the entry.

The machine factor can be estimated by taking into consideration the Helium absorbing capability of the UL1000 and UL1000 Fab and the external pump.

Exactly, this is the result of the measured leak rate of an external test leak on the test sample once with and then without the external pump. The difference between the two results is the machine factor.

Adjust the machine factor to the value 400 when using the helium sniffer QUICK TEST.

The machine factor can be used to correct the leak rate indication to an air equivalent reading. By using this setting the display reads the leak rate equivalent to air. (The machine factor for this correction is $3,7 \times 10E-1$). When using this setting the status is indicated on the display by COR.



Fig. 6-14

To return to standard indication of the leak rate, use the default settings (machine factor is 1.0).

6.6.1.6 Auto Leak Test adjustments

- [Menu](#) > [Settings](#) > [Vacuum Settings](#) > [Auto Leak Test settings](#)
- All parameters for a test at hermetic sealed parts can be setted.

Measurement period

The cycle time of the test can be setted from 1 second to 30 minutes.

Settings:	Interval:
time	
1 - 10 sec	1 sec steps
10 - 30 sec	2 sec steps
30 - 60 sec	5 sec steps
1 - 30 min	10 sec steps
3 - 10 min	30 sec steps
10 - 30 min	1 min steps

The cycle time depends on the volume of the Chamber, volume of the tested object and the rejectant leak rate.



Fig. 6-15

Examples for time settings (using the Inficon Test Chamber with a volume of 430 cm³):

Range of rejectant level	Measurement Period
10E-5	2 sec
10E-6	2 sec
10E-7	2 sec
10E-8	>5 sec
10E-9	>10 sec*

*external calibration with a 10E-9 test leak (i.e. TL 9) recommended

Notice After changing the measurement time a calibration request could

Trigger level 1

The rejectant level for a part to be tested can be set in the range from $10E^{-1}$ to $10E^{-9}$ mbar l/s.



Fig. 6-16

Series error messages

The number of failed parts in series can be set from 1 to 9. In disable mode this function is switched off.



Fig. 6-17

After a series of failed tests this message appears :

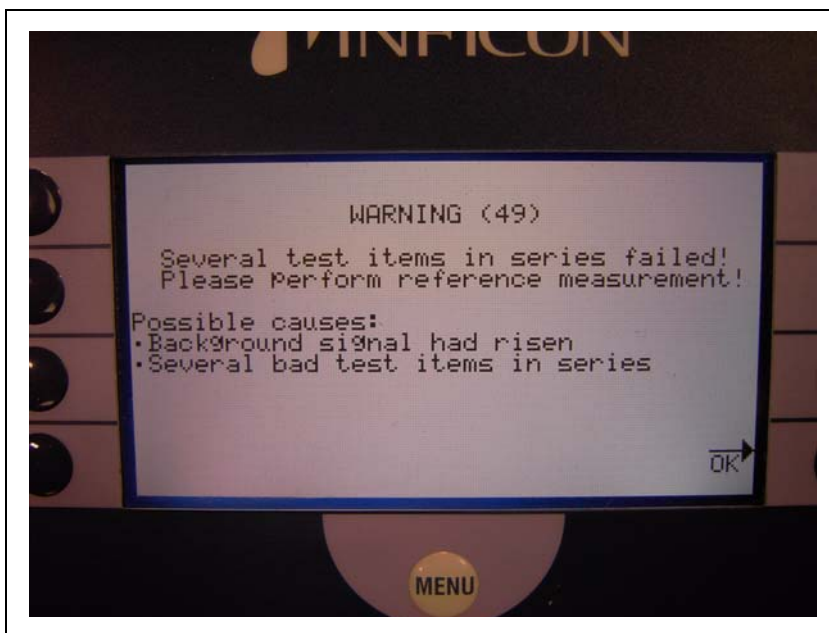


Fig. 6-18

When pushing OK button the display shows this:

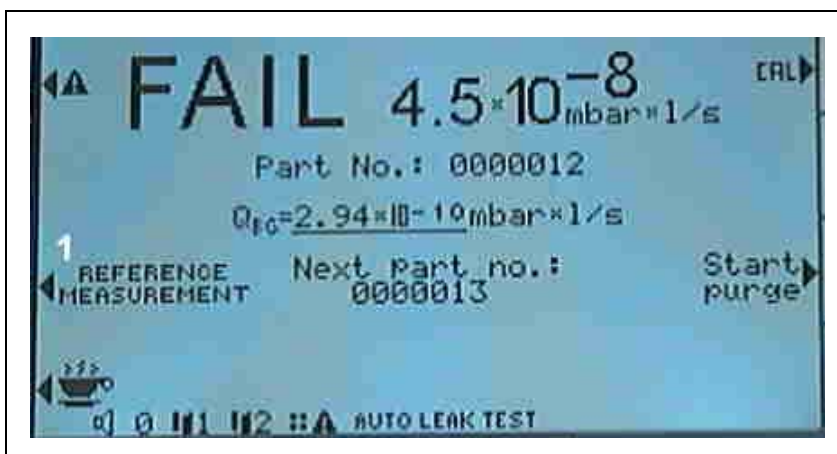


Fig. 6-19

Now a REFERENCE MEASUREMENT (see no. 1 in fig. 6-19) can be started to clean the test chamber and measure the background level that will be subtracted from the following measurements.

Part under test

The number of the first part to be tested can be entered. The number counts automatically up at the next test cycle. In disable mode this function is switched off.



Fig. 6-20

Reference measurement

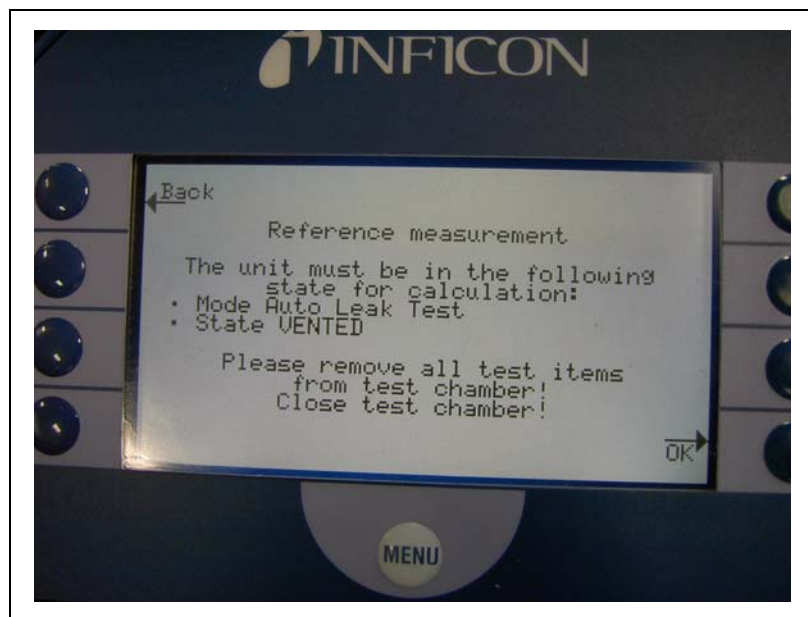


Fig. 6-21

This mode can be used to clean up the chamber after a helium contamination or after a series of failed parts. The chamber will be pumped down and vented 3 times.

The Reference measurement includes a calibration procedure with the internal test leak TL of UL1000. After this clean up the actual helium background is measured and will be subtracted from the following measurements.

The new values of the measured background will be saved automatically:

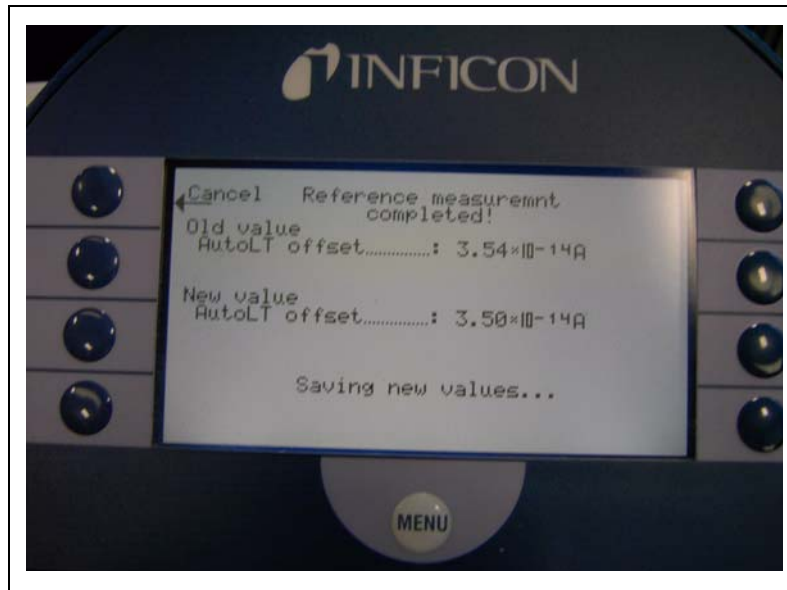


Fig. 6-22

6.6.2 Zero & Background

- [Main Menu](#) > [Settings](#) > [Zero & Background](#)

The kind of background suppression inside the UL1000 and UL1000 Fab and the function of the Zero button can be selected.

Softkey 3: Background suppression

Refer to Chapter [6.6.2.1](#)

Softkey 7: Zero

Refer to Chapter [6.6.2.2](#)

6.6.2.1 Background Suppression

- [Main Menu](#) > [Settings](#) > [Zero & Background](#) > [Background Suppression](#)

By this mode the internal helium background of the UL1000 and UL1000 Fab will be subtracted at every measurement after pressing START. This function helps to save clean up of the UL1000 and UL1000 Fab after a helium contamination.

Softkey 3: Off

Internal background suppression is switched off

Softkey 7 On

The internal background (see Chapter [6.2.5](#)) will be calculated when switching to STAND-BY mode. This value will be subtracted when pressing START.

6.6.2.2 Zero

- [Main Menu](#) > [Settings](#) > [Zero & Background](#) > [Zero](#)

This setting enables (respectively disables) the ZERO button at the control panel.

The function „I-Zero“ enables the ZERO button only at stable leak rate signals. By the standard Zero function the actual background value will be subtracted when pressing ZERO. At falling background signals smaller leaks could be missed because the subtracted background value is higher than the leak rate signal at the moment of measuring.

By „I-Zero“ the drift of the falling background signal is checked, if it is higher than 0.5 x trigger value 1 (adjusted to the desired rejection level).

Softkey 2: I-Zero:

The Zero function is locked as long as the leak rate signal is not stable enough to detect a leak of the programmed value of Trigger 1.

Softkey 3: Disable: ZERO function

Softkey 5: Help

Softkey 6: Zero at ULTRA

Softkey 7: Enable: ZERO function

6.6.3 Mass

- [Main Menu](#) > [Settings](#) > [Mass](#)

The requested mass of the measured gas can be selected. The UL1000 and UL1000 Fab must be in Stand-by.

Softkey 2: H₂ (2 amu)

Hydrogen with the mass of 2 amu will be measured.

Softkey 3: ³He (3 amu)

Isotope of helium with the mass of 3 amu will be measured.

Softkey 7: ⁴He (4 amu)

Helium with the mass of 4 amu will be measured.

6.6.4 Interfaces

- [Main Menu](#) > [Settings](#) > [Interfaces](#)

The parameters of the interface can be set.

Softkey 3: [Control Location](#)

Please refer to Chapter [6.6.4.1](#)

Softkey 4: [RS232 Protocol](#)

Please refer to Chapter [6.6.4.2](#)

Softkey 7: [Recorder output](#)

Please refer to Chapter [6.6.4.3](#)

Softkey 8: [Scaling Recorder Output](#)

Please refer to Chapter [6.6.4.4](#)

6.6.4.1 Control Location

- [Main Menu](#) > [Settings](#) > [Interfaces](#) > [Control Location](#)

Softkey 2: PLC

The UL1000 and UL1000 Fab is controlled via the Digital In connector (See Chapter [2.3.2.3](#)). The START, STOP and ZERO buttons at the control panel are locked.

Softkey 3: RS232

The UL1000 and UL1000 Fab is controlled via RS232 interface by an external computer. In this mode the UL1000 and UL1000 Fab can not be controlled via keyboard. The START, STOP and ZERO button at the machine are deactivated.

Softkey 4: Not in use

Softkey 5: Local & PLC

The UL1000 and UL1000 Fab is controlled via the Digital In connector or the START, STOP and ZERO buttons at the control panel.

Softkey 6: Local & RS232

The UL1000 and UL1000 Fab is controlled via the Digital In connector or the START, STOP and ZERO buttons at the control panel.

Softkey 7: Local

The UL1000 and UL1000 Fab is controlled via the START, STOP and ZERO buttons at the control panel. The Digital In connector is not used.

6.6.4.2 RS232 Protocol

- [Main Menu](#) > [Settings](#) > [Interfaces](#) > [RS232 Protocol](#)

Softkey 3: Diagnostics

Gives the chance to read parameters, e.g. during maintenance.

Softkey 5: ?

Help

Softkey 6: UL2xx Leak Ware

Gives the chance to control and read measurement values when connecting to a computer.

Softkey 7: ASCII

Gives the chance to use the UL1000 and UL1000 Fab via a RS232 terminal.

Notice The calibration function of the Leak Ware is not appropriate to operate with the UL1000 and UL1000 Fab.
Please execute the function „STORE DATE“ in the operating mode „Single Part Measurement“ for starting the record of the measured values.

6.6.4.3 Recorder output

- [Main Menu](#) > [Settings](#) > [Interfaces](#) > [Recorder output](#)

The signals to be recorded can be selected in this submenu.

Softkey 1: Cancel

Return to the previous menu without any changes of the present settings.

Softkey 2: Arrow up

Address recorder output 1 or 2

Softkey 3: Arrow down

Address recorder output 1 or 2

Softkey 5: Help

Softkey 6: Arrow up

Behaviour recorder output. For further information see keywords below.

Softkey 7: Arrow down

Behaviour recorder output. For further information see keywords below.

Softkey 8: ok

Saving off chosen parameters



Fig. 6-23

Off

The recorder output is switched off.

p_1 / p_2

The fundamental output voltage is scaled logarithmic. The inlet pressure p_1 or the forevacuum pressure p_2 can be recorded.

The signals p_1 and p_2 have the characteristics of the Pirani gauge TPR265 (see chart in appendix).

LR lin

The leak rate output voltage is scaled linear. The fundamental voltage is 0-10 V in scalable steps from 0.5 to 10 volts per decade.

For information about scaling see chapter 6.6.4.4

LR log

The leakrate is recorded on a logarithmic scale. The voltage output ranges from 1 ... 10 V with steps of 0.5 V per decade.

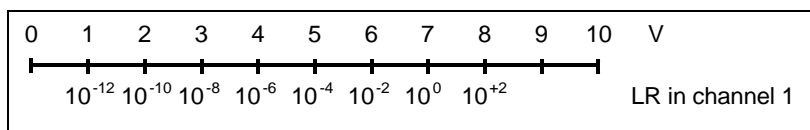


Fig. 6-24 Example of range of leak rate, log, 0.5 V/decade

For adjusting of scaling see chapter [6.6.4.4](#).

LR mantissa:

The leak rate mantissa is recorded linearly from 1 ... 10 V.

LR exponent

The exponent is recorded like a step function: U = 1 ... 10 V with steps of 0.5 V per decade, starting with 1 V = 1×10^{-12} .

6.6.4.4 Scaling Recorder Output

- [Main Menu](#) > [Settings](#) > [Interfaces](#) > [Scaling Recorder Output](#)

Here the scaling of the recorder output can be adjusted. This adjustment is only valid for the setting "LR lin" or "LR log" (refer to Chapter [6.6.4.3 Recorder output](#)).

Softkey 2: Arrow up

Adjust decade of the upper limit value

Softkey 3: Arrow down

Scaling of the previously adjusted value in steps of 0.5, 1, 2, 2.5, 5, 10 Volt/decade. The complete voltage range is 10 V. (Only for signal "LRlog")

Softkey 6: Arrow up

Adjust decade of the upper limit value

Softkey 7: Arrow down

Scaling of the previously adjusted value in steps of 0.5, 1, 2, 2.5, 5, 10 Volt/decade. The complete voltage range is 10 V. (Only for signal "LRlog")

Example:

Chart recorder output: "LRlog"

Upper limit value is adjusted to 10^{-5} (= 10V)

Scaled to 5 V /decade

Lower limit value consequently is 10^{-7} (= 0 V)

6.6.5 Miscellaneous

- [Main Menu](#) > [Settings](#) > [Miscellaneous](#)

The actual date and time, the preferred language and the mains frequency can be set in this submenu.

Softkey 2: [Time&Date](#)

Please refer to Chapter [6.6.5.1](#)

Softkey 3: [Language](#)

Please refer to Chapter [6.6.5.2](#)

Softkey 4: [Leak rate filter](#)

Please refer to Chapter [6.6.5.3](#)

Softkey 6: [Mains Frequency](#)

Please refer to Chapter [6.6.5.4](#)

Softkey 7:

Service interval exhaust filter.

Softkey 8:

Service message exhaust filter.

6.6.5.1 Time&Date

- [Main Menu](#) > [Settings](#) > [Miscellaneous](#) > [Time&Date](#)

Date and time can be changed on two subsequent pages. Please refer to Chapter [4.2.2.7 Numerical Entries](#) for the description of the entry.

6.6.5.2 Language

- [Main Menu](#) > [Settings](#) > [Miscellaneous](#) > [Language](#)

The preferred language can be selected. The default setting is english.

Softkey 3: Allemand (German)

The german language will be displayed.

Softkey 7: English

The english language will be displayed.

Softkey 6: Français (French)

The french language will be displayed.

6.6.5.3 Leak rate filter

- [Main Menu](#) > [Settings](#) > [Miscellaneous](#) > [Leak rate filter](#)

The kind of the leak rate filter can be chosen. The default value is I•CAL.

Softkey 3: Fixed

A filter with a fixed time constant will be used.

Softkey 5: ?

Help

Softkey 7: I•CAL

I•CAL makes sure that the averaging time is optimal based on the leak rate level.

I•CAL stands for Intelligent Calculation Algorithm of leak rates. It makes sure that the signals are averaged in optimized time intervals, based on the leak rate intensity. I•CAL also eliminates noise peaks which are not related to leak rate signals and provides unexpected short response times for low leak rate signals.

The algorithm used provide excellent sensitivity and response time and is there for the recommended setting.

6.6.5.4 Mains Frequency

- [Main Menu](#) > [Settings](#) > [Miscellaneous](#) > [Mains Frequency](#)

The mains frequency takes the different pumping speed of the scroll pump into account. The frequency of the mains power supply can be selected. The default setting is 50 Hz for 230 V and 60 Hz for 115 V.

Softkey 3: 50 Hz

The UL1000 and UL1000 Fab will be run at a mains frequency of 50 Hz.

Softkey 6: 60 Hz

The UL1000 and UL1000 Fab will be run at a mains frequency of 60 Hz.

6.6.5.5 Service interval exhaust filter

Here you can enter the service intervall of the exhaust filter.

Softkey 3: Down

Decrease of the service intervall steps of within 500 hours.

Softkey 5: ?

Help

Softkey 7: Up

Increase of the service intervall within steps of 500 hours. The limit is 4000 hours.

6.6.5.6 Service message exhaust filter

The exhaust filter must be maintained at regular intervals to ensure the correct function of the UL1000 and UL1000 Fab. If the service message is activated, the UL1000 and UL1000 Fab reminds you of the required maintenance.

Softkey 3: Off

Softkey 5: Help

Softkey 7: On



Warning

If the service messages are ignored and the exhaust is not replaced a risk for overheating the pump motor exists.

6.6.6 Parameter save / load

- [Main Menu](#) > [Settings](#) > [Parameter save / load](#) > [Load](#)

Enables to save and load individual settings or reload the default settings.

Softkey 2 to 4: The names of the current values can be saved under a free choosable name. The saving of 3 different sets is possible.

Please refer to Chapter [6.6.6.1](#)

Softkey 5: load default values

The factory setting have to be loaded again.

Softkey 6 to 8: One of three saved parameter sets can be loaded.

Please refer to Chapter [6.6.1.3](#)

6.6.6.1 Load parameter set

- [Main Menu](#) > [Settings](#) > [Parameter save / load](#) > [Save](#)

Save the current parameter settings.

Softkey 4: Edit a file name

Rename the parameter set.

6.6.6.2 Save parameter set 1

- [Main Menu](#) > [Settings](#) > [Parameter save / load](#) > [Load parameter set](#)

The settings of the selected saved parameter set will be displayed and can be reloaded.

Softkey 6: Arrow up
Upward to the previous screen.

Softkey 7: Arrow down
Downward to the next screen.

6.6.7 Monitoring functions

- [Main Menu](#) > [Settings](#) > [Monitoring functions](#)

Calibration request

- [Main Menu](#) > [Settings](#) > [Monitoring functions](#) > Calibration request

It can be selected whether the operator is reminded of the fact that a calibration may have become necessary or not. The default value is off.

Softkey 3: Off
The calibration request will be switched off.

Softkey 7: ON
The calibration request will be switched on.

If the calibration request is switched on, a corresponding message will appear when 30 minutes have elapsed after power on or if the temperature of the UL1000 and UL1000 Fab has changed by more than 5 °C (9 °F) since the last calibration.

Particle protection

- [Main Menu](#) > [Settings](#) > [Monitoring functions](#) > Particle Protection

This mode can be switched on and off.

If switched on the UL1000 and UL1000 Fab will not start pumping down before the inlet has not dropped below 1 mbar. e.g. it is assumed that the part under test is pumped by another pump in parallel.

Purpose: When the leak detector does not pump at high pressures no gas stream, possibly carrying particles gets into the leak detector.

Softkey 3: Off

Softkey 5: Help

Softkey 7: ON

Contamination protection

- [Main Menu](#) > [Settings](#) > [Monitoring functions](#) > Contamination protection

If this mode is switched on the UL1000 and UL1000 Fab closes all inlet valves as soon as the measured leak rate exceeds the programmed leak rate. Thus no more Helium gets into the mass spectrometer. Helium that has gotten into the tool under test can be pumped away by the tool pump. If no extra pump is available it is recommended to vent the part before the test is continued.

Softkey 3: Off

Softkey 4: edit the limit value
Edit the limit value for switching off

Softkey 5: Help

Softkey 7: ON

Softkey 8: OK

Pressure limits for vacuum ranges

[Main Menu](#) > [Settings](#) > [Monitoring functions](#) > Pressure limits for vacuum ranges

With this function you can adjust the switching point between the modes GROSS-FINE-ULTRA. This can be essential when other gases than air are pumped with the UL1000 and UL1000 Fab. The control signal of the Pirani may vary at other gases than air. Therefore it may be necessary to adjust the switching points.

Softkey No. 2, 6: Change over threshold EVAC-GROSS
.15-3 mbar (Default value 15 mbar)

Softkey No. 3, 7: Change over threshold GROSS-FINE
2-0,5 mbar (Default value 2 mbar).

When changing this values the change over FINE-ULTRA threshold will automatically be retightend to 0,4 - 0,1 mbar.

Softkey No. 4 Adjustment for ARGON
Press again the softkey for default values for air.

Softkey No. 5: ?
Help

Pressure limits for sniff mode

- [Main Menu](#) > [Settings](#) > [Monitoring functions](#) > Pressure limits for sniff mode

This function is automatically activated in sniff mode. The pressure limits define an upper and lower limit of the inlet pressure. The upper limit is 2 mbar, the lower limit is 0.02 mbar. If the pressure is not in this range error messages are generated:

P > upper limit: Capillary broken

P < lower limit: Flow through capillary too low (Capillary blocked)

Softkey 3 and 6: Setting of the maximal pressure: upper limit 2 mbar

Softkey 4 and 7: Setting of the minimal pressure: lower limit 0.02 mba

Softkey 5: Help

Maximum evacuation time

- [Main Menu](#) > [Settings](#) > [Monitoring functions](#) > Maximun evacuation time

This menu item is used to define when the gross leak message is to occur. The gross leak detection process operates in two steps and the limits can be adapted as required.

This menu item is particularly useful in series testing under the same conditions at all times.

After pressing the start button the test sample is evacuated. If the pressure conditions ($p_1 < 100$ mbar) are not attained, or if the pressure does not drop low enough within the periods of time specified here, the pumpdown process is terminated and the display will indicate a message (see 8.2, W76).

The periods which are selected in each case depend firstly on the desired reaction time for the gross leak message, and secondly on the volume of the test sample and the effective pumping speed.

Caution: If the evacuation time was set to endless, the oil level of the mechanical pump should be checked more often.

Softkey No. 2: ↓

Decreasing maximum evacuation time until $p_1 < 100$ mbar. Within this period of time the inlet pressure at the test flange must have dropped below 100 mbar. The duration may be selected freely between 1 second and 9 minutes or can be set to endless. The default is 30 seconds.

Softkey No. 3: ↓

Decreasing maximum time until measurement Within the period of this time the status of measurement readiness must have been attained, i.e. the inlet pressure must have dropped below 15 mbar. The duration may be freely selected between 5 seconds and 30 minutes or can be set to endless.

Softkey No. 5: ?

Help text

Softkey No. 6: ↑

Increasing maximum evacuation time until $p_1 < 100$ mbar

Softkey No. 7: ↑

Increasing maximum time until measurement.

6.7 Information

- [Main Menu](#) > [Information](#)

The [Information](#) Menu [Fig. 6-25](#) enables submenus to select different kinds of information belonging to the UL1000 and UL1000 Fab.

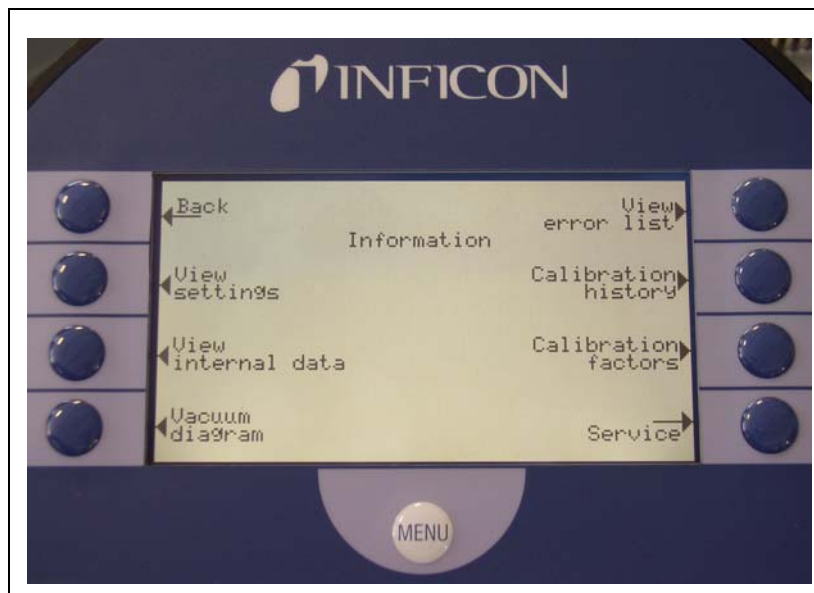


Fig. 6-25: The [Information](#) Menu

Softkey 2: View settings

The current settings will be displayed on 4 pages, e.g. trigger levels, test leak mass, date and time.

Softkey 3: View internal data

Information on measured internal data is provided on 4 screens.

Softkey 4: Vacuum diagram

The vacuum diagram of the UL1000 and UL1000 Fab is shown. Here you can see which valves are open or closed momentarily and more.

Softkey 5: View error list

The list of occurred errors and warnings will be displayed.

Softkey 6: Calibration history

The carried out calibrations will be listed.

Softkey 7: Calibration factors

The calibration factors for the different masses, the machine factor will be displayed.

Softkey 8: [Service](#)

Please refer to [Chapter 6.7.1](#)

6.7.1 Service

- [Main Menu > Information > Service](#)

With the main menu special functions can be accomplished (e. g. manual switching of the valves). The access to the service menu is protected by a PIN. This PIN is not communicated with the delivery of the leak detector but after an adequate service training. For more information concerning the service menu see instructions (iipa74e1-a).

6.8 Access Control

- [Main Menu > Access Control](#)

With this menu you can deny or allow access to specific functions of the UL1000 and UL1000 Fab.



Fig. 6-26: The [Access Control](#) Menu

Softkey 4: [Access to CAL function](#)

Please refer to Chapter [6.8.1](#)

Softkey 7: [Change device-PIN](#)

Please refer to Chapter [6.8.2](#)

Softkey 8: [Change Menu-PIN](#)

Please refer to Chapter [6.8.3](#)

6.8.1 Access to CAL function

- [Main Menu > Access Control > Access to CAL function](#)

It can be selected whether the access to the calibration menu is restricted or not.

Softkey 3: Off

The calibration function is only available at the main menu. If the Menu-PIN (See Chapter 6.8.3) is activated you need this PIN to start a calibration.

Softkey 5: ?

Help

Softkey 7: ON

The calibration function is available at the main menu and in Stand-by and the measure mode.

Softkey 8: OK

Save the settings and return to the previous menu.

6.8.2 Change Device PIN

- [Main Menu](#) > [Access Control](#) > [Change Device PIN](#)

The access to the UL1000 and UL1000 Fab can be restricted by a Device-PIN. If the Device-PIN is not 0000 the UL1000 and UL1000 Fab will ask for this PIN directly after power on. Without device-PIN the UL1000 and UL1000 Fab does not even switch on the pumps.

Notice Under all circumstances memorize the PINs! The PIN can only be reset by INFICON's service organization.

6.8.3 Change Menu-PIN

- [Main Menu](#) > [Access Control](#) > [Change Menu-PIN](#)

The access to the menu can be restricted by entering or changing the personal identification number (PIN). No PIN will be checked if 0000 is entered.

Please refer to Chapter 4.2.2.7 [Numerical Entries](#) for the description of the entry.

Notice Under all circumstances memorize the PINs! The PIN can only be reset by INFICON's service organization.

7 Calibration

7.1 Introduction

The UL1000 and UL1000 Fab can be calibrated in two different ways:

- Internal calibration by means of a built-in leak standard.
- External calibration by means of an additional leak standard which then is attached to the inlet port or the component under test.

During the calibration procedure the mass spectrometer is tuned to the maximum helium signal and this signal is referred to the known leak rate of the internal or external leak standard. Although the UL1000 and UL1000 Fab is a very stable instrument a calibration is recommended from time to time to make sure that ambient temperature changes or dirt or other impacts don't adulterate the measurements.

When the unit is used constantly the calibration should be performed at least once a day. Otherwise the frequency of calibration depends on the frequency of use.

Notice To get an optimized calibration the machine has to warm up at least 20 minutes before use.

Test leaks for calibration should not have a range lower than 1×10^{-9} mbar l/s to ensure a stable calibration signal.

7.2 The calibration routines

The calibration routines can be started by pressing button CAL (Softkey 5) via 3 different locations:

- main menu
- Stand-by mode
- measurement mode

The access via Stand-by mode or measurement mode can possibly be not available. (Refer to chapter [Access to CAL function](#)). In this case there will be no inscription on the correspondingly Soft Key.

A calibration may be terminated at any time by pressing the [STOP Button](#) or using the Soft Key no. 1 (*Cancel*).

Once the calibration mode is activated the user must choose between an internal and an external calibration. Please press the corresponding Soft Key.

7.2.1 Internal Calibration

For internal calibrations the UL1000 and UL1000 Fab differentiates between two possibilities:

- If the unit is blanked off or disconnected from any chamber by a valve on the [Inlet Port](#) the automatic calibration can be chosen (Soft Key no. 8).

- If the unit is connected to a chamber or a bigger component the calibration has to be performed manually because the reaction times on opening or closing the internal leak standard vary depending on the volume of the chamber.

Notice It is recommended to use the automatic calibration if possible.

7.2.1.1 Automatic Internal Calibration

Once this procedure is started the entire procedure is performed automatically. At the end (after about 25 s) a beep is released. Thereafter the unit is ready for further use.

7.2.1.2 Manual Internal Calibration

When [Manual Internal Calibration](#) is selected it is assumed that the UL1000 and UL1000 Fab is connected to a component under test (if not please go to [Automatic Internal Calibration](#)).

After starting the [Manual Internal Calibration](#) the UL1000 and UL1000 Fab pumps down the test part (if not already under vacuum) and opens the internal leak standard. Depending on the volume of the part it may take some time for the helium signal to stabilize. Therefore the user has to confirm that the signal has reached a stable level (Soft Key no. 8).

The unit now runs through the tuning process and closes the internal leak standard automatically. Again the volume of the test part determines how long it takes to pump down the helium and to reach a stable background level, which has to be confirmed by the user.

Thereafter the unit is calibrated.

7.2.2 External Calibration

For an external calibration a leak standard has to be attached to the part under test or the inlet port directly.

Notice The shown leak rate can diverge of the printed values of the external calibrated leak because of uncertainties and temperature coefficients.

After **External Calibration** (Soft Key no. 8) has been chosen the following messages are displayed and the described actions are required:

	<ul style="list-style-type: none"> • Make sure that the test leak is connected and opened. • Check the leak rate printed on the test leak and compare it with the leak rate at the display. If the leak rates are not identical press <i>Edit leak rate</i> (Soft Key no. 4) and correct the value. • If the leak rates are okay press <i>START</i> (Soft Key no. 8).
--	--

Fig. 7-1: **External Calibration**, Step 1

	<ul style="list-style-type: none"> • No action required.
--	---

Fig. 7-2: **External Calibration**, Step 2


	<ul style="list-style-type: none"> • The bargraph display shows a signal which must not vary much. If so please press <i>OK</i> (Soft Key no. 8).
--	--

Fig. 7-3: **External Calibration**, Step 3




- No action required.

Fig. 7-4: External Calibration, Step 4

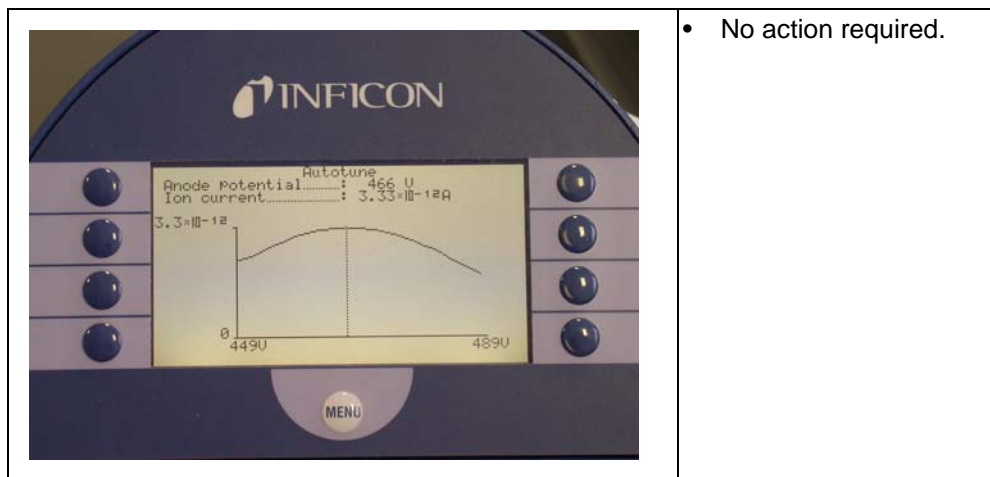


- No action required.

Fig. 7-5: External Calibration, Step 5

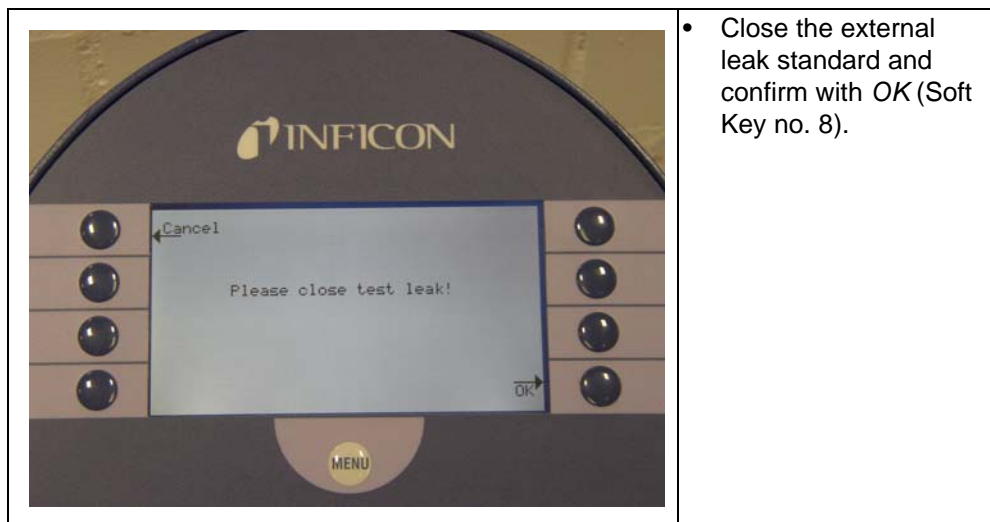


- Close the external leak standard and confirm with OK (Soft Key no. 8).

Fig. 7-6: External Calibration, Step 6

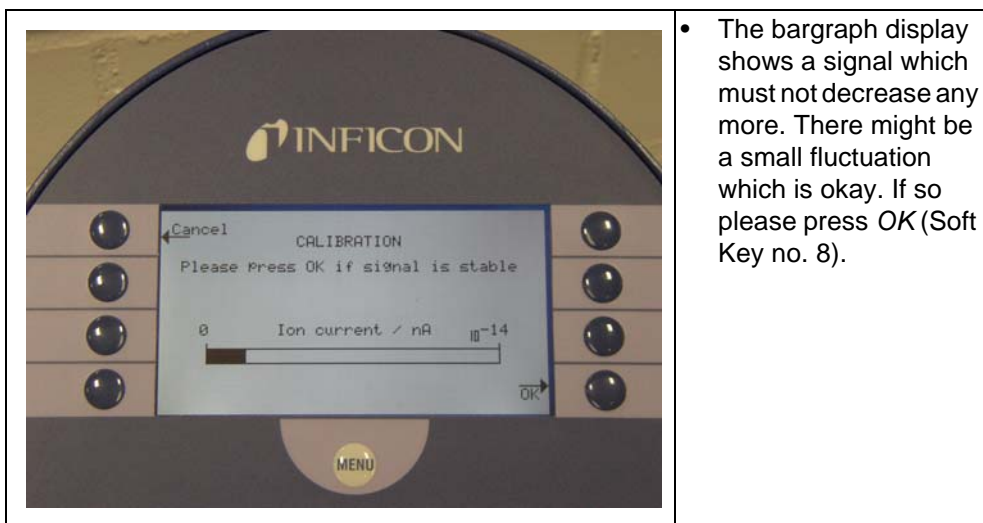

- The bargraph display shows a signal which must not decrease any more. There might be a small fluctuation which is okay. If so please press OK (Soft Key no. 8).

Fig. 7-7: External Calibration, Step 7

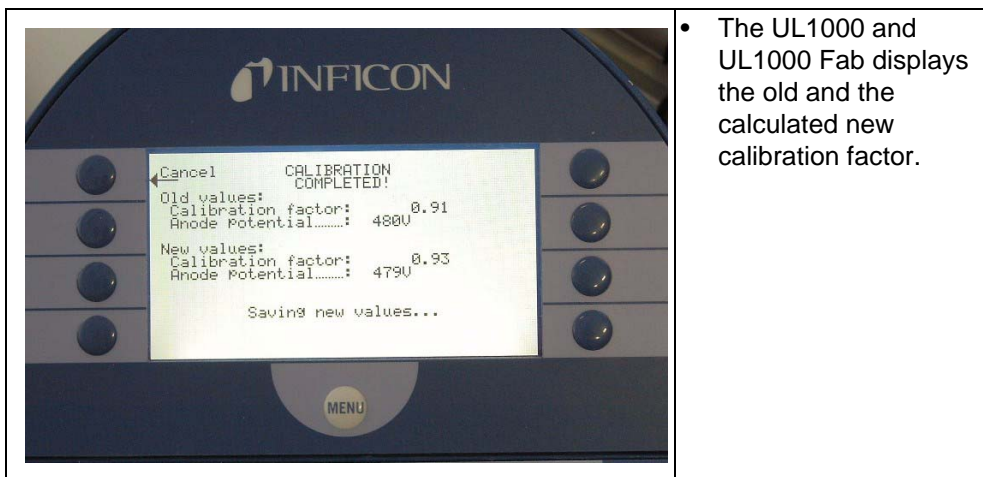

- The UL1000 and UL1000 Fab displays the old and the calculated new calibration factor.

Fig. 7-8: External Calibration, Step 8

7.3 Factor of Calibration - Range of Values

To avoid a faulty calibration the factor of calibration is tested for plausibility at the end of the calibration routine:

When the new factor of calibration is not considerably higher or lower (< factor 2) than the previous factor of calibration the new factor will be accepted automatically. When the new factor of calibration diverges stronger from the previous factor the user can decide if he wants to accept it anyway (e. g. after changing the system configuration) or not (e. g. because of a maloperation).

Notice When calibration is started via SPS or RS232 no testing for plausibility is occurring.

When calibrating internal it is also monitored if the newly calculated factor of calibration is higher than 10 or lower than 0.1. In this case a warning (see W81 resp. W82 in chapter Refer to chapter 8.2) is displayed and the calibration will be interrupted.

8 Error And Warning Messages

The UL1000 and UL1000 Fab is equipped with a comprehensive self-diagnostic facilities. If an error or warning condition is detected it is indicated via the LC display to the operator.

An audio signal is generated when an error or warning occurs. The frequency changes every 400 ms from 500 Hz to 1200 Hz and vice versa so that the signal stands out well from ambient noises normally encountered.

Error and warning messages are logged and can also be displayed at a later time through the menu information (6.7)

8.1 Hints


Warning Messages

Warnings will be indicated

- when the UL1000 and UL1000 Fab detects an abnormal condition or
- when it wants to remind the operator of something (e.g. a request for calibration or a service timer has expired).

The UL1000 and UL1000 Fab will indicate a message on the LC display and will remain in the Stand-by or the measurement mode.

Warning messages will remain on the LC display until the warning has been acknowledged by pressing „OK“ (Key no. 8). After that the UL1000 and UL1000 Fab can be used again (possibly with some restrictions). As long as a warning status exists the status line shows a warning triangle (See Chapter 5.4.3).

The warning messages can be displayed in STANDBY by pressing the button  (shows up when warning message occurred).

Error Messages

Errors are events which force the UL1000 and UL1000 Fab to interrupt its measurement operations. In this case the UL1000 and UL1000 Fab closes all valves (Stand-by mode).

Error messages remain on the LC display until the message has been acknowledged by pressing „Restart“ (key no. 8). After that, the UL1000 and UL1000 Fab restarts with a new run-up procedure. In some cases it may be helpful to check some settings or measured values before the UL1000 and UL1000 Fab restarts. Therefore it is also possible to press „Menu“ (key no. 4 or Menu key) to enter the UL1000 and UL1000 Fab menu. After leaving the menu the same error message will be displayed again.

Notice Under extreme conditions (unknown software errors, excessively high electromagnetic interference levels) the built-in „watchdog“ circuit will prevent uncontrolled operation of the UL1000 and UL1000 Fab. This watchdog will cause the UL1000 and UL1000 Fab to restart. After having done so, the instrument will be running in the Stand-by mode. No error message will be output.

8.2 List of Errors & Warnings

The following pages contain a list of all errors and warnings displayed at the control panel. Warning messages are indicated by numbers with a leading W. Error messages are indicated by numbers with a leading E.

No.	Displayed Message	Description and possible solutions
W15	Leakrae is too high! Machine switched into stand-by to prevent contamination.	The survey function „contamination“ is activated. A leak rate higher than the adjusted value was detected. <ul style="list-style-type: none"> • Gross leak • Switch off limit is set too low • Alarm delay time too short
W16	Turbo molecular pump service interval expired!	The service intervall for the turbo molecular pump is expired.
W17	Forepump service interval expired!	The service intervall for the fore pump is expired.
W18	Exhaust filter service interval expired!	The service intervall for the exhaust filter is expired.
W21	EEPROM write time out	EEPROM defective MC 68 defective
W22	EEPROM parameter queue overflow	EEPROM defective MC 68 defective
E23	24V of the OPTION socket is too high	The tension 24V at socket OPTION is too high.
E24	24V at socket OPTION is too low.	<ul style="list-style-type: none"> • Fuse F2 on the I/O board has blown
E25	Receded valve voltage too low (< 7V).	<ul style="list-style-type: none"> • I/O board is faulty.
W28	Real time clock reset! Please enter date and time!	<ul style="list-style-type: none"> • Battery at MC68 is discharged or faulty. • MC68 had been replaced.
E29	24V supply for fans ist too low (< 20V).	<ul style="list-style-type: none"> • Fuse F1 on wiring backplane has blown.
E30	24 V of the remote control is too low (> 20V).	<ul style="list-style-type: none"> • Fuse F1 on the I/O-board has blown.
W31	The offset voltage of the preamplifier is too high (> 5mV).	<ul style="list-style-type: none"> • The preamplifier is faulty.
W32	Preamplifier temperatur is too high (> 60°C).	<ul style="list-style-type: none"> • Ambient temperature is too high. • Air filter dirty.
W33	Preamplifier temperature is too low (< 2°C).	<ul style="list-style-type: none"> • Ambient temperature is too low. • Temperature sensor is faulty.

No.	Displayed Message	Description and possible solutions
E34	24V voltage at MSV board is too low!	Signal MVPZN on the MSV board is active. 24 V signal voltage is too low, $U < 18.3$ V. <ul style="list-style-type: none"> Fuse F1 on the MSV board has blown. 24 V power supply voltage is missing. <i>Switch off the UL1000 and UL1000 Fab!</i> The missing voltage will cause the exhaust valve on the scroll pump to close which in turn can lead to a contamination of the vacuum system. Reference voltage UREF on the MSV board XT7/1 is too high, $U > 5$ V.
E35	Anode-cathode voltage is too high!	<ul style="list-style-type: none"> MSV board is faulty. Anode-cathode voltage is higher than 130 V.
E36	Anode-cathode voltage is too low.	<ul style="list-style-type: none"> MSV board is faulty. Anode-cathode voltage is lower than 130 V.
E37	Suppressor voltage reference value too high!	Signal MFSZH on MSV board is active. Suppressor signal command variable is too high. <ul style="list-style-type: none"> Suppressor voltage has a short circuit. MSV is faulty.
E38	Suppressor potential too high!	Suppressor potential is higher than 363V. <ul style="list-style-type: none"> MSV board is faulty.
E39	Suppressor potential is too low.	Suppressor potential is lower than 297V. <ul style="list-style-type: none"> MSV board is faulty.
E40	The anode potential exceeds its nominal value by over 10%!	The actual anode potential exceeds its nominal value by 10%. The nominal value can be displayed in the service menu. <ul style="list-style-type: none"> MSV is faulty.
E41	The anode potential has dropped below its nominal value by over 10%!	The actual anode potential has dropped below its nominal value by 10%. The nominal value can be displayed in the service menu. <ul style="list-style-type: none"> Air inrush. MSV is faulty.
E42	Nominal value of the anode potential is too high!	Signal MFAZH on MSV board is active. <ul style="list-style-type: none"> Anode voltage has been short circuited. Nominal value of the anode voltage is too high. Anode voltage is limited to about 1,200 V.
E43	Cathode current is too high!	<ul style="list-style-type: none"> Signal MPKZH on MSV board is active. Cathode current is too high, $I > 3.6$ A. MSV is faulty.
E44	Cathode current is too low!	<ul style="list-style-type: none"> Signal MPKZN on MSV board is active. Cathode current is too low, $I > 0.2$ A. MSV is faulty.
W45	Emission for cathode 1 can not be switched on!	Signal MSIBE on MSV board is not active. Emission for cathode 1 can not be switched on. UL1000 and UL1000 Fab switches to cathode 2. Please order a new ion source.
W46	Emission for cathode 2 can not be switched.	Signal MSIBE on MSV board is not active. Emission for cathode 2 can not be switched on. UL1000 and UL1000 Fab switches to cathode 1. Order a new ion source.

No.	Displayed Message	Description and possible solutions
E47	Emission for both cathodes can not be switched on!	Signal MSIBE on MSV board is not active. Emission can not be switched on. Exchange the cathode by changing the ion source. After having exchanged the ion source it must be possible to switch on both cathodes manually via the service menu.
E48	Anode heater is faulty!	Signal MSAFD on MSV board is active. Anode heater fuse has blown. Replace fuse F2 on the MSV board.
E50	No communication with turbo pump.	Clock from the frequency converter has failed. No communication to the frequency converter.
E52	TMP frequency is too low!	<ul style="list-style-type: none"> • TMP frequency is too low! • Frequency converter is faulty. • Turbomolecular pump is faulty.
W53	Temperature at electronic unit is too high (>55°C)	<ul style="list-style-type: none"> • Ambient temperature too high. • Ventilation failure. • Air filter dirty and have to be changed.
E54	Temperatur at electronic unit is too high (>60°C).	<ul style="list-style-type: none"> • Ambient temperature is too high. • Internal ventilation has failed. • Air filters are dirty and must be exchanged.
W55	Temperature at electronic unit is too low (< 2°C)	<ul style="list-style-type: none"> • The temperature sensor on the wiring plane indicates $T < 2\text{ °C}$. Run-up time for the forevacuum pump will be longer. • Temperature sensor is faulty.
E56	Inlet pressure p1 too low!	$U < 0,27\text{ V}$; Cathode faulty. Change thermovac-sensor that measures p1.
E58	Foreline pressure p2 too low!	$U < 0,27\text{ V}$; Cathode faulty. Change thermovac-sensor that measures p2.
E60	p2 > 10 mbar after 5 minutes since power on	$PV > 3.8\text{ mbar}$ after $t > 5\text{ minutes}$ since switching on. Run-up time of the forevacuum pump is too long. <ul style="list-style-type: none"> • Forepump is faulty. • Valve V2 does not open.
E61	Emission fail.	Emission should be switched on. MSV subassembly indicates a fault. MENB emission current not within range.
W62	Flow through capillary to low.	In the sniffer mode the intake pressure of the sniffer line is controlled. If the pressure falls below the minimum limit, the flow through the capillary is too low (contamination) or the capillary is blocked (foreign objects, particles). The minimum limit can be set by the menu. Default value is 0.1 mbar. 6.6.1.3.
W63	Capillary broken	In the sniffer mode the intake pressure of the sniffer line is controlled. If the pressure exceeds the maximum limit, the flow through the capillary is too high (no leak tightness, broken capillary). The maximum limit can be set by the menu. Default value is 1.0 mbar. 6.6.1.3.
E73	Emission off (p2 too high)	$PV \gg 0.2\text{ or }3\text{ mbar}$ due to an inrush, e. g. The UL1000 and UL1000 Fab will again try to resume the measurement mode.
W76	Maximum of evacuation time was exceeded.	<ul style="list-style-type: none"> • Test sample has got a GROSS leak. • False adjustments of the max. time of evacuation.

No.	Displayed Message	Description and possible solutions
W77	Peak not in Range	The signal maximum has shifted to mass range alignment limits. <ul style="list-style-type: none"> • Signal of leak rate was instable during mass adjustment. Calibrate again. • Check the basic setting for the anode voltage through the service menu. • Check calibrated leak.
W78	Differences of signal between test leak open and closed is too low.	The amplifier voltage difference between opened and closed calibrated leak is less than 10 mV. Calibrated leak has not been closed properly.
W79	Signal of test leak is too small	Calibrated leak is too small or has not been opened. Preamplifier voltage < 10 mV.
W80	Please calibrate machine newly	The automatic request of calibration is activated (7.2.1.1) and has fulfilled at least one of the conditions: <ul style="list-style-type: none"> • 30 minutes are passed since energizing. • Temperature of the pre-amplifier has changed more than 5°C since the last calibration. • Massadjustments were changed.
W81	CAL Factor too low	The calculated factor falls out of the valid range (< 0,1). The old factor is retained. Possible fault cause: <ul style="list-style-type: none"> • The conditions for calibration have not been maintained. • The leak rate of the internal calibrated leak which was entered is much too small. • The internal test leak is defect.
W82	CAL Factor too high	The calculated factor is out of the valid range (> 10). The old factor is retained. Possible fault cause: <ul style="list-style-type: none"> • The conditions for calibration have not been maintained. • The leak rate of the internal calibrated leak which was entered is much too high or much too small. • The internal test leak is defect or empty.
W83	All EEPROM parameter lost. Please check your settings.	<ul style="list-style-type: none"> • EEPROM on back plane is empty and was initialized with default valves. Enter all parameters again. • The EEPROM might be faulty when warning comes up again after power up.
W85	Lost EEPROM parameter! Please check your settings!	<ul style="list-style-type: none"> • Writing access was interrupted. Please check all adjustments. • An update of software was done. In this case the notice can be ignored. • When warning comes up again after powering up the EEPROM might be faulty.
W86	AC/DC factor too low	Calibration conditions not maintained Value of leak rate not entered correctly Test leak faulty

No.	Displayed Message	Description and possible solutions
W87	AC/DC factor too high	Calibration conditions not maintained Value of leak rate not entered correctly Test leak faulty

9 Maintenance works

9.1 Hints

Maintenance works of level II and III at the UL1000 and UL1000 Fab should be performed exclusively by an person authorized from INFICON GmbH in Cologne .

Key for the correspondingly repair level:

- I Repair level I Customer
- II Repair level II Customer with technical training
- III Repair level III INFICON service engineer



Warning

Please observe the security remark in this chapter.



Warning

Make sure the tools and the vicinity by working on vacuum systems are kept clean.



Danger

For all maintenance on the UL1000 and UL1000 Fab the mains power must be disconnect first.

Notice Maintenance work must be performed as described in the following maintenance plan. If the maintenance rates will not be followed the UL1000 and UL1000 Fab will loose the warranty

A maintenance contract is recommended.

When it is time to maintenance the machine after 1500/4000/8000 hours it will be shown as a warning message at the display of the UL1000 and UL1000 Fab. The message will be displayed until the maintenance rate is met.

The 1500 hours maintenance can vary depending on the application of the leak detector.

9.2 **INFICON Service**

If equipment is returned to INFICON, indicate whether the equipment is free of substances damaging on health or whether it is contaminated. If it is contaminated also indicate the nature of the hazard. For this you must use a *Declaration of Contamination* form Fig. 1-1 which has been prepared by us which we will provide upon request or you may copy the form which has been reproduced on the next to the last page of this handbook.

Please attach this form to the equipment or enclose it with the equipment.

This *Declaration of Contamination* is required to meet German Law and to protect our personnel. INFICON must return any equipment without a *Declaration of Contamination* to the sender's address.

9.3 **Key for Maintenance Schedule**

- I Repair level I Customer
- II Repair level II Customer with technical training
- III Repair level III INFICON service engineer
- X Perform maintenance work after operating hours
- X₁ only operating hours, no limit of time
- 1 depends on environment and application
- 2 depends on process

Only for UL1000

To prevent any damage it is recommended to check the oil level and the oil coloration of the rotary vane pump UL1000 monthly.

The oil change rates for the fore pump D16 B oil are just recommendations and can vary depending on the application of the leak detector.

By working with the leak detector the fore pump has been specified with arctic oil and must be filled up only with Arctic oil (Cat No 20028181). By using an different oil INFICON GmbH in Cologne won't accept any warranty service of the fore pump more.

9.4 Maintenance Plan

Assembly	Required maintenance UL1000 and UL1000 Fab	Operation hours/Years				Repair level	Part no.
		1500	4000	8000	16000		
		1/4	1	2			
Vacuum system							
Forepump D16 B	Check oil and change if necessary	X				I u. II	
	Change oil	2	X			II	20028181
	Overhaul of forepump				X	III	
Scroll pump IWATA ISP 500	Exchange the scrollmodule			X		III	20000021R
Scroll pump Varian TS 620	Exchange the Tip Seal			X ₁		III	200001671
	Exchange the scrollmodule				X	III	200001665R
TMH 071	Replace the lubricant reservoir		X			II u. III	200000577
	Exchange of bearings				X	III	
Valve bloc	Clean the valves, replace seals for valves		2	X		III	200000594
	Take apart the valve bloc and clean it			2	X	III	200000593
	Replace filters for vent- and purge line		1	X ₁		I, II, III	200000683
	Adjust the Pirani			X		III	
Silencer (UL1000 Fab)	Exchange the silencer	X ₁				I, II, III	20099183
Exhaust Filter UL1000	check, drain off the exhaust filter	X				I, II, III	
	change the filter cell			X ₁		I, II, III	200000694
Electric							
Fans assembly	Clean fans at chassis plate and side wall e.g by pressurized air	1	X ₁			I	
	Exchange spare filter cell for fans chassis plate	1	X ₁			I	200000685

9.5 Maintenance groups

The maintenance plan for the UL1000 and UL1000 Fab can be subdivided in 4 maintenance groups.

- 1500 hours maintenance
- 4000 hours maintenance
- 8000 hours maintenance
- 16000 hours maintenance

9.5.1 1500 hours maintenance

The 1500 hours maintenance can be performed by an operator or a maintenance person.

The filter cell in front of the fans should be checked and replaced if dirty. By operating under worth conditions, the maintenance rates can be appropriately reduced.

Replace the silencer at the exhaust of the leak detector.

Notice An obstructed silencer can lead to damaging the scroll pump

Work to be performed	Required materials	P/N
Check and/or replace filters	<ul style="list-style-type: none"> • Spare filter cell for the fans 	200000685
Replace silencer	<ul style="list-style-type: none"> • Silencer for the exhaust (nur UL1000 Fab) 	20099183

9.5.2 4000 hours maintenance

The 4000 hours maintenance should be performed by an INFICON service technician or another authorised person at least yearly.

Independently of 4000 working hours the lubricant reservoir of the Turbomolecular pump and the oil in the Fore pump should be replaced at least yearly.

Notice The internal Helium standard leak certificate is valid for one year after delivery. The annual refurbishing of the internal Helium standard leak is recommended and an other certificate will be delivered. The internal Helium standard leak can be refurbished at INFICON GmbH in Cologne exclusively.

Work to be performed	Required materials	P/N
Replace the Lubricant Reservoir of the Turbomolecular Pump TMH 071	<ul style="list-style-type: none"> Lubricant Reservoir for TMH 071 	200000577
Change oil of the fore pump D16 (only UL1000)	<ul style="list-style-type: none"> Arctic oil 1l 	20028181
Check and/or replace Filters	<ul style="list-style-type: none"> Spare Filter Cell for the fans Spare Filter for venting and purge line Silencer for exhaust (only UL1000 Fab) Filter cell for oil filter (10 pcs.) only UL1000 	200000685 200000683 20099183 200000694
Functional check and adjustment		

The maintenance work will take approximately 3 hours.

9.5.3 8000 hours maintenance

The 8000 hours maintenance should be performed by an INFICON service technician or an other authorized person.

The scroll module of the scroll pump IWATA should be replaced every 8000 working hours, at least every 2 years.

After 8000 working hours, the „Tip Seal“ of the scroll module of the Varian pump should be replaced by an INFICON service technician. If the „Tip Seal“ has not been replaced, then after 12000 working hours the scroll module must be exchanged.

Work to be performed	Required materials	P/N
Exchange the scroll module (IWATA ISP-500B)	<ul style="list-style-type: none"> • Scroll module for IWATA ISP-500B 	200000217R
Replace the Tip Seal (Varian TS 620)	<ul style="list-style-type: none"> • Tip Seal 	2000001671
Change oil of the fore pump D16 (only UL1000)	<ul style="list-style-type: none"> • Arctic oil 1l 	20028181
Restore the Lubricant Reservoir TMH 071	<ul style="list-style-type: none"> • Lubricant Reservoir for TMH 071 	200000577
Replace the seals for valves	<ul style="list-style-type: none"> • Set of seals for valves 	200000594
Check and/or replace Filters	<ul style="list-style-type: none"> • Spare Filter Cell for the fans • Spare Filter for venting and purge line • Silencer for exhaust (only UL1000 Fab) • Filter cell for oil filter (10 pcs.) only UL1000 	200000685 200000683 20099183 200000694
Functional check and adjustement		

The maintenance work will take approximately 6.0 hours.

9.5.4 16000 hours maintenance

The 8000 hours maintenance should be performed by an INFICON service technician or an other authorized person.

After 16000 working hours the bearing of the turbo pump and the different kind of fore pump will reach their expecting life time.

The scroll module (IWATA ISP 500 or Varian TS 620) and the turbo pump must be replaced. An general overhaul of the DB16 B in the UL1000 is necessary.

Work to be performed	Required materials	P/N
Exchange the scroll module (IWATA ISP-500B)	<ul style="list-style-type: none"> • Scroll module for IWATA ISP-500B 	200000217R
Exchange the scroll module (Varian TS 620)	<ul style="list-style-type: none"> • Scroll module for Varian TS 620 	200001665R
Overhaul of the fore pump D16 (only UL1000)	<ul style="list-style-type: none"> • Fore pump D16 B generally overhaul 	
Replace TMH 071	<ul style="list-style-type: none"> • Turbo pump TMH 071 	200000569R
Take apart the valve bloc and clean it	<ul style="list-style-type: none"> • Set of seals for valve bloc 	200000593
Replace the seals for valves	<ul style="list-style-type: none"> • Set of seals for valves 	200000594
Check and/or replace Filters	<ul style="list-style-type: none"> • Spare Filter Cell for the fans • Spare Filter for venting and purge line • Silencer for exhaust (only UL1000 Fab) • Filter cell for oil filter (10 pcs.) only UL1000 	200000685 200000683 20099183 200000694
Functional check and ajustement		

The maintenance work will take approximately 10.0 hours.

9.6 Description of the maintenance work

Only trained specialist staff can perform more changes at the UL1000 and UL1000 Fab than the normally maintenance work.



Danger

The protective conductor screw at the chassis plate should not be loosened. The operator is not protected against electric shock by working without a protective conductor line.

9.6.1 Opening the UL1000 and UL1000 Fab

Required tool

Wedge (Accessories).



Danger

Unplug the power cord from the UL1000 and UL1000 Fab before opening the side cover.

- Separate the UL1000 and UL1000 Fab from other vacuum components at the inlet port.
- Remove the side covers by using the wedge (Fig. 9-1). Push down the wedge to release the side covers.
- The location for the wedge is marked with two dot marks at the top side of the side covers (See Fig. 9-1/2).
- Open the both side covers in the same way.

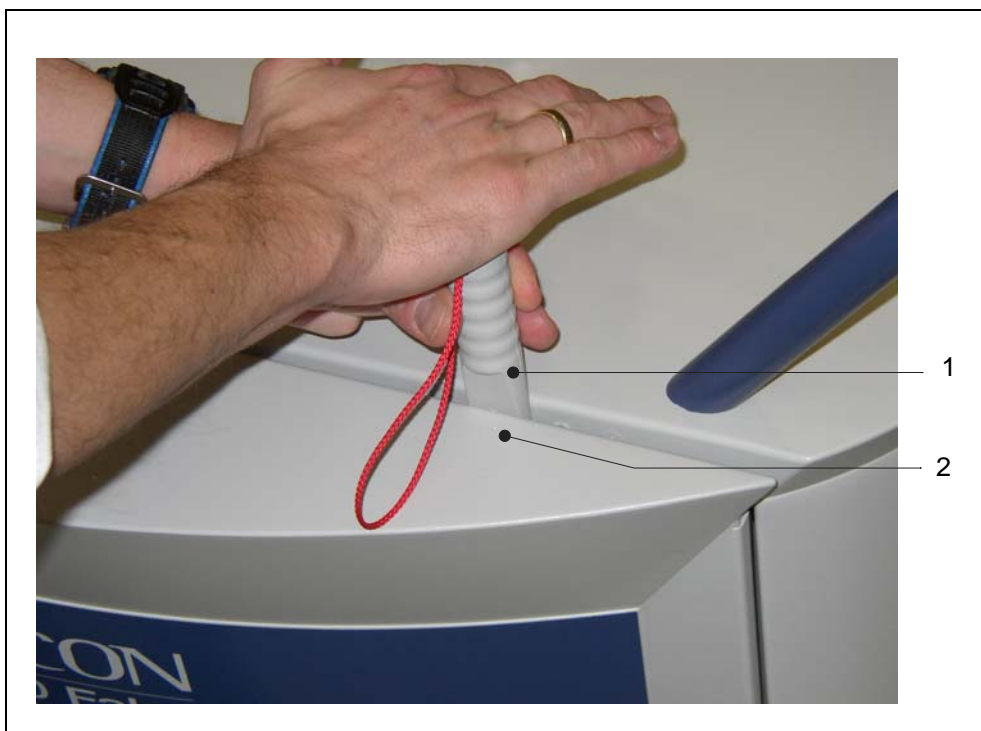


Fig. 9-1 Opening the UL1000 and UL1000 Fab

Pos.	Description	Pos.	Description
1	Wedge	2	Side cover

9.7 Check/Replace the filter cell

The filter cell in front of the fans should be checked every three months (under worth conditions monthly). If the filters cells are dirty then you should replced them. They allow to reduce the cooling power of the turbo pump and the leak detector.

Required tool

Wedge (Accessories).

Required material

Spare Filter cell P/N 200000685

Danger

Unplug the power cord from the UL1000 and UL1000 Fab before opening one of the side covers.

- Please refer to section [9.6.1](#) to open the unit.

- Catch the filter cell by using your two fingers (Fig. 9-2/a) and pull it out of the guide plate. You can also press the filter to the front with an appropriate tool through the ejection drilling (Fig. 9-2/3) located at the back side.

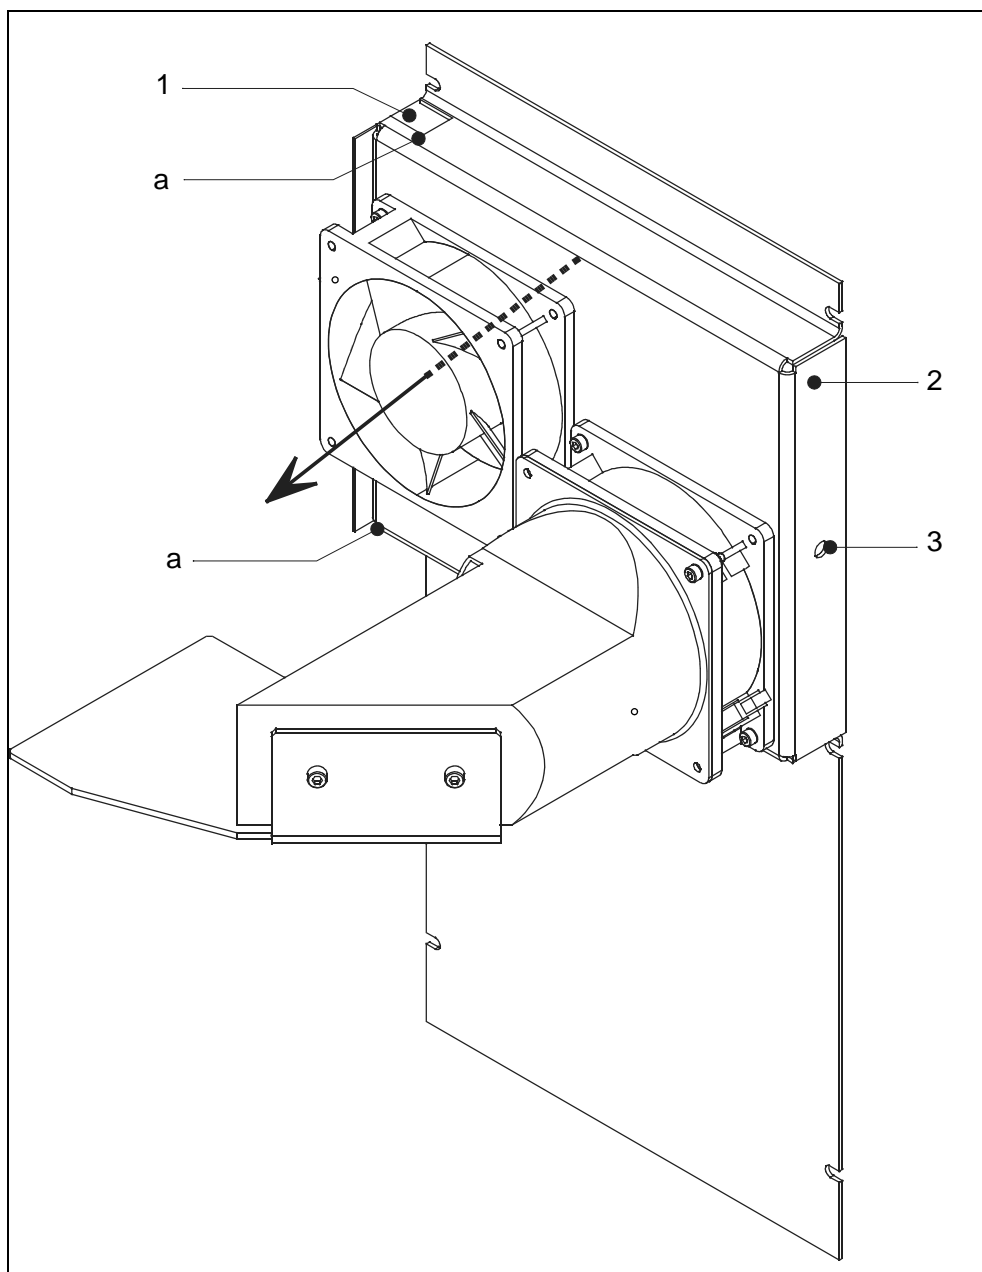


Fig. 9-2 Replace the filter cell

Pos.	Description	Pos.	Description
a	Filter handle	2	Guide plate of the filter cell
1	Filter cell	3	Ejection drilling

- Observe the right direction by replacing the new filter cell. The direction is indicated in Fig. 9-2 with a black arrow.

Notice The white surface of the filter cell which is marked with „clean air side“ must show towards the fans.

- Push the filter cell into the guide plate and close the UL1000 and UL1000 Fab by pressing the side cover.

9.8 Replacing the Exhaust Silencer

Required material

Exhaust silencer (only UL1000 Fab) P/N 20099183

- Switch off the UL1000 Fab.
- Unscrew the exhaust filter from the exhaust. Screw the new exhaust filter onto the thread of the exhaust and tight it.

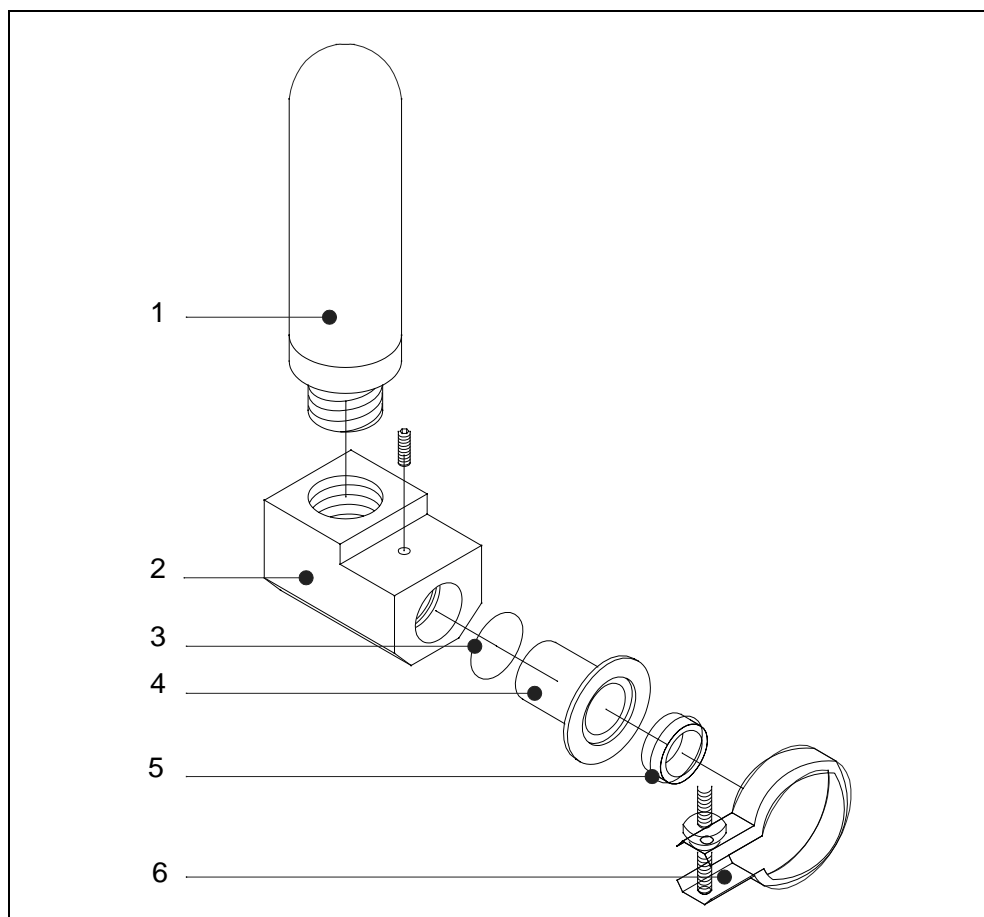


Fig. 9-3 Replacing the exhaust silencer

Pos.	Description	Pos.	Description
1	Silencer	4	Reducing piece
2	Silencer adapter	5	Centering ring DN 25
3	O-Ring 20 x 3	6	Clamping ring

9.9 Check/Draining off the exhaust filter

Required tool

Wrench SW 17 mm

During the pumping process there can be oil accumulated by absorbing air. The task of the exhaust filter is to filter this oil. The exhaust filter is supplied with a valve which will open if the filter is obstructed and will lead the absorbed air out. Thus, the fore pump will be not damaged because of an obstructed exhaust line.



Danger

Toxic oil vapour which is lead out when the exhaust filter is obstructed will pollute the environment.

Therefore check regularly the oil level of exhaust filter. If the oil level of the plexiglas cabinet is about 1/3 of the maximum, then do the following to drain the exhaust filter off:

- Switch off the machine and take the side covers down. Please refer to section [9.6.1](#).



Danger

Disconnect the power cord from the UL1000 before opening one of the side covers.

- Unscrew the hexagon screw from the bottom side of the plexiglas cabinet and drain off using an adequate vessel.
- Please turn in and tighten the screw after draining.
- Check the oil level of the rotary vane pump D16 Band fill it up if necessary.

9.9.1 Replace the filter cell

Required tool

Wedge (Accessories).

Required material

Spare filter cell P/N 200000694 (10 pcs.)

The fixture position of the exhaust filter is shown in [Fig. 9-4](#).

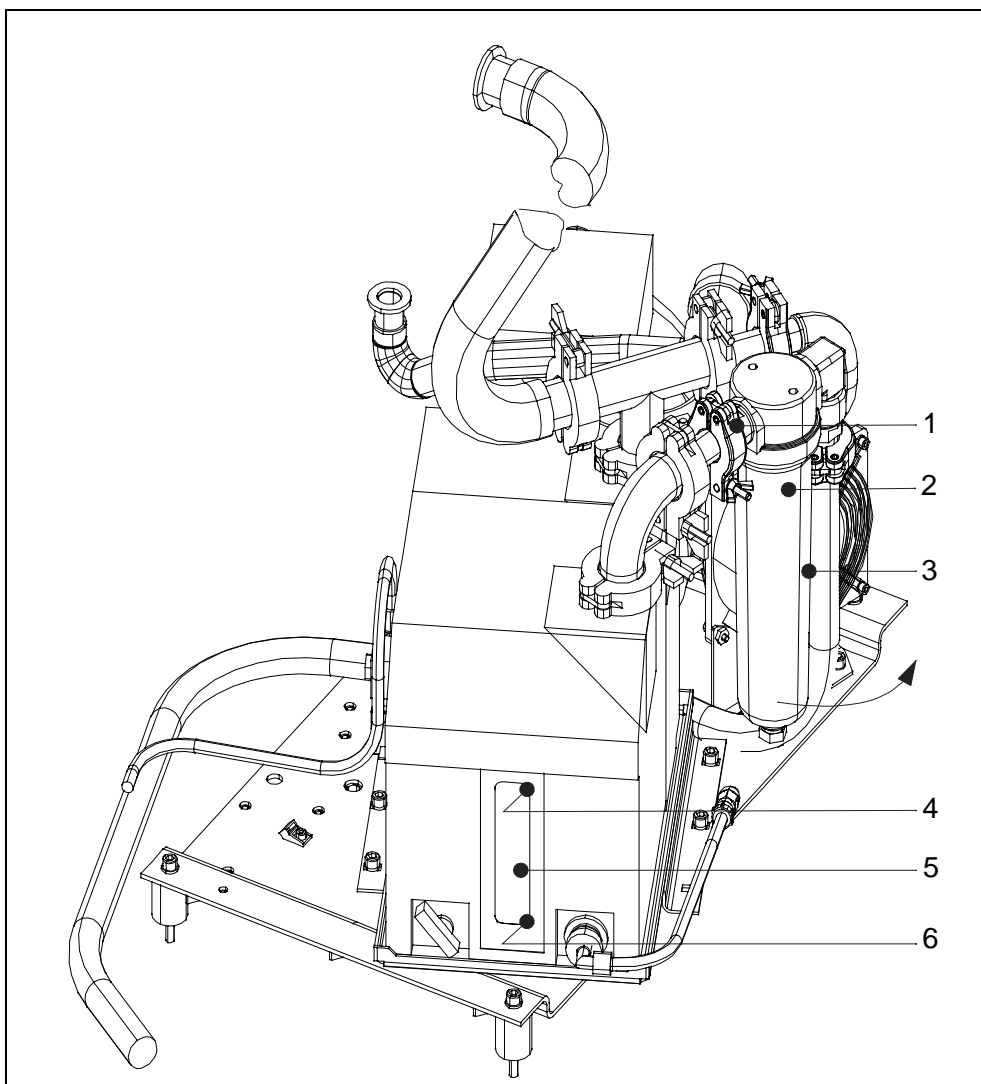


Fig. 9-4 Fixture position of the exhaust filter

Pos.	Description	Pos.	Description
1	Clamping ring KF 16	4	Maximum oil level mark
2	Filter cell	5	Oil level show glas
3	Plexiglas cabinet	6	Minimum oil level mark

By replacing the filter cell, please do the following:

- Loosen the clamping ring at the exhaust filter (Fig. 9-4/1) and swing out the whole filter according to the arrow direction so that the plexiglas cabinet can be took out.
- Unscrew the plexiglas cabinet counter-clockwise drain it off. Dispose oil according to the local prescriptions. Clean the plexiglas cabinet.
- Loose the mounting screw (Fig. 9-5/3) with the hand, take out the filter cell and dispose it.

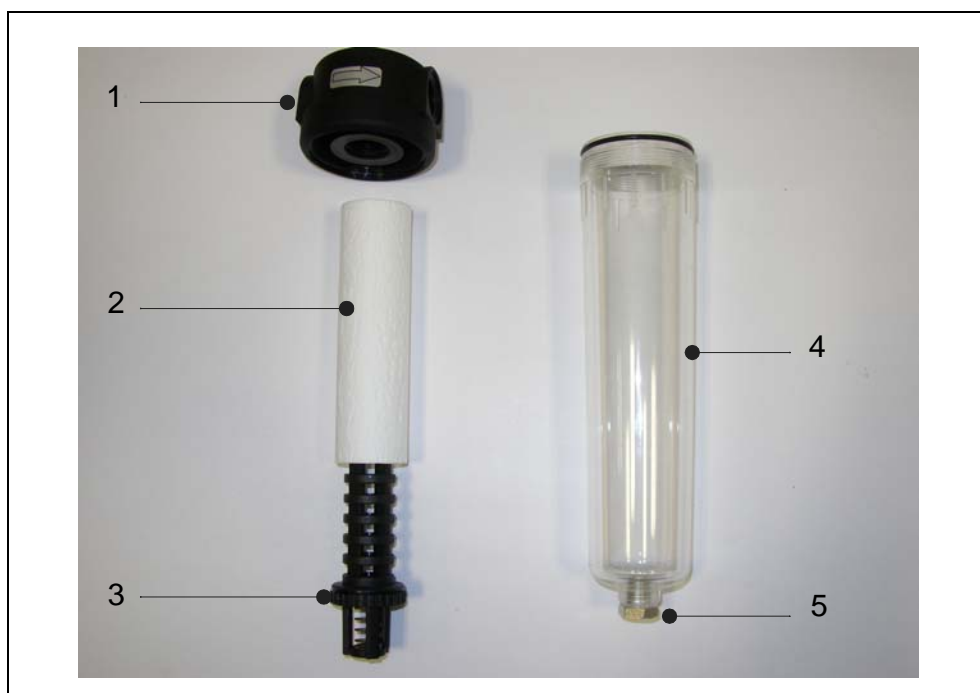


Fig. 9-5 Filter cell of the exhaust filter

Pos.	Description	Pos.	Description
1	Filter hood	4	Plexiglas cabinet
2	Filter cell	5	Oil-drain plug
3	Mounting screw		

- Adjoin a new filter cell to the mounting screw and screw it. (hand-screwed).
- Finally screw the plexiglas cabinet hand-tight. Swing in the exhaust filter again and fixe it at the initial position by using the tension ring KF16.

9.10 Check, supply Oil D16 B

It is recommended to check the oil level and the coloration of the pump oil every month.

Please refer to section 9.6.1 to open the unit.

Danger

Disconnect the power cord from the UL1000 before opening one of the side covers.

Required tool

Wedge

The oil level and the coloration of the oil can be visually checked through the oil level indicator of the fore pump. The oil level of the vacuum pump must be between the minimum and the maximum marks. See [Fig. 9-6/3,4 and 5](#)

Notice By checking and supplying oil switch off the pump first!

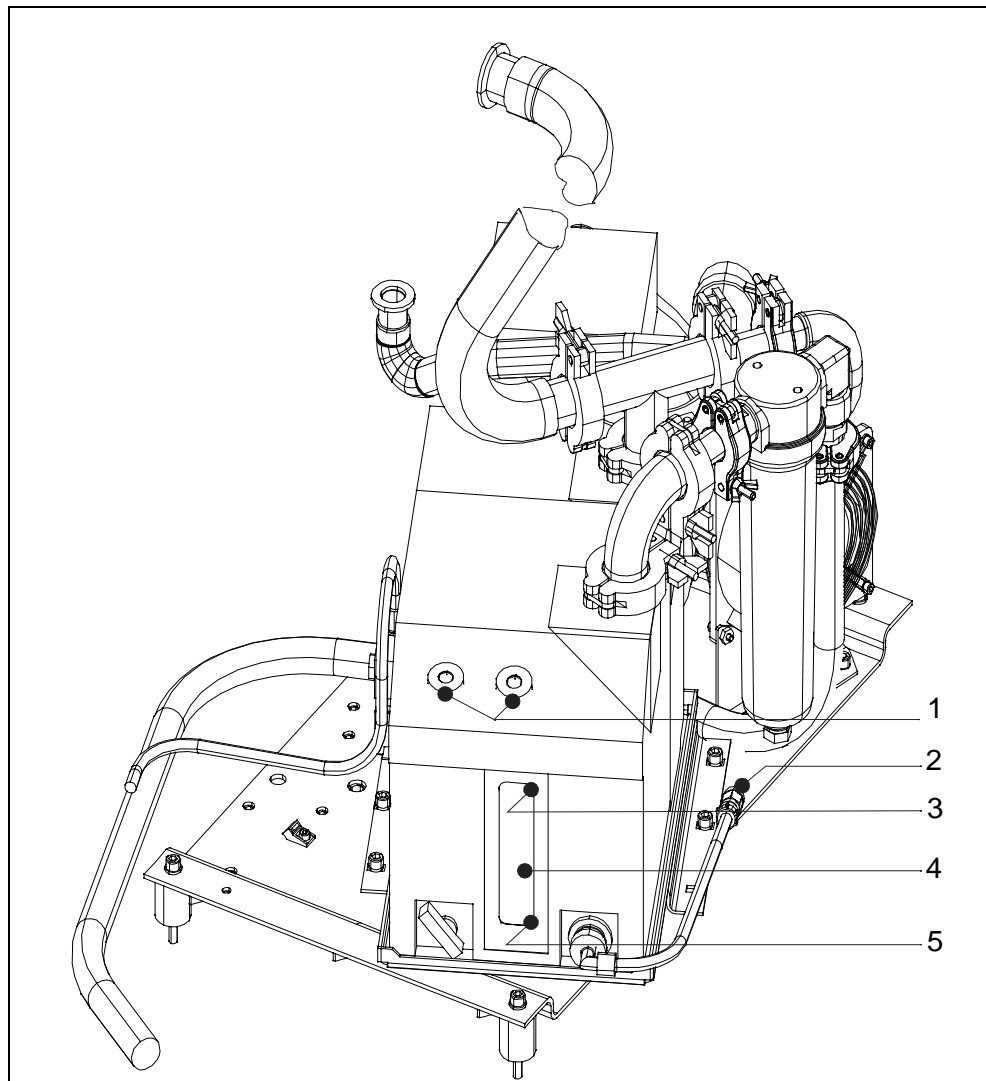


Fig. 9-6 Change oil D16 B

Pos.	Description	Pos.	Description
1	Oil-fill plug	4	Oil level indicator
2	Oil-drain plug	5	Minimum oil level mark
3	Maximum oil level mark		

If the oil level is under the minimum oil level mark, supply oil as described in section [9.11](#).

9.11 Change oil D16 B

Dirty, chemical and mechanical used oil must be changed.
Before and after storing the pump for a long time change oil.



Warning

The oil change should be done while the pump is still warm.

Required tool

Wedge.
Allan keys SW 5 mm; 8 mm.
Wrench 13 mm.

Required material

Artic oil 1l. P/N 20028181

- Switch off the machine and remove the side covers. Please refer to section 9.6.1 to open the machine.
- Undo the cable binder for the draining hose and connect it to the oil vessel.
- Unscrew the draining screw at the hose end (Fig 9-6/2) using an 5 mm allan key. Use the 3 mm key for counting the screw.
- Draining off the old oil in an appropriate vessel. When the oil flow considerably diminishes screw again the draining screw.
- Switch on the pump shortly (max.10 s) and switch off again. Remove the draining screw again and the drain the remaining oil.



Warning

Oil can damage the environment. Therefore dispose the oil according to the local environment prescriptions.

- Screw again the draining screw. Check the seal and if necessary exchange it. Fasten the oil hose with the cable binder again.
- Unscrew the fill up screw (Fig 9-6/1) and fill the new oil until the max. level. The maximum oil quantity is 0.8 l.
- Screw again and tight it.

Notice After switching on the oil should be degased. For that operate the leak detector in the Stand by mode and open the gas ballast valve for approximately 20 min.

9.12 *Turbomolecular pump TMH 071*

The PFEIFFER turbomolecular pump requires a maintenance annually or every 4000 working hours. Please refer to the PFEIFFER operating instructions PM 800 504 BN/F and PT 0017 BN/B for more detailed informations. The maintenance work should be performed by the INFICON service or an authorized INFICON service partner.

9.13 *Scroll Pump (UL1000 Fab only)*

Take the maintenance rates of the different scroll pump (IWATA, VARIAN) from the maintenance plan in chapter [9.4](#).

The maintenance of the scroll pump should be exclusively performed by the INFICON service or an authorized INFICON service partner.

Appendix

A Diagram

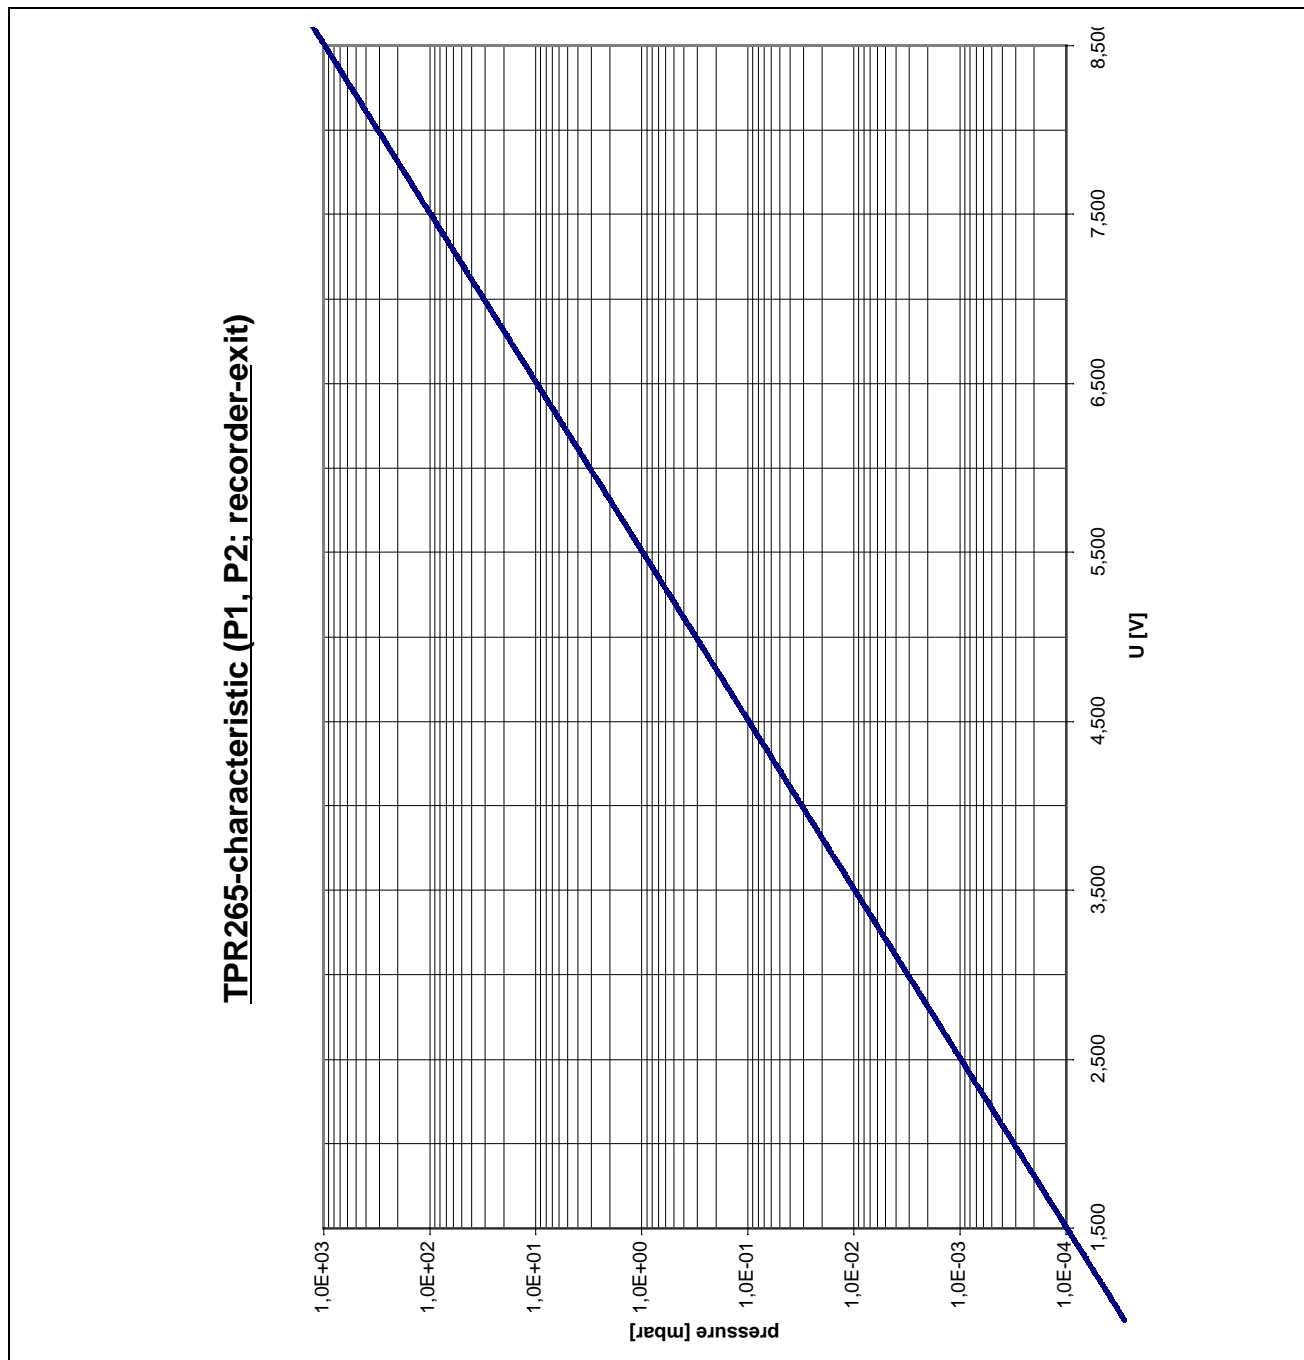


Fig. 10-1

technical handbook

(0604)

iina70e-appendix.fm

B Index

A		H	
Access Control	6-39	Hand Set	2-6, 2-10
Accessories	2-6–2-7	Helium leak rate	1-8
alarm	6-14	Humidity	1-9
Ambient temperature	1-9	I	
Audio alarm	1-9	I CAL	6-32
Automatic Internal Calibration	7-2	INFICON Service	1-6
B		information	6-37
background	6-6	Inlet area background suppression	6-25
built-in leak standard	7-1	Inlet Port	2-10
C		Inlet port	1-8
Calibration	6-16	Inlet pressure	1-8
calibration	3-1	Installation	2-1
contract		Ion source	1-8
• maintenance and service	1-4	ion source	4-2
contrast	6-6	L	
Control Panel	4-3	language	6-31
D		Leak rate	1-8
Detectable masses	1-8	loud speaker	5-3
Digital In	2-8	M	
Digital Out	2-6–2-7	Machine factor	6-20
Dimensions	1-9	maintenance contract	1-4
E		Manual Internal Calibration	7-2
Electrical Connections	2-4	Mass spectrometer	1-8
Exhaust	2-10	mass spectrometer	4-2
exhaust filter	6-31	Measurement range	1-8
external calibration	7-2	MENU	4-3
F		Mode	
FINE	4-8	• Sniffer	1-8
FINE only	6-19	• Vacuum	1-8
G		N	
Gas ballast	2-11	Noise level	1-9
GROSS	4-8	P	
		Pinpoint	6-14

Power	
• consumption	1-9
pressure	4-3
Protection	
• Type of	1-9
Pumping speed	1-8
Purge	2-6, 2-11
Purging	5-2
Purpose	1-6

Q

QT100	4-9
-------	-----

R

Recorder	2-6, 2-9
Relay Output	6-12
RS232	2-6, 2-9
run-up mode	5-1
Run-up time	1-8

S

Safety Symbols	1-1
scroll pump	4-7
Service Center	1-6
service contract	1-4
Setpoint	6-14
sniff mode	4-9
sniffer line	4-1, 4-9
Sniffer mode	1-8
START Button	3-2
Startup	3-1
STOP Button	3-3

Storage temperature	1-9
---------------------	-----

T

Temperature	
• ambient	1-9
• storage	1-9
time axis	5-4
Time&Date	6-31
Transportation	2-1
trend mode	5-4
Trigger	5-3
Trigger alarm	6-14
turbo pump	4-7
turbomolecular pump	4-2
Type of protection	1-9

U

ULTRA	4-8
ULTRA only	6-19

V

Vacuum Diagramm	4-2
Vacuum mode	1-8
Valves	1-9
Vent	2-6, 2-11
volume	6-13

W

Weight	1-9
--------	-----

Z

Zero	6-26
ZERO Button	3-3



INFICON GmbH, Bonner Strasse 498, D-50968 Cologne, Germany
Phone: +49 (0)221 347-40 Fax: +49 (0)221 347-41429 E-mail: leakdetection@inficon.com

UNITED STATES TAIWAN JAPAN KOREA SINGAPORE GERMANY FRANCE UNITED KINGDOM HONG KONG
Visit our website for contact information and other sales offices worldwide. www.inficon.com

Dokument: iina70e1-h (0604)