

## The PHD-4 Portable Helium Detector

Wide range,  
High Performance System



# The Agilent Advantage

## Global Application Support Expertise When & Where You Need It


- Thousands of portable SIPD sniffing helium detectors are in daily use worldwide
- Helium leak testing is the preferred solution in a broad range of applications and industries
- Native language application specialists available locally



**Maximizing  
Productivity  
and Uptime**

## High Performance Instruments Wide Range, PHD-4 Portable Helium Detector

- High Sensitivity to Helium
- Easy to Use
- Truly Portable
- Versatile
- Dependable

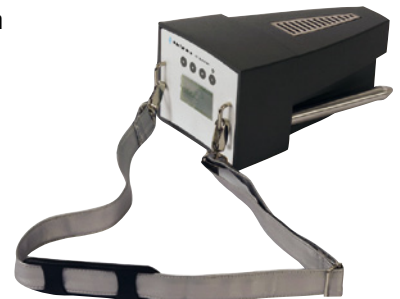

## Industry Leading Service & Support Get The Most From Your Investment

- The system is designed to allow easy replacement of sampling line components in the field
- Exchange units are available for rapid field replacement
- Support programs can be tailored to meet your most demanding needs



# Features and Benefits



## High Sensitivity to Helium - Can detect very small leaks

- High Sensitivity (2 ppm) to helium, three orders of magnitude better than industry standard, due to SIPD (proprietary and patented Selective Ion Pump Detection)
- Excellent selectivity for helium allows you to read helium leaks and ignore all other gases
- Two levels of sensitivity are available for application dependent use
- Autozero function allows leak detection even in unstable helium background environments



## Easy to Use - No training required

- State-of-the-art microprocessor control allows great simplicity of operation
- Fully automatic start-up with auto-diagnostics
- Ready for test in less than 3 minutes
- Intuitive display screen
- Visual and audio indicators (standard headphone connection)
- No tuning required



## Truly Portable - Compact and light

- The PHD-4 weighs only 2,6 Kg (5.7 lbs) including the battery
- Its compact size allows it to be easily carried anywhere
- Its ergonomic design allows comfortable use for extended periods



## Versatile - Suitable for many different applications


- Wide range of uses: replaces or can be used with existing methods such as bubble test or pressure decay
- Able to detect both very small and large leaks
- Can operate either on battery power or connected to a mains power supply
- Displayed messages can be viewed in several languages (English, French, German, Italian)
- Standard Analog and RS232 Serial I/O



## Dependable - Long term operation

- Automatic backflow valve helps prevent helium saturation, ensuring fast recovery time as well as long life of sensing element.
- CE, CSA/US approved for global standardization

# The New PHD-4 Portable Helium Detector

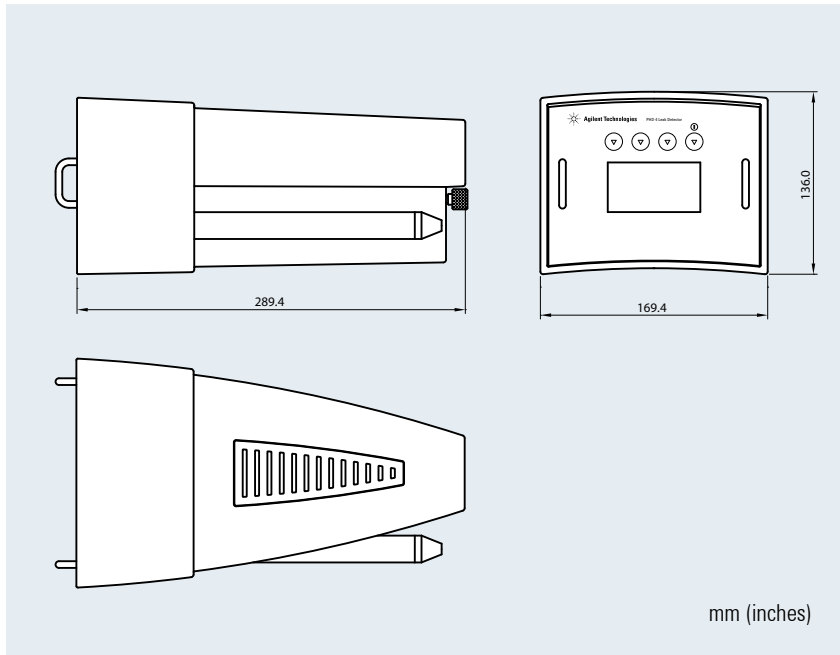

Technical Specifications		
Lowest Detectable Helium Concentration:	2 ppm (parts per million)	
Lowest Detectable Helium leak:	$5 \times 10^{-6}$ mbar l/s $5 \times 10^{-6}$ atm cc/s $5 \times 10^{-7}$ Pa m <sup>3</sup> /s	
Response Time:	< 2 sec	
Recovery Time:	<10 sec (from 50 ppm to 0 ppm)	
Start up time, including self check-up:	3 min approx.	
Power Supply:	<ul style="list-style-type: none"> <li>12 Vdc, 1.2 A Rechargeable Battery included</li> <li>110-240 V 50-60 Hz Transformer/Battery Charger included</li> </ul>	
Battery operation Time:	4 hours	
Maximum Signal Drift:	10 ppm/10 min	
Operating Conditions	Temperature:	+5°C to +35°C
	Humidity:	90% maximum relative humidity
Storage Conditions	Temperature:	-20°C to +60°C
Weight:	2,6 Kg (5.7 lbs)	
Compliance to Norms:	CE approved CSA/US approved	



Ordering Information	
<b>PHD-4 Complete Package</b>	Part Number
Travel Case includes	9694640
<ul style="list-style-type: none"> <li>PHD-4 Basic Unit</li> <li>Spare Battery</li> <li>Transformer/Battery Charger (110-240V)</li> <li>Carrying Strap</li> <li>Probe Set</li> <li>15-pin I/O connector</li> <li>CD Instruction Manual</li> <li>Probe adapter</li> </ul>	
<b>PHD-4 Basic Package</b>	Part Number
Includes	9694600
<ul style="list-style-type: none"> <li>PHD-4 Basic Unit</li> <li>Transformer/Battery Charger (110-240V)</li> <li>Carrying Strap</li> <li>15-pin I/O connector</li> <li>CD Instruction Manual</li> <li>Probe adapter</li> </ul>	
<b>Accessories</b>	Part Number
<ul style="list-style-type: none"> <li>Probe Set</li> </ul>	9693515
<ul style="list-style-type: none"> <li>Capillary leak with refillable reservoir and gauge</li> </ul>	9693540
<ul style="list-style-type: none"> <li>Probe with 10 meter (30') maximum Sampling Line</li> </ul>	9693525
<ul style="list-style-type: none"> <li>Telescoping Extension Probe</li> </ul>	9693520
<b>PHD-4 Replacement Part Kit</b>	Part Number
Includes	9694660
<ul style="list-style-type: none"> <li>Sampling Pump with Fittings</li> <li>Probe with Sampling Line</li> <li>Tip Probe Filter</li> <li>Internal Filter (Kit of 5 units)</li> </ul>	
<b>Individual Replacement Parts</b>	Part Number
<ul style="list-style-type: none"> <li>Spare Battery</li> </ul>	SR 03.702609
<ul style="list-style-type: none"> <li>Transformer/Battery Charger (110-240V)</li> </ul>	SR 03.702888
<ul style="list-style-type: none"> <li>Sampling Pump with Fittings</li> </ul>	SR 03.702513
<ul style="list-style-type: none"> <li>Probe with Sampling Line</li> </ul>	SR 03.702538
<ul style="list-style-type: none"> <li>Tip Probe Filter</li> </ul>	SR 28.900012-01
<ul style="list-style-type: none"> <li>Internal Filter (Kit of 5 units)</li> </ul>	SR 03.702959
<ul style="list-style-type: none"> <li>Carrying Strap</li> </ul>	SR 03.702791
<ul style="list-style-type: none"> <li>15-pin I/O connector</li> </ul>	SR 03.702894
<ul style="list-style-type: none"> <li>Travel Case</li> </ul>	SR 03.702890
<ul style="list-style-type: none"> <li>PHD-4 Probe adapter</li> </ul>	SR 03.703054
<ul style="list-style-type: none"> <li>Protective Bag (pictured at left)</li> </ul>	VSPHD4BAG

Contact Agilent for Rack mounting or specific application requirements.

# Application



## Large Vessels and Bioreactors

The PHD-4 offers unmatched accuracy and repeatability, presenting a unique solution that is cost effective and very well suited for the leak range specifications of this application.

Biotech and pharmaceutical industries used to rely on pressure decay and bubble test methods for finding leaks in their large bioreactors. The PHD-4 has established a new standard of quality, significantly increasing production yields.

- Fermenters
- Sterilizers
- Freeze Dryers



## Underground Pipes and Storage Tanks

The portability and light weight of the PHD-4 plays a major role in this application. Underground pipes and storage tanks (UST) are slightly pressurized with helium which, due to its high mobility, can escape through small leaks and migrate to the surface, where it can be easily detected by the PHD-4.

The accuracy, portability and light weight of this unit greatly simplifies this process, particularly in difficult construction sites or rough terrain.

- Gas distribution lines
- Under and above ground containers and storage tanks
- Telecommunication and high voltage underground cables



Courtesy of Fraunhofer UMSICHT, Germany

## Water Heating and Cooling Pipes

The PHD-4 allows leak location without interruption of the normal operation, by mixing helium with the water in the circuit. Until recently, the precise and rapid location of leaks in buried pipes has been very difficult.

In the event of a leak, helium desorbs from the fluid and diffuses to the surface, where it is easily detected. Leaks in pipeline systems such as district heating systems, drinking or chilled water systems and steam pipe networks incur high costs due to losses and corrosion damage.


- Heater exchangers and steam condensation lines
- Water pipes
- Radiant heating systems



## Airplane Fuel Tanks and Lines

PHD-4 technology is approved worldwide by airplane manufacturers and operators as the standard for the location of leaks in aircraft fuel tanks and in oxygen distribution lines. Agilent works with an exclusive distributor for aircraft applications. Please contact your local Agilent office for more information.

- Fuel tanks
- Oxygen distribution lines

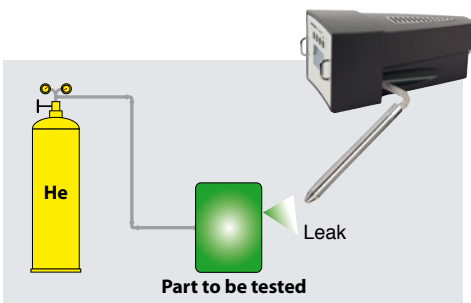

## Other Applications

The PHD-4 is in daily use in many other applications. Its portability makes it ideal for factory and field maintenance. Here is a partial list of other applications:

- Components and systems for the Chemical and Petrochemical Industries
- Compressed air components and delivery systems
- Process gas delivery lines in Semiconductor fabrication industry

# The PHD-4 Portable Helium Detector

The PHD-4 is a portable compact leak detector which includes a battery for autonomous use in the field and uses helium as a tracer gas. It allows detection of very small leaks in objects where a slight helium pressure has been introduced.

## Principle of operation

The PHD-4 principle of operation is based on a Varian patented technology, Selective Ion Pump Detection (SIPD). The sensor incorporates a quartz capillary tube maintained under high vacuum by an ion pump. The quartz tube is heated with a platinum filament and becomes permeable to helium. As the partial pressure of helium in the ion pump increases, so does the current drawn by the ion pump, proportional to the pressure, indicating the helium concentration present in the test probe of the PHD-4.

## WHY USE HELIUM AS A TRACER GAS?

Helium is a superior choice as tracer gas for a number of reasons:

- It is inert, non-toxic and non-flammable
- It can pass easily through leaks due to its small atomic size, allowing the detection of very small leaks
- It is present in the atmosphere at only 5 ppm, thus reducing the possibility of false readings
- It is highly mobile, allowing rapid desorption and short measurement times
- When used properly, it is the most economical and allows the highest sensitivity, of all trace gases

## Agilent Technologies

### USA

**Agilent Technologies**  
121 Hartwell Avenue,  
Lexington MA 02421, USA  
Tel: +1 781 861 7200  
Fax: +1 781 860 5437  
Toll free: +1 800 882 7426

### ITALY

**Agilent Technologies Italia SpA**  
via F.lli Varian 54  
10040 Leini, (Torino), Italy  
Tel: +39 011 9979 111  
Fax: +39 011 9979 350  
Toll free: 00 800 234 234 00

### BENELUX

**Agilent Technologies Netherlands B.V.**  
Groenelaan 5  
1186 AA Amstelveen  
Tel. +31 23 5377033  
Fax. +31 23 5382400  
Toll free: 00 800 234 234 00

### Agilent Technologies Belgium SA/NV

Pegasus Park, De Kleetlaan 5 bus 9  
1831 Diegem - Belgium  
Tel. +31 23 5377033  
Fax +31 23 5382400  
Toll free: 00 800 234 234 00

### FRANCE

**Agilent Technologies France**  
7 avenue des Tropiques  
Z.A. de Courtaboeuf - B.P. 12  
91941 Les Ulis cedex, France  
Tel: +33 (0) 1 69 86 38 84  
Fax: +33 (0) 1 69 86 29 88  
Toll free: 00 800 234 234 00

### GERMANY and AUSTRIA

**Agilent Technologies**  
Sales & Services GmbH & Co. KG  
Lyoner Str. 20  
60 528 Frankfurt am Main, GERMANY  
Tel: +49 69 6773 43 2230  
Fax: +49 69 6773 43 2250  
Toll free: 00 800 234 234 00

### UK and IRELAND

**Agilent Technologies UK Ltd.**  
6 Mead Road, Oxford Industrial Park  
Yarnton, Oxford OX5 1QU, UK  
Tel: +44 (0) 1865 291570  
Fax: +44 (0) 1865 291571  
Toll free: 00 800 234 234 00

### INDIA

**Agilent Technologies India Pvt. Ltd.**  
G01. Prime corporate Park, 230/231,  
Sahar Rd., Opp. Blue Dart Centre,  
Andheri (East), Mumbai, 400 099 India  
Tel: +91 22 30648287/8200  
Fax: +91 22 30648250  
Toll free: 1800 113037

### CHINA

**Agilent Technologies (China) Co. Ltd**  
No.3, Wang Jing Bei Lu,  
Chao Yang District,  
Beijing, 100102, China  
Tel: +86 (0)10 64397888  
Fax: +86 (0)10 64391318  
Toll free: 800 820 3278

### TAIWAN

**Agilent Technologies Taiwan Limited**  
20 Kao-Shuang Road  
Ping-Chen City, 32450  
Taiwan, R.O.C.  
Tel: +88 6 34959281  
Toll free: 0800 051 342

### JAPAN

**Agilent Technologies Japan, Ltd.**  
8th Floor Sumitomo Shibaura Building  
4-16-36 Shibaura Minato-ku  
Tokyo 108-0023, Japan  
Tel: +81 3 5232 1253  
Fax: +81 3 5232 1710  
Toll free: 0120 655 040

### KOREA

**Agilent Technologies Korea Ltd.**  
Shinsa 2nd Bldg. 1F  
966-5 Daechi-dong  
Kangnam-gu, Seoul, Korea 135-280  
Tel: +82 (0)2 2194 9449  
Fax: +82 (0)2 3452 3947  
Toll free: 080 222 2452

### SINGAPORE

**Agilent Technologies Singapore (Sales) Pte Ltd**  
1 Yishun Avenue 7  
Singapore 768923  
Tel: (65) 6377 1688  
DID: (65) 6215 8045  
Fax: (65) 6754 0574  
Toll Free: 1800 276 2622

### SEA

**Agilent Technologies Sales (Malaysia) Sdn Bhd**  
Unit 201 Level 2 Uptown 2,  
2 Jalan SS 21/37 Damansara Uptown  
47400 Petaling Jaya, Selangor  
Malaysia.  
Tel: (60) 3 7727 8808  
Fax: (60) 3 7727 1209  
Toll Free: 1800 276 2622



This information is subject to change without notice

© Agilent Technologies, Inc. 2012  
Published February 29, 2012  
VPD-0112EN



**Agilent Technologies**