



# OPERATING INSTRUCTIONS

EN

Translation of the original instructions

## TC 110 PB

Electronic Drive Unit

**PFEIFFER**  **VACUUM**

# Table of contents

<b>1</b>	<b>About this manual</b>	<b>4</b>
1.1	Validity	4
1.2	Conventions	4
1.2.1	Safety instructions	4
1.2.2	Pictographs	5
1.2.3	Instructions in the text	5
1.2.4	Abbreviations	5
<b>2</b>	<b>Safety</b>	<b>6</b>
2.1	Safety precautions	6
2.2	Proper use	7
2.3	Improper use	7
2.4	Functional safety	7
<b>3</b>	<b>Product description</b>	<b>8</b>
3.1	Product identification	8
3.1.1	Product characteristics	8
3.1.2	Scope of delivery	8
3.2	Range of application	8
3.3	Function	9
3.4	Dimensions	9
3.5	General connection description	10
3.6	Accessory connection	10
<b>4</b>	<b>Connection diagram</b>	<b>11</b>
<b>5</b>	<b>Connection "Profibus"</b>	<b>12</b>
5.1	Connections	12
5.2	Configuring the connection	12
5.2.1	Profibus status LED	12
5.3	Modules	12
5.3.1	PPO1	13
5.3.2	PPO3	14
5.3.3	control-/status word	14
5.3.4	control-/status byte	15
5.3.5	Parameterization data	15
5.4	Expanded diagnostics data	15
<b>6</b>	<b>Connection "X3"</b>	<b>16</b>
6.1	Pin assignment	16
6.2	Operation via "X3" connection	16
6.2.1	Voltage supply	16
6.2.2	Inputs	17
6.2.3	Outputs	17
6.2.4	RS-485	18
<b>7</b>	<b>The Pfeiffer Vacuum parameter set</b>	<b>19</b>
7.1	General	19
7.1.1	Conventions	19
7.2	Parameter overview	19
7.2.1	Annotation	19
7.2.2	Operation with DCU	19
7.2.3	Only for Profibus	20
7.2.4	Control commands	20
7.2.5	Status requests	21
7.2.6	Set value settings	22
7.3	Configuring the connections	22

---

7.3.1	Digital outputs on "X3" . . . . .	22
7.3.2	Accessory connection . . . . .	23
7.3.3	Analog output on "X3" . . . . .	23
7.3.4	Control via interface . . . . .	24
7.3.5	Digital inputs on "X3" . . . . .	24
7.4	Operation with the Pfeiffer Vacuum parameter set . . . . .	24
7.4.1	Factory settings . . . . .	24
7.4.2	Checking the adjustments . . . . .	24
7.4.3	Gas type dependent operations . . . . .	24
7.4.4	Set value power consumption . . . . .	25
7.4.5	Run-up time . . . . .	25
7.4.6	Adjusting the rotation speed switchpoint . . . . .	26
7.4.7	Rotation speed setting mode . . . . .	27
7.4.8	Standby . . . . .	27
7.4.9	Rotation speed set value . . . . .	27
7.4.10	Operation mode backing pump . . . . .	28
7.4.11	Operation with accessories . . . . .	29
7.4.12	Vent modes . . . . .	29
7.4.13	Monitoring the thermal load . . . . .	30
7.5	Switching on/off the pump . . . . .	30
7.5.1	Switching on . . . . .	30
7.5.2	Switching off . . . . .	30
<b>8</b>	<b>Pfeiffer Vacuum Protocol for "RS-485" . . . . .</b>	<b>31</b>
8.1	Telegram frame . . . . .	31
8.2	Telegrams . . . . .	31
8.2.1	Example 1 . . . . .	31
8.2.2	Example 2 . . . . .	32
8.3	Applied data types . . . . .	32
<b>9</b>	<b>Malfunctions . . . . .</b>	<b>33</b>
9.1	General . . . . .	33
9.2	Operation display via LED . . . . .	33
9.3	Error codes . . . . .	33
	<b>Declaration of conformity . . . . .</b>	<b>36</b>

# 1 About this manual

## 1.1 Validity

This operating manual is for customers of Pfeiffer Vacuum. It describes the functioning of the designated product and provides the most important information for safe use of the unit. The description follows applicable EU guidelines. All information provided in this operating manual refers to the current state of the product's development. The documentation remains valid as long as the customer does not make any changes to the product.

Up-to-date operating instructions can also be downloaded from [www.pfeiffer-vacuum.com](http://www.pfeiffer-vacuum.com).

## 1.2 Conventions

### 1.2.1 Safety instructions

The safety instructions in Pfeiffer Vacuum operating instructions are the result of risk evaluations and hazard analyses and are oriented on international certification standards as specified by UL, CSA, ANSI Z-535, SEMI S1, ISO 3864 and DIN 4844. In this document, the following hazard levels and information are considered:

<b>DANGER</b>
<b>Imminent danger</b> Indicates an imminent hazardous situation that will result in death or serious injury.
<b>WARNING</b>
<b>Possibly imminent danger</b> Indicates an imminent hazardous situation that can result in death or serious injury.
<b>CAUTION</b>
<b>Possibly imminent danger</b> Indicates an imminent hazardous situation that can result in minor or moderate injury.
<b>NOTICE</b>
<b>Command or note</b> Command to perform an action or information about properties, the disregarding of which may result in damage to the product.

## 1.2.2 Pictographs



Prohibition of an action to avoid any risk of accidents, the disregarding of which may result in serious accidents



Warning of a displayed source of danger in connection with operation of the unit or equipment



Command to perform an action or task associated with a source of danger, the disregarding of which may result in serious accidents



Important information about the product or this document

## 1.2.3 Instructions in the text

→ Work instruction: here you have to do something.

## 1.2.4 Abbreviations

<b>DCU:</b>	Display Control Unit
<b>HPU:</b>	Handheld Programming Unit
<b>TC:</b>	Electronic drive unit for turbopump
<b>PB:</b>	Profibus version
<b>TPS:</b>	Mains pack
<b>DI / DO:</b>	Digital input / digital output
<b>AI / AO:</b>	Analog input / analog output
<b>f:</b>	Rotation speed (derived from frequency in Hz)
<b>[P:000]:</b>	Parameter of the electronic drive unit with number

## 2 Safety

### 2.1 Safety precautions



#### Duty to inform

Each person involved in the installation or operation of the unit must read and observe the safety-related parts of these operating instructions.

→ The operator is obligated to make operating personnel aware of dangers originating from the unit or the entire system.



#### WARNING

#### Danger of unsafe electrical installation

Safe operation after installation is the responsibility of the operator.

- Do not independently modify or change the pump and electrical equipment.
- Make sure that the system is integrated in an emergency off safety circuit.
- Consult Pfeiffer Vacuum for special requirements.



#### WARNING

#### Danger of electric shock

In case of defect, the parts connected to the mains supply are under voltage.

→ Always keep the mains connection freely accessible so that you can disconnect it at any time.

- **Power supply:** The turbopump power supply must apply to the requirements of double insulation between mains input voltage and operating voltage according to the regulations of IEC 61010 and IEC 60950. Therefore Pfeiffer Vacuum recommends to use exclusively original-power packs and -accessories. Only in this case Pfeiffer Vacuum is able to guarantee the compliance of the European and North American guidelines.
- Observe all safety and accident prevention regulations.
- A safe connection to the protective earthing conductor (PE) is recommended (protection class III).
- Regularly check the proper observance of all safety measures.
- Before carrying out any work disconnect the unit and all associated installations safely from the mains.
- Do not loosen any plug connection during operations.
- The unit has been accredited with protection class IP 30. Take necessary measures when installing into ambient conditions, which afford other protection classes.
- Keep leads and cables well away from hot surfaces (> 70 °C).
- Only separate the pump and the electronic drive unit from each other after disconnecting the supply voltage and the complete standstill of the pump.

## 2.2 Proper use



### NOTICE

#### EC conformity

The manufacturer's declaration of conformity becomes invalid if the operator modifies the original product or installs additional components.

→ Following installation into a plant and before commissioning, the operator must check the entire system for compliance with the valid EU directives and reassess it accordingly.

- The electronic drive unit TC 110 PB operates designated Pfeiffer Vacuum turbopumps and their accessories in a bus system Profibus-DP.

## 2.3 Improper use

Improper use will cause all claims for liability and warranties to be forfeited. Improper use is defined as usage for purposes deviating from those mentioned above, especially:

- use of accessories or spare parts, which are not named in this manual
- operation of the devices in areas with ionizing radiation

warranty seal

PFEIFFER VACUUM

#### Closure seal

The product is sealed at the factory. Damaging or removal of a closure seal leads to the loss of liability and warranty entitlements.

→ Do not open the product within its warranty period!

→ For process-related shorter maintenance intervals please contact the Pfeiffer Vacuum Service.

## 2.4 Functional safety

The drive unit (electronic drive unit) TC 110 PB performs the safety function "Safe Limited Speed" according to EN 61800-5-2. In case of excess rotation speed the commutation of the pump motor is switched off and the drive transferred into the safe condition.

Summary of characteristic data for use in safety-relevant applications:

#### Characteristics according to IEC 61508 and IEC 62061

Characteristic	Safety Integrity Level	PFH	PFD <sub>av</sub>	Proof Test Interval T
Value	SIL CL 2	$4.2 \cdot 10^{-9} / \text{h}$	$3.7 \cdot 10^{-4}$	20 a

#### Characteristics according to EN ISO 13849-1

Characteristic	Performance Level	Category	MTTF <sub>d</sub>	Average Diagnostic Coverage DC
Value	PL d	Cat. 3	high (134 a)	medium (90 % - <99 %)

- During the expected device life span of up to 20 years no proof test is required.
- If the user calculates his safety application with the specified values for 20 years, the safety control system must be taken out of operation after 20 years and returned to the manufacturer. A proof test cannot be accomplished by the user.

## 3 Product description

### 3.1 Product identification



This product has been tested to the requirements of CAN/CSA-C22.2 No. 61010-1, second edition, including Amendment 1, or a later version of the same standard incorporating the same level of testing requirements.

For information about other certifications, if applicable, please see the signet on the product or:

- [www.tuvdotcom.com](http://www.tuvdotcom.com)
- TUVdotCOM-ID 0000021320

#### 3.1.1 Product characteristics

The electronic drive unit TC 110 PB is an integrated component of the turbopump. Its purpose is to drive, monitor and control the entire pump.

Characteristics	TC 110 PB
Connection voltage TC	24 V DC
Connection panel	Profibus
Turbopump HiPace	10, 30, 80, 300, SplitFlow 50

To correctly identify the product when communicating with Pfeiffer Vacuum, always have the information from the rating plate available.

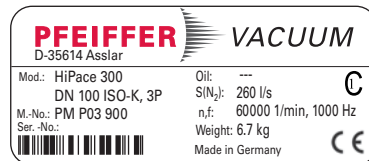


Fig. 1: Example for a rating plate

#### 3.1.2 Scope of delivery

- CD-ROM for Profibus connection with GSD file

### 3.2 Range of application

Pfeiffer Vacuum electronic drive units TC 110 PB must be installed and operated in the following ambient conditions.

Installation location	weather protected (indoors)
Protection category	IP 30
Protection class	III
Temperature	+5 °C to +40 °C (up to +35 °C with air cooling)
Relative humidity	max. 80 %, at T ≤ 31 °C, up to max. 50% at T ≤ 40 °C
Atmospheric pressure	750 hPa - 1060 hPa
Installation altitude	5000 m max.
Degree of pollution	2
Overvoltage category	II



### 3.3 Function

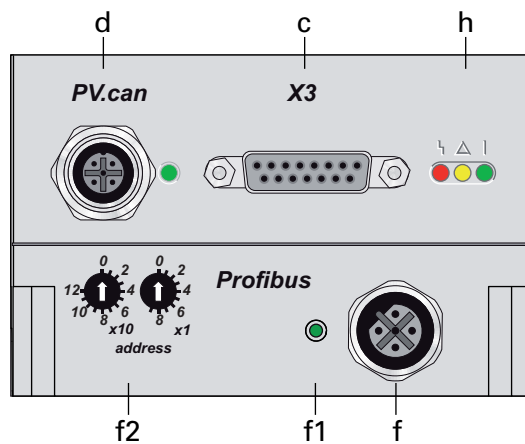



Fig. 2: Profibus panel on the TC 110 PB

- |   |   |    |                            |
|---|---|----|----------------------------|
| b | Connections "accessory A+B" (not shown) | f1 | Status LED "Profibus"      |
| c | Connection "X3"                         | f2 | Address selection switches |
| d | Service connection "PV.can"             | h  | Operation monitoring LED   |
| f | Connection "Profibus"                   |    |                            |






### 3.4 Dimensions

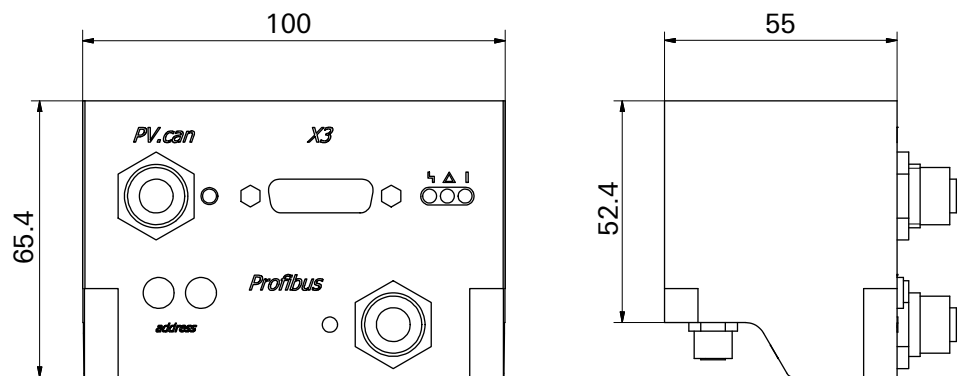The TC 110 PB electronic drive unit has the dimensions given below, differing from the standard TC 110 unit.

→ Take into account any turbopump installation dimensions differing from those in their operating manual.




### 3.5 General connection description

	<b>PV.can</b> M12 casing socket with screw coupling and LED for the connection of an integrated pressure measurement and for Pfeiffer Vacuum Service purposes.
	<b>X3</b> D-sub 15 pole female socket for the connection of a remote control.
	<b>Profibus</b> M12 socket (B-coded) with screw coupling and LED for the connection of a Profibus DP bus system.
	<b>accessory</b> M8 socket with screw coupling for the connection of Pfeiffer Vacuum accessories.
	Casing socket on the rear side of the electronic drive unit for the connection to the turbopump.

### 3.6 Accessory connection

The electronic drive unit is equipped with 4 accessory ports additionally.

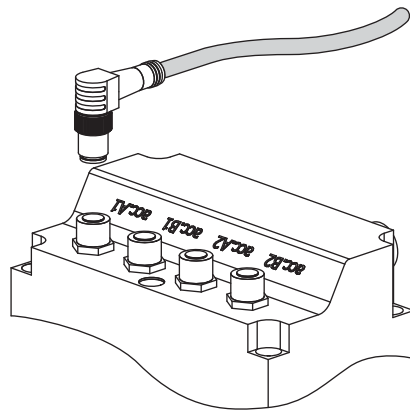

- ⇒ Plug the control lead of the accessory into the corresponding connection of the electronic drive unit.
- ⇒ Configure the accessory connection according to the parameter set (see p. 22, chap. 7.3). Factory settings:
  - acc. A1 = Air cooling
  - acc. A2 = Backing pump
  - acc. B1 = Venting valve
  - acc. B2 = Casing heating

Table 1: Overview of factory preset accessory connections on the TC 110 PB

# 4 Connection diagram


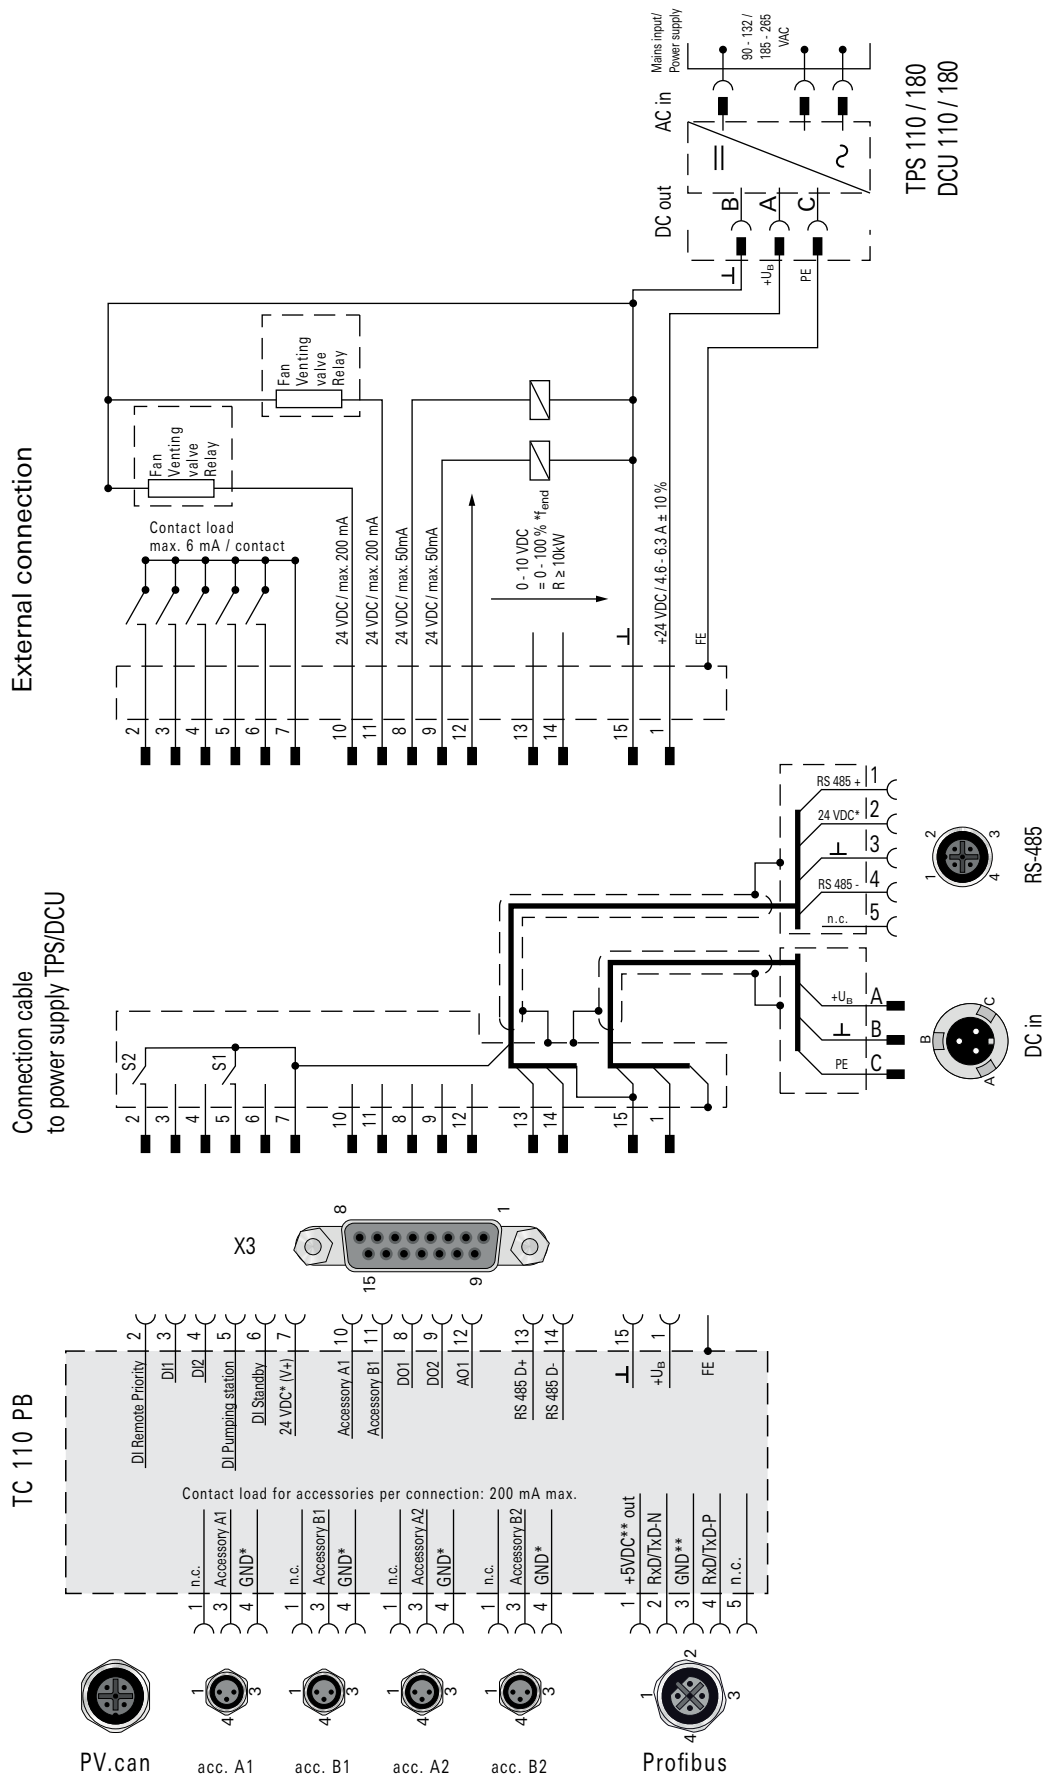


Fig. 3: Connection diagram and assignment of the TC 110 PB

## 5 Connection "Profibus"

### 5.1 Connections

The connection to a Profibus-DP system is possible via the connection designated "Profibus" (M12, B-coded). The interface is electrically isolated from the maximum supply voltage.

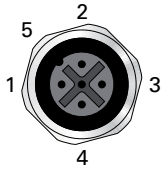

Pin	Assignment
1	+5 V DC**
2	RxD/TxD-N
3	GND** (for Pin 1)
4	RxD/TxD-P
5	not connected

→ Make Profibus connection using suitable Pfeiffer Vacuum accessories and cabling in compliance with the valid regulations.

### 5.2 Configuring the connection

To start Profibus communication, the TC 110 PB must be configured by a Profibus master using the GSD file.

- Set a valid and unique Profibus interface address in decimal coding (1-125) using the address selector switches.
  - A new address is adopted only after a restart (supply voltage "Off/On").
- Fit rubber plugs at the address selector switches evenly and as deep as possible to achieve the stated protection class.

#### 5.2.1 Profibus status LED

State within 1s	Meaning
Off	Profibus on device side not active
Green flashing	Baud rate detected, no user data exchange
2 x green flashing	Fail-safe
Illuminated green	User data exchange
Red flashing	No Baud rate detected
2 x red flashing	Parameterization/configuration data incorrect
Illuminated red	Profibus not possible (invalid address, initialisation error)

### 5.3 Modules

Precisely one of the following modules can be used:

Module	Description	I data (byte)	O data (byte)
PPO1	Control/status bits, rotation speed set and actual value, noncyclical parameter access	12	12
PPO3	Control/status bits, rotation speed set and actual value	4	4
control-/status word	Control/status bits	2	2
control-/status byte	Control/status bits	1	1

- Data format is always "high word/byte first" (Motorola)
- All Pfeiffer Vacuum parameters of data type 0, 1, 2 and 7 can be used for the parameter channel (PPO1) and the parameterization data.
  - Additionally the Pfeiffer Vacuum parameters **[P:303]**, **[P:360]** to **[P:369]** provide error codes according to their coding (see p. 15, chap. 5.4).
  - Pfeiffer Vacuum parameter **[P:349]** provides the value 0xAC20C210.
  - Avoid conflicts with existing functions!

- Access to the functions in the modules can be influenced by connecting the electronic drive unit externally (e.g. remotely).
- Output data describe the data communication from the master (e.g. PLC) to the electronic drive unit.
- Input data describe the data communication from the electronic drive unit to the master (e.g. PLC).

### 5.3.1 PPO1

Byte	Output data (12 bytes)	Input data (12 bytes)
0-7	Parameter channel with request	Parameter channel with response
8-9	Control word	Status word
10-11	Target value in rotation speed setting mode (Hz)	Actual rotation speed (Hz)

#### Parameter channel

Byte	0								1								2-3	4-7			
Bit	7	6	5	4	3	2	1	0	Parameter number, bit								0	Parameter value			
	Request/response								0									0	Parameter value		
									10	9	8	7	6	5	4	3	2	1	0		

#### Request (output data)

Value	Description	Corresponding response
0	No request	0
1	Read parameter value	2 or 7 (for data type 0, 1 or 7) 7 or 11 (for data type 2)
3	Write parameter value as integer	2, 7 or 8
10	Write parameter value (only data type 2) as a round to nearest number value to IEEE 754	7, 8 or 11

#### Response (input data)

Value	Description
0	No response
2	Transfer parameter value as integer
7	Request not executable, value contains error number*
8	No operation possible via Profibus
11	Transfer parameter value as a round to nearest number to IEEE 754

*Error number	Description
0	Invalid parameter number Function already used in control word
1	Parameter value not changeable
2	Below/above value range
5	Incorrect data type
101	Invalid request
102	Parameter value not readable
103	Invalid format

#### Control word/status word

Bit	Output data	Input data
15	-	Reserved (do not evaluate)
14	-	Reserved (do not evaluate)
13	-	0
12	Enable venting	0
11	Heating	Pump rotates
10	Enable process data (control word and parameter channel): 0 = ignore 1 = accept	Set rotation speed attained
9	-	Process data enabled

Bit	Output data	Input data
8	Standby	Rotation speed switch point attained
7	Error acknowledgement; -> automatic trip switch	Warning
6	Rotation speed setting mode	Automatic trip switch (switching back on only by pumping station off and back on)
5	-	1
4	-	1
3	-	Errors
2	-	Operation (no error, pumping station and motor pumps are on, no automatic trip switch)
1	-	0
0	Pumping station	Standby (no error, no automatic trip switch, enable process data)

### 5.3.2 PPO3

Byte	Output data (4 byte)	Input data (4 byte)
0-1	Control word (see PPO1)	Status word (see PPO1)
2-3	Target value in rotation speed setting mode (Hz)	Actual rotation speed (Hz)

### 5.3.3 control-/status word

Byte	Output data (2 byte)	Input data (2 byte)
0-1	Control word (see PPO1)	Status word (see PPO1)

### 5.3.4 control-/status byte

Bit	Output data (1 byte)	Input data (1 byte)
7	Error acknowledgement, -> automatic trip switch (switching back on only by pumping station off and back on)	Warning, general
6	Standby	Warning, temperature
5	Enable venting	Operation: No error, pumping station and motor pump are on, no automatic trip switch
4	Heating	Rotation speed switch point attained
3	-	Errors
2	Enable process data (control byte): 0 = ignore 1 = accept	0
1	-	Pump rotates
0	Pumping station	Set rotation speed attained

### 5.3.5 Parameterization data

To set a configuration that deviates from the delivery state ("start-up configuration") or to define actions in the Profibus "fail-safe" state and/or when response monitoring lapses (e.g. master fails) ("fail-safe action"), up to six parameters, described with predefined values on a case-by-case basis, can be defined for all modules. Eight-byte parameterization data are added per parameter in the following format (undefined points to be assigned 0):

Byte	Description
0, bit 7	0: Parameter for "start-up configuration" 1: Parameter for "fail-safe action"
0, bit 6	0: Parameter value is integer 1: Parameter value rounded to nearest number to IEEE 754
2-3	Parameter number
4-7	Parameter value

Designation	Example of module designation
Module without additional parameter	PPO1, PPO3, control-/status word, control-/status byte
Module with one to six additional parameters	PPO1 (1 prm) ... (6prm) PPO1 (1 prm) ... (6prm) control-/status word (1 prm) ... (6prm) control-/status byte (1 prm) ... (6prm)


## 5.4 Expanded diagnostics data

Byte	Designation	Description
1-6	Standard diagnostics Profibus	Defined by Profibus specification
7	Length of the external diagnostics data	
8-36		Reserved
37-38	Current error code	0: No error 1-999: Device error* 1001-1999: Device warning 1-999* 2000: Unrecognised module 3xxx: Parameterization data incorrect in accordance with error number in the parameter channel**
39-69	Internal state	

\*Device errors and warnings are anchored in the electronic drive unit (see p. 33, chap. 9.3).

\*\* see PPO1

## 6 Connection "X3"



Remote control options and voltage supply are provided via the 15-pin D-sub connector with the designation "X3" on the TC 110 PB.

→ Shielded connectors and cables must be used.

The following information display the factory setting. Configuration is possible using the Pfeiffer Vacuum parameter set.



### NOTICE

#### Danger of the drive unit being destroyed

Cutting the plug connection "X3" can lead to the destruction of the electronic drive unit, when the power supply is still switched on.

- Before pulling the connector "X3" necessarily disconnect the power supply.
- Switch off the power supply unit.

### 6.1 Pin assignment

Pin	Function	Designation factory settings
1	+24 V DC input	Voltage supply for the electronic drive unit
2	DI Remote priority	Control via interface "X3"; open: off; V+: set and priority over other digital inputs
3	DI1	Enable venting; open: off; V+: on
4	DI2	Heating; open: off; V+: on
5	DI Pumping station	open: off; V+: on and error acknowledgement
6	DI Standby DI Error acknowledgement	Standby rotation speed; open: off; V+: on Error acknowledgement: V+ pulse (500 - 2000 ms)
7	+24 V DC* output (V+)	Reference voltage for all digital inputs
8	DO1	GND: no; V+: yes ( $I_{max} = 50 \text{ mA}/24 \text{ V}$ )
9	DO2	GND: no; V+: yes ( $I_{max} = 50 \text{ mA}/24 \text{ V}$ )
10	Accessory output A1	open: off; V+: on
11	Accessory output B1	open: off; V+: on
12	AO1	Actual rotation speed; 0-10 V DC is equivalent to 0-100%; $R_L > 10 \text{ k}\Omega$
13	RS-485	D+
14	RS-485	D-
15	Ground (GND)	Ground connection for the electronic drive unit; Reference ground for all digital inputs and all outputs

### 6.2 Operation via "X3" connection

#### 6.2.1 Voltage supply

##### +24 V DC Input / Pin 1

The electrical connection at "X3" is carried out via connecting cables of the Pfeiffer Vacuum accessory or by customized configuration on Pin 1 and Pin 15.

##### +24 V DC\* Output / Pin 7

Inputs 2 - 6 are activated by connecting them with +24 V DC to Pin 7 (active high). They can also be activated via an external PLC. The functions are deactivated by "PLC high level" and by "PLC low level".

- PLC high level: +13 V to +33 V
- PLC low level: -33 V to +7 V
- $R_i$ : 7 k $\Omega$
- $I_{max} < 200 \text{ mA}$  (with RS-485, if existing)



## 6.2.2 Inputs

The digital inputs at connection "X3" are used to connect various functions of the electronic drive unit. Functions are assigned to the inputs DI1 - DI2 ex factory. These can be configured via interface RS-485 and the Pfeiffer Vacuum parameter set.

### DI Remote priority / Pin 2

V+ : The connection "X3" has operation priority over all other digital inputs.  
open: Remote priority inactive

### DI1 (Enable venting) / Pin 3

V+ : Venting is enabled (venting according to venting mode)  
open: Venting locked (no venting is performed)

### DI2 (Heating) / Pin 4

V+ : Heating on  
open: Heating off

### DI Pumping station / Pin 5

The turbopump is placed in operation and connected pumping station components (e.g. backing pump, venting valve, air cooling unit) are triggered. Any ongoing error messages are reset when their cause has been eliminated.

V+ : Malfunction acknowledgement and pumping station on  
open: Pumping station off

### DI Standby - Error acknowledgement / Pin 6

In standby mode, the turbopump operates at a specified rotor speed < nominal rotation speed. Factory setting and recommended operation are 66.7 % of the nominal rotation speed.

V+ : Standby activated

V+ : Reset ongoing error messages when cause has been eliminated with a pulse of 500 - 2000 ms duration

open: Standby off, operation at nominal rotation speed

## 6.2.3 Outputs

The digital outputs at the connection "X3" can be loaded with a maximum of 24 V / 50 mA per output. All outputs listed below are configurable by the Pfeiffer Vacuum parameter set via interface RS-485 (description related to factory settings).

### DO1 (Rotation speed switchpoint attained) / Pin 8

Active high after the rotation speed switchpoint is attained. Rotation speed switchpoint 1 is factory-set to 80% of the nominal rotation speed. It can, for example, be used for a "pump operational" message.

### DO2 (No errors) / Pin 9

When the supply voltage has been established, digital output DO2 permanently outputs 24 V DC which means "no errors". Active low in case of error (collective error message).

### Accessory outputs / Pin 10 and Pin 11

The accessory outputs can be loaded with a maximum of 24 V / 200 mA per output. Additional functions can be assigned to the accessory inputs and outputs via DCU, HPU or PC. Works settings:

- Accessory output A1: A connected air cooling unit is activated.

- Accessory output B1: A connected venting valve is activated, if venting release is transmitted via input DI1.

**AO1 Analog output 0-10 V DC / Pin 12**

A rotation-speed-proportional voltage (0-10 V DC equals 0 - 100 % x  $f_{Nominal}$ ) can be picked up via the analog output (load  $R \geq 10\text{ k}\Omega$ ). Additional functions (optionally current/power) can be assigned to the analog output via DCU, HPU or PC.

**6.2.4 RS-485**

One Pfeiffer Vacuum display and control panel (DCU or HPU) or an external PC can be connected respectively to the electronic drive unit via Pin 13 and Pin 14 of the connection "X3" on the electronic drive unit.



CAUTION	
<b>Danger of electric shock</b>	
The insulation measures of the bus system are designed only for use with safety extra-low voltage.	
→ Connect only suitable devices to the bus system.	

- The group address of the electronic drive unit is 961.
  - All units connected to the bus must have differing RS-485 device addresses [**P:797**].
- Establish the connections according to the specification of the interface RS-485.  
 → Connect all units with RS-485 D+ and RS-485 D- to the bus.

Designation	Value
Serial interface	RS-485
Baud rate	9600 bauds
Data word length	8 bits
Parity	none (no parity)
Start bits	1
Stop bits	1

**Connecting Pfeiffer Vacuum display and control units or PC**

- Use the connection cable supplied with the control panel or from the range of accessories.
- The connection of respectively one external operating unit is possible on the interface RS-485.
- A USB interface (PC) can be connected via the USB/RS-485-converter.

# 7 The Pfeiffer Vacuum parameter set

## 7.1 General

All function-relevant variables of a turbopump are anchored in the electronic drive unit as parameters. Each parameter has a three-digit number and a designation. Parameters can be used via Pfeiffer Vacuum display and control units or via RS-485 with the Pfeiffer Vacuum protocol.



### Additional parameters in the control unit

For the control of connected external components (e.g. vacuum measurement devices) there are additional parameters fixed in the respective Pfeiffer Vacuum display and control unit.

→ Please consider the respective operating instructions.



### Profibus and Pfeiffer Vacuum parameters

All Pfeiffer Vacuum parameters of data type 0, 1, 2 and 7 can be used for the parameter channel (PPO1) and the parameterization data.

→ Avoid conflicts with existing functions in the modules.

### 7.1.1 Conventions

Parameters are displayed in square brackets as a three-digit number in bold font. The designation may also be stated if necessary.

Example: **[P:312]** Software version

## 7.2 Parameter overview

### 7.2.1 Annotation

#	Three figure number of the parameter
Display	Display of the parameter name in the LCD * = Representation as a symbol, if necessary
Designation	Short description of the parameter
Functions	Functional description of the parameter
Data type	Type of formatting of the parameter for the use within the Pfeiffer Vacuum protocol
Access method	R: read access; W: write access
Unit	Physical unit of the described characteristic
min / max	Permissible limits for value input
default	Factory settings (partially specific of the pump type)
	Parameter can be stored non volatile in the electronic drive unit and may be re-used after resetting of the mains supply.

### 7.2.2 Operation with DCU



### Parameter set and Pfeiffer Vacuum display and control unit

Pfeiffer Vacuum display and control units DCU show the basic parameter set by default. Furthermore the DCU contains parameters, which are not positioned in the electronic drive unit.

→ Parameter **[P:794]** = 1 (Display of all available parameters).

#	Display	Designation	Functions	Data type / Access	Unit	min	max	de- fault	
340	Pressure	Pressure value (ActiveLine)		7 R	hPa	1E-10	1E3		
350	Ctr Name	Type of display and control unit		4 R					

## The Pfeiffer Vacuum parameter set

#	Display	Designation	Functions	Data type	Access	Unit	min	max	de- fault	
351	Ctr Software	Software of display and control unit		4	R					
738	Gaugetype	Type of pressure gauge		4	RW					
794	Param set	Parameterset	0 = basic parameter set 1 = extended parameter set	7	RW		0	1	0	
795	Servicelin	Insert service line		7	RW				795	

### 7.2.3 Only for Profibus

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
918		Profibus device address		1	R		1	125		
947		Error number		1	R		0	65535		
967		Control word		1	R		0	65535		
968		Status word		1	R		0	65535		

### 7.2.4 Control commands

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
001	Heating	Heating	0 = off 1 = on	0	RW		0	1	0	x
002	Standby	Standby	0 = off 1 = on	0	RW		0	1	0	x
004	RUTimeCtrl	Run-up time control	0 = off 1 = on	0	RW		0	1	1	x
009	ErrorAckn	Error acknowledgement	1 = Error acknowledgement	0	W		1	1		
010	PumpgStatn	Pumping station	0 = off 1 = on and error acknowledgement	0	RW		0	1	0	x
012	EnableVent	Enable venting	0 = no 1 = yes	0	RW		0	1	0	x
017	CfgSpdSwPt	Configuration rotation speed switchpoint	0 = Rotation speed switchpoint 1 1 = Rotation speed switchpoint 1&2	7	RW		0	1	0	x
019	Cfg DO2	Configuration output DO2	0 = Rot. speed switchpoint attained 1 = No error 2 = Error 3 = Warning 4 = Error and/or warning 5 = Set speed attained 6 = Pump on 7 = Pump accelerates 8 = Pump decelerates 9 = always 0 10 = always 1 11 = Remote priority active 12 = Heating 13 = Backing pump 14 = Sealing gas 15 = Pumping station 16 = Pump rotates 17 = Pump does not rotate 19 = Pressure switchpoint 1 underrun 20 = Pressure switchpoint 2 underrun 21 = Fore-vacuum valve, delayed 22 = Backing pump standby	7	RW		0	22	1	x
023	MotorPump	Motor pump	0 = off 1 = on	0	RW		0	1	1	x
024	Cfg DO1	Configuration output DO1	Options see [P:019]	7	RW		0	21	0	x
025	OpMode BKP	Backing pump mode	0 = Continuous operation 1 = Intermittent operation 2 = Delayed switching on 3 = Delayed intermittent operation	7	RW		0	3	0	x
026	SpdSetMode	Rotation speed setting mode	0 = off 1 = on	7	RW		0	1	0	x
027	GasMode	Gas mode	0 = Heavy gases 1 = Light gases 2 = Helium	7	RW		0	2	0	x
030	VentMode	Venting mode	0 = Delayed venting 1 = No venting 2 = Direct venting	7	RW		0	2	0	x

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
035	Cfg Acc A1	Configuration accessory connection A1	0 = Fan (continuous operation) 1 = Venting valve, normally closed 2 = Heating 3 = Backing pump 4 = Fan (temperature controlled) 5 = Sealing gas 6 = always 0 7 = always 1 8 = Power failure venting unit 12 = second venting valve	7	RW		0	12	0	x
036	Cfg Acc B1	Configuration accessory connection B1	Options see [P:035]	7	RW		0	12	1	x
037	Cfg Acc A2	Configuration accessory connection A2	Options see [P:035]	7	RW		0	12	3	x
038	Cfg Acc B2	Configuration accessory connection B2	Options see [P:035]	7	RW		0	12	2	x
050	SealingGas	Sealing gas	0 = Off 1 = On	0	RW		0	1	0	x
055	Cfg AO1	Configuration output AO1	0 = Actual rotation speed 1 = Power 2 = Current 3 = always 0 V 4 = always 10 V 6 = pressure value 1 7 = pressure value 2 8 = control fore-vacuum	7	RW		0	8	0	x
060	CtrlVialnt	Control via interface	1 = Remote 2 = RS-485 4 = PV.can 8 = Field bus 16 = E74 255 = Unlock interface selection	7	RW		1	255	2	x
061	IntSelLckd	Interface selection locked	0 = off 1 = on	0	RW		0	1	0	x
062	Cfg DI1	Configuration input DI1	Setting ≠ [P:062]  0 = Deactivated 1 = Enable venting 2 = Heating 3 = Sealing gas 4 = Run-up time control 5 = Rotation speed setting mode 6 = Motor 7 = Enable HV sensor 1	7	RW		0	7	1	x
063	Cfg DI2	Configuration input DI2	Options see [P:062] Setting ≠ [P:062]	7	RW		0	7	2	x

### 7.2.5 Status requests

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
300	RemotePrio	Remote priority	0 = no 1 = yes	0	R		0	1		
302	SpdSwPtAtt	Rotation speed switchpoint attained	0 = no 1 = yes	0	R		0	1		
303	Error code	Error code		4	R					
304	OvTempElec	Excess temperature electronic drive unit	0 = no 1 = yes	0	R		0	1		
305	OvTempPump	Excess temperature pump	0 = no 1 = yes	0	R		0	1		
306	SetSpdAtt	Set rotation speed attained	0 = no 1 = yes	0	RW		0	1		
307	PumpAccel	Pump accelerates	0 = no 1 = yes	0	R		0	1		
308	SetRotSpd	Set rotation speed (Hz)		1	R	Hz	0	999999		
309	ActualSpd	Active rotation speed (Hz)		1	R	Hz	0	999999		
310	DrvCurrent	Drive current		2	R	A	0	9999.99		
311	OpHrsPump	Operating hours pump		1	R	h	0	65535		x
312	Fw version	Firmware version electronic drive unit		4	R					
313	DrvVoltage	Drive voltage		2	R	V	0	9999.99		
314	OpHrsElec	Operating hours electronic drive unit		1	R	h	0	65535		x
315	Nominal Spd	Nominal rotation speed (Hz)		1	R	Hz	0	999999		

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
316	DrvPower	Drive power		1	R	W	0	999999		
319	PumpCycles	Pump cycles		1	R		0	65535		x
326	TempElec	Temperature electronic		1	R	°C	0	999999		
330	TempPmpBot	Temperature pump bottom part		1	R	°C	0	999999		
336	AccelDecel	Acceleration / Deceleration		1	R	rpm/s	0	999999		
342	TempBearng	Temperature bearing		1	R	°C	0	999999		
346	TempMotor	Temperature motor		1	R	°C	0	999999		
349	ElecName	Name of electronic drive unit		4	R					
354	HW Version	Hardware version electronic drive unit		4	R					
360	ErrHist1	Error code history, pos. 1		4	R					x
361	ErrHist2	Error code history, pos. 2		4	R					x
362	ErrHist3	Error code history, pos. 3		4	R					x
363	ErrHist4	Error code history, pos. 4		4	R					x
364	ErrHist5	Error code history, pos. 5		4	R					x
365	ErrHist6	Error code history, pos. 6		4	R					x
366	ErrHist7	Error code history, pos. 7		4	R					x
367	ErrHist8	Error code history, pos. 8		4	R					x
368	ErrHist9	Error code history, pos. 9		4	R					x
369	ErrHist10	Error code history, pos. 10		4	R					x
397	SetRotSpd	Set rotation speed (rpm)		1	R	rpm	0	999999		
398	ActualSpd	Actual rotation speed (rpm)		1	R	rpm	0	999999		
399	NominalSpd	Nominal rotation speed (rpm)		1	R	rpm	0	999999		

## 7.2.6 Set value settings

#	Display	Designation	Functions	Data type	Access method	Unit	min	max	default	
700	RUTimeSVal	Set value run-up time		1	RW	min	1	120	8	x
701	SpdSwPt1	Rotation speed switchpoint 1		1	RW	%	50	97	80	x
707	SpdSVal	Set value in rot. speed setting mode		2	RW	%	20	100	65	x
708	PwrSVal	Set value power consumption		7	RW	%	10	100	100 <sup>1</sup>	x
710	Swoff BKP	Switching off threshold backing pump in intermit-tend mode		1	RW	W	0	1000	0	x
711	SwOn BKP	Switching on threshold backing pump in intermit-tend mode		1	RW	W	0	1000	0	x
717	StdbySVal	Set value rotation speed at standby		2	RW	%	20	100	66.7	x
719	SpdSwPt2	Rotation speed switchpoint 2		1	RW	%	5	97	20	x
720	VentSpd	Venting rot. speed at delayed venting		7	RW	%	40	98	50	x
721	VentTime	Venting time at delayed venting		1	RW	s	6	3600	3600	x
730	PrsSwPt 1	Pressure switchpoint 1		10	RW	hPa				x
732	PrsSwPt 2	Pressure switchpoint 2		10	RW	hPa				x
739	PrsSn1Name	Name sensor 1		4	R					
740	Pressure 1	Pressure value 1		10	RW	hPa				x
742	PrsCorrPi 1	Correction factor 1		2	RW					x
749	PrsSn2Name	Name sensor 2		4	R					
750	Pressure 2	Pressure value 2		10	RW	hPa				x
752	PrsCorrPi 2	Correction factor 2		2	RW					x
777	NomSpdConf	Nominal rotation speed confirmation		1	RW	Hz	0	1500	0	x
797	RS485Adr	RS-485 device address		1	RW		1	255	1	x

1. depending on the pump type

## 7.3 Configuring the connections

The electronic drive unit is pre-configured in the factory. Thereby the turbopump is immediately operational with the necessary functions. The connections of the electronic drive unit can be configured to suit individual requirements using the parameter set.

### 7.3.1 Digital outputs on "X3"

→ Configuration via parameters [P:019] and [P:024].

Option	Description
0 = Rotation speed switchpoint attained	Active, if switchpoint attained
1 = No error	Active, if failure-free operation
2 = Error	Active, if error message is active
3 = Warning	Active, if warning message is active

Option	Description
4 = Error and / or warning	Active, if error and / or warning is active
5 = Set rotation speed attained	Active, if set rotation speed is attained
6 = Pump on	Active, if Pumping station and Motor is on; No Error
7 = Pump accelerates	Active, if Pumping station is on; Actual rotation speed < Set rotation speed
8 = Pump decelerates	Active, if Pumping station is on; Actual rotation speed > Set rotation speed Pumping station is off; Rotation speed > 3 Hz
9 = always 0	GND for the control of an external device
10 = always 1	+24 V DC for the control of an external device
11 = Remote priority active	Active, if Remote priority is active
12 = Heating	Control is equal to parameter [P:001]
13 = Backing pump	Control is equal to parameter [P:010] and [P:025]
14 = Sealing gas	Control is equal to parameter [P:050]
15 = Pumping station	Control is equal to parameter [P:010]
16 = Pump rotates	Active, if rotation speed > 1 Hz
17 = Pump does not rotate	Active, if rotation speed < 2 Hz
18 = TMS engaged*	Active, if TMS set temperature is engaged
19 = Pressure switchpoint 1 underrun	Control is equal to parameter [P:730] ([P:740] < [P:730])
20 = Pressure switchpoint 2 underrun	Control is equal to parameter [P:732] ([P:750] < [P:732])
21 = Fore-vacuum valve, delayed	+ 24 V DC time delayed after pumping station on
22 = Backing pump standby	Control is equal to standby operation of the backing pump

\* Only when using pumps with Temperature Management System TMS

### 7.3.2 Accessory connection

→ Configuration via parameters [P:035], [P:036], [P:037] or [P:038].

Option	Description
0 = Fan (continous operation)	Control via parameter Pumping station
1 = Venting valve, normally closed	Control via parameter Enable venting, when using a venting valve which is normally closed.
2 = Heating	Control via parameters Heating and Rotation speed switchpoint attained
3 = Backing pump	Control via parameters Pumping station and operation mode backing pump
4 = Fan (temperature controlled)	Control via parameters Pumping station and temperature thresholds
5 = Sealing gas	Control via parameters Pumping station and Sealing gas
6 = always 0	GND for the control of an external device
7 = always 1	+24 V DC for the control of an external device
8 = Power failure venting unit	Control via parameter Enable venting, when using a power failure venting unit.
12 = second venting valve	Control via parameter Enable venting and underrunning 50 % of the nominal rotation speed, when using a venting valve which is normally closed.
13 = Sealing gas monitoring	Control via parameters Pumping station and Sealing gas.

### 7.3.3 Analog output on "X3"

→ Configuration via parameter [P:055].

Option	Description
0 = Rotation speed	Rotation speed signal; 0 - 10 V DC = 0 - 100 % x $f_{\text{Nominal}}$
1 = Power	Power signal; 0 - 10 V DC = 0 - 100 % x $P_{\text{max}}$
2 = Current	Current signal; 0 - 10 V DC = 0 - 100 % x $I_{\text{max}}$
3 = always 0 V	always GND
4 = always 10 V	output of continuously 10 V DC

Option	Description
6 = Pressure value 1	Pressure value signal; 0 V: error 1 V: underrange 1,5 - 8,5 V for sensor RPT p (hPa) = $10^{(U-5.5 V)}$ 1,5 - 8,5 V for sensor IKT p (hPa) = $10^{(U-10.5 V)}$ 9 V: overrange
7 = Pressure value 2	
8 = Control fore-vacuum	Fore-vacuum signal; control of Pfeiffer Vacuum turbo pumping stations

### 7.3.4 Control via interface

→ Configuration via parameters [P:060] and [P:061].

Option [P:060]	Description
1 = remote	Operation via connection "remote"
2 = RS-485	Operation via connection "RS-485"
4 = PV.can	For service purposes only
8 = Field bus	Operation via field bus
16 = E74	Operation via connection "E74"

Option [P:061]	Description
0 = off	Interface selection via [P:060]
1 = on	Interface selection locked

### 7.3.5 Digital inputs on "X3"

→ Configuration via parameters [P:062] and [P:063].

Option	Description
0 = Deactivated	Connection deactivated
1 = Venting release	Control is equal to parameter [P:012]
2 = Heating	Control is equal to parameter [P:001]
3 = Sealing gas	Control is equal to parameter [P:050]
4 = Run-up time control	Control is equal to parameter [P:004]
5 = Rotation speed setting mode	Control is equal to parameter [P:026]
6 = Motor	Control is equal to parameter [P:023]
7 = HV sensor release	Control is equal to parameter [P:041] (only 0 or 1)

## 7.4 Operation with the Pfeiffer Vacuum parameter set

### 7.4.1 Factory settings

The electronic drive unit is pre-programmed in the factory. This guarantees proper, reliable turbopump operation without the need for additional configuration.

### 7.4.2 Checking the adjustments

→ Before operating with parameters, check set values and control commands for their suitability for the pumping process.

### 7.4.3 Gas type dependent operations

Friction causes the rotor to heat up severely under gas load and high rotation speed. To avoid overheating, the electronic drive unit has implemented power-rotation speed-characteristics, whereby the pump can be operated at every rotation speed with the maximum allowable gas load without danger of damage. The maximum power consumption depends on the gas type. Three characteristics are available in order to completely exhaust the pump's capacity for each gas type.





### NOTICE

#### Danger of the pump being destroyed

Pumping of gases with a higher molecular mass in the wrong gas mode can lead to destruction of the pump.

→ Ensure the gas mode is correctly set.

→ Contact Pfeiffer Vacuum before using gases with a greater molecular mass (> 80).

- Gas mode "0" for gases with the molecular mass >39, e.g. argon.
- Gas mode "1" for gases with the molecular mass ≤ 39.
- Gas mode "2" for helium.
- Power characteristics according to the technical data of the turbopump.

→ Check and set-up the gas mode via [P:027].

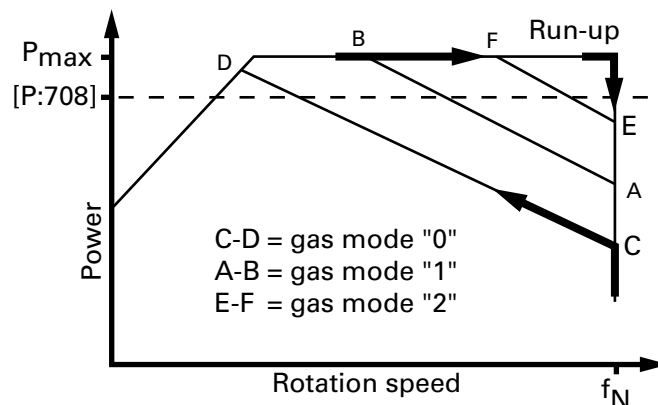


Fig. 4: Principle of power characteristics lines for gas type dependent operations, e.g. gas mode = 0

The turbopump runs up with maximum power consumption. When the nominal and/or set rotation speed is reached, the pump automatically switches over to the chosen power characteristic of the selected gas mode. Increasing gas load is initially compensated by a rise in power consumption in order to keep the rotation speed constant. Increasing gas friction, however, causes the turbopump to heat up more severely. When the gastype-dependent maximum power is exceeded, the rotation speed of the turbopump is reduced until an equilibrium between permissible power and gas friction is attained.

→ To avoid rotation speed fluctuations, Pfeiffer Vacuum recommends setting a somewhat lower frequency in rotation speed setting mode.

#### 7.4.4 Set value power consumption

→ Adjust the parameter [P:708] to the desired value in %.

If adjusting the set value power consumption below 100 % the run-up time prolongs. To avoid error messages, the parameter [P:700] **RUTimeSVal** should be adjusted accordingly.

#### 7.4.5 Run-up time

The run-up of the turbopump is time-monitored ex factory. There are various causes of prolonged run-up times, e.g.:

- Too high gas loads
- Leakage in the system
- The set value run-up time is too low

→ Eliminate any external and application-related causes.

→ Adjust the run-up time via parameter [P:700].

### 7.4.6 Adjusting the rotation speed switchpoint

The rotation speed switchpoint can be used for the message "Pump operational for the process". Overrunning or underrunning the active rotation speed switchpoint activates or deactivates a signal at the pre-configured output on the electronic drive unit and at the status parameter [P:302].

#### Rotation speed switchpoint 1

- Adjust the parameter [P:701] to the desired value in %.
- Parameter [P:017] = 0

Signal output and status parameter [P:302] are based on the set value for rotation speed switchpoint 1 [P:701].

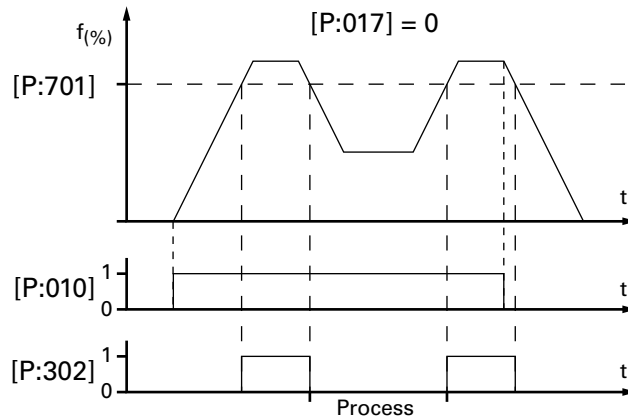


Fig. 5: Example for the configuration rotation speed switchpoint 1 active

#### Rotation speed switchpoint 1 & 2

- Adjust the parameter [P:701] to the desired value in %.
- Adjust the parameter [P:719] to the desired value in %.
- Parameter [P:017] = 1

When the pumping station [P:010] is switched on, the rotation speed switchpoint 1 is the signal generator. When the pumping station is switched off, signal output and status query are based on the rotation speed switchpoint 2. The signal output is governed by the hysteresis between the two switchpoints.

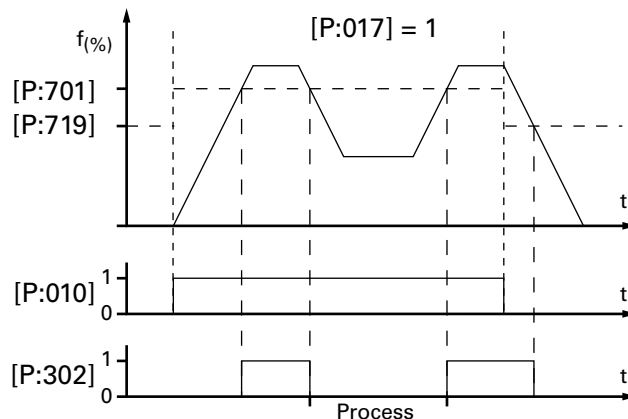


Fig. 6: Example for the configuration rotation speed switchpoint 1+2 active; [P:701] > [P:719]

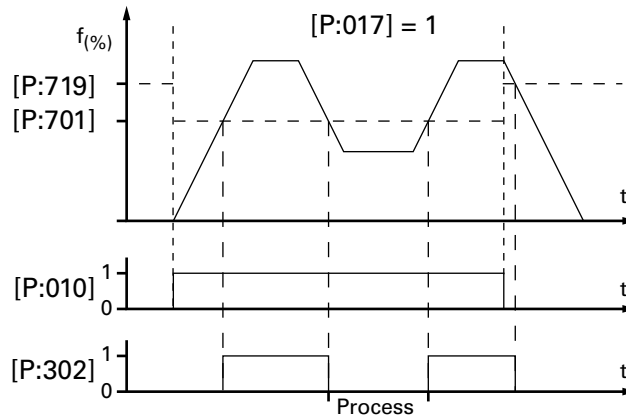


Fig. 7: Example for the configuration rotation speed switchpoints 1+2 active; [P:701] < [P:719]

### 7.4.7 Rotation speed setting mode

The rotation speed setting mode reduces the rotation speed and hence the throughput of the turbopump. The pumping speed of the turbopump changes proportional to rotation speed. Standby mode is ineffective during rotation speed setting mode. The set rotation speed is adjusted by the set value in rotation speed setting mode [P:707]. The rotation speed switchpoint varies with the set rotation speed. Underrunning or overrunning the set value in rotation speed setting mode activates and deactivates the status signal [P:306] SetSpdAtt respectively.

- Adjust the parameter [P:707] to the desired value in %.
- Parameter [P:026] = 1
- Read the parameters [P:308]/[P:397].



#### Permissible rotation speed range of the turbopump

Adjustments in the rotation speed setting mode or in the standby mode are subject to the permissible rotation speed range of the respective turbopump. Underrunning the minimum permissible value causes the warning message **Wrn100**. The electronic drive unit resets the set rotation speed automatically to the next valid value.

- Maintain the permissible rotation speed range of the turbopump (please refer to the technical data in the operating instructions for the respective turbopump).

### 7.4.8 Standby

Pfeiffer Vacuum recommends standby mode for the turbopump during process and production stops. When standby mode is active, the electronic drive unit reduces the rotation speed of the turbopump. Standby mode is ineffective during rotation speed setting mode. The factory setting for the set value in standby mode is 66.7 % of the nominal rotation speed. Underrunning or overrunning the set speed in standby mode activates or deactivates the status signal [P:306] SetSpdAtt.

- Adjust the parameter [P:717] to the desired value in %.
- Parameter [P:002] = 1
- Read the parameters [P:308]/[P:397].

### 7.4.9 Rotation speed set value

The typical nominal rotation speed of a turbopump is factory-set in the electronic drive unit. If the electronic drive unit is replaced or a different pump type is used, the reference set value of the nominal rotation speed must be confirmed. This procedure is part of a redundant safety system for avoiding excess rotation speeds.

HiPace	Nominal rotation speed confirmation [P:777]
10 / 30 / 60 / 80	1500 Hz

<b>HiPace</b>	<b>Nominal rotation speed confirmation [P:777]</b>
300	1000 Hz

→ Adjust the parameter **[P:777]** according to the pump type.

Once the nominal rotation speed is attained, the pump will run idle unless additional gas loads are entered. Depending on process or application requirements, the nominal rotation speed can be reduced in rotation speed setting mode or standby mode.

#### 7.4.10 Operation mode backing pump

Operation of a connected backing pump via the electronic drive unit depends on the backing pump type.

<b>Operating mode [P:025]</b>	<b>Recommended backing pump</b>
"0" Continuous operation	All backing pumps
"1" Intermittent operation	Diaphragm pumps only
"2" Delayed switching on	All backing pumps
"3" Delayed intermittent operation	Diaphragm pumps only

→ Adjust the parameter **[P:025]** to the desired value.

##### Continuous operation

With "pumping station on", the electronic drive unit sends a signal to the configured accessory connection to switch on the backing pump. This signal can also be used for controlling a fore-vacuum safety valve.

##### Intermittent operation (diaphragm pumps only)

Intermittent operation can extend the life expectancy of the membrane of a connected diaphragm pump. Either a diaphragm pump with built-in semiconductor relay or an interconnected relay box with semiconductor relay is required for intermittent operation. The backing pump is switched on and off in dependence of the turbopump's power consumption. A relation to the supplied fore-vacuum pressure is derived from the power consumption. The switching off and switching on thresholds for the backing pump are adjustable. Fluctuations in the power consumption of idling turbopumps and type-dependent varying fore-vacuum pressures of the backing pumps require the switching thresholds to be set separately for the intermittent mode.

Pfeiffer Vacuum recommends the intermittent mode between 5 and 10 hPa. A pressure gauge and a dosing valve are required to set the switching thresholds.

- Switch on the vacuum system via the function "pumping station" and await the run-up.
- Generate a fore-vacuum pressure of 10 hPa by gas inlet via dosing valve.
- Read and note the parameter **[P:316]**.
- Adjust the switch on threshold backing pump via parameter **[P:711]** to the determined drive power for a fore-vacuum pressure of 10 hPa.
- Reduce the fore-vacuum pressure to 5 hPa.
- Read and note the parameter **[P:316]**.
- Adjust the switch off threshold backing pump via parameter **[P:710]** to the determined drive power for a fore-vacuum pressure of 5 hPa.

##### Delayed switching on

Switching on the turbopump and the backing pump at the same time can result in unwanted gas flows. Depending on process or application requirements, the backing pump can be switched on with a delay. The switch-on delay depends on the rotation speed of the turbopump and is fixed in the electronic drive unit at 6 Hz.

The signal can also be used for switching a fore-vacuum safety valve.

**Delayed intermittent operation**

Fluctuations during intermittent operation can result in the specified switching thresholds being exceeded or not reached, and may cause the backing pump to switch when not required. Depending on the process or application requirements, intermittent operation can be activated with a delay. The switching delay is dependent on the specified switching thresholds being exceeded or not met on an uninterrupted basis over a period of time.

- Switch-off threshold, parameter **[P:710]**
- Switch-on threshold, parameter **[P:711]**
- Delay 8 s.

The signal can also be used for switching a fore-vacuum safety valve.

**7.4.11 Operation with accessories**

Depending on the configuration, various accessories can be connected to the turbopump and controlled via parameter of the electronic drive unit.

**Heating**

→ Switch on or off the heating via parameter **[P:001]**.

The activation of a connected casing heating depends on rotation speed switchpoint 1 (factory setting: 80 % x  $f_{\text{Nominal}}$ ).

**Fan**

Two options in the connection configuration enable continuous or temperature controlled operation of a connected air cooling unit (see p. 22, chap. 7.3). Threshold values are type-specific and are anchored in the electronic drive unit.

**Sealing gas valve**

→ Switch on or off a sealing gas valve which is connected to a pre-configured output via parameter **[P:050]**.

**7.4.12 Vent modes**

The turbopump can be vented only after the function "pumping station" has been switched off. Signals are sent to configured outputs with a fixed delay of 6 s. There are three options for operation with a venting valve connected.

→ Select the venting mode via parameter **[P:030]**.

**Delayed venting**

Start and venting time after "pumping station off" are configurable and depend on the rotation speed of the turbopump.

→ Parameter **[P:030]** = 0

→ Adjust the venting rotation speed in % of the nominal rotation speed via parameter **[P:720]**.

→ Adjust the venting time in s via parameter **[P:721]**.

If the venting rotation speed is underrun, the venting valve will open for the set venting time. In the event of a power failure, venting will occur if the set venting rotation speed is underrun. In this case, the venting period depends on the residual energy delivered by the moving rotor. When power is restored, the venting process is interrupted.

**No venting**

No venting is performed during this operation mode.

→ Parameter **[P:030]** = 1

### Direct venting

Start and venting time are not configurable. Venting starts with a delay of 6 s after "pumping station off". When the function "pumping station" is switched on renewed, the venting valve closes automatically. In the event of a power failure, venting will occur if an anchored type-specific rotation speed is underrun. When power is restored, the venting process is interrupted.

→ Parameter **[P:030]** = 2

### 7.4.13 Monitoring the thermal load

If threshold values are overrun, output signals from temperature sensors allow the pump to be brought to a safe condition. Depending on pump type, temperature threshold values for warnings and error messages are saved fixed in the electronic drive unit. For information purposes, various status queries are prepared in the parameter set.

## 7.5 Switching on/off the pump

### 7.5.1 Switching on

The function "pumping station" comprises turbopump operation with control of all connected accessories (e.g. backing pump).

→ Switch on the supply voltage with switch S1 on the power supply.

→ Parameter **[P:023]** = 1 (default)

→ Parameter **[P:010]** = 1

Ongoing (and removed) error messages are reset. After a successfully completed self-test, the electronic drive unit sets the turbopump motor and all connected accessories into operation depending on their configuration.

When the pumping station is activated, the motor of the turbopump can be switched off and on via the function **[P:023]**.

### 7.5.2 Switching off

→ Parameter **[P:010]** = 0

The electronic drive unit switches off the turbopump and activates preset accessory options (e.g. venting ON, backing pump OFF).

→ Wait for the complete standstill of the pump.

→ Cut off the supply voltage with switch S1 on the power supply.

## 8 Pfeiffer Vacuum Protocol for "RS-485"

### 8.1 Telegram frame

The telegram frame of the Pfeiffer Vacuum protocol contains only ASCII code characters [32; 127], the exception being the end character of the message  $C_R$ . Basically, a master  $\square$  (e.g. a PC) sends a telegram, which is answered by a slave  $\circ$  (e.g. electronic drive unit or gauge).

a2	a1	a0	*	0	n2	n1	n0	l1	l0	dn	...	d0	c2	c1	c0	$C_R$
a2 - a0		Unit address for slave $\circ$ – Individual address of the unit ["001";"255"] – Group address "9xx" for all identical units (no response) – global address "000" for all units on the bus (no response)														
*		Action (see p. 31, chap. 8.2)														
n2 - n0		Pfeiffer Vacuum parameter numbers														
l1 - l0		Data length dn ... d0														
dn - d0		Data in data type concerned (see p. 32, chap. 8.3)														
c2 - c0		Checksum (sum of ASCII values of cells a2 to d0) modulo 256														
$C_R$		carriage return (ASCII 13)														

### 8.2 Telegrams

Data request  $\square \Rightarrow \circ ?$

a2	a1	a0	0	0	n2	n1	n0	0	2	=	?	c2	c1	c0	$C_R$
----	----	----	---	---	----	----	----	---	---	---	---	----	----	----	-------

Control command  $\square \Rightarrow \circ !$

a2	a1	a0	1	0	n2	n1	n0	l1	l0	dn	...	d0	c2	c1	c0	$C_R$
----	----	----	---	---	----	----	----	----	----	----	-----	----	----	----	----	-------

Data response / control command understood  $\circ \Rightarrow \square \checkmark$

a2	a1	a0	1	0	n2	n1	n0	l1	l0	dn	...	d0	c2	c1	c0	$C_R$
----	----	----	---	---	----	----	----	----	----	----	-----	----	----	----	----	-------

Error message  $\circ \Rightarrow \square *$

a2	a1	a0	1	0	n2	n1	n0	0	6	N	O	_	D	E	F	c2	c1	c0	$C_R$	
											R	A	N	G	E					
											L	O	G	I	C					

NO_DEF	The parameter n2 - n0 does not exist
_RANGE	Data dn - d0 are outside the permitted range
_LOGIC	Logic access violation

#### 8.2.1 Example 1

Data request

Actual rotation speed (parameter [P:309], device address slave: "123")

$\square \Rightarrow \circ ?$	1	2	3	0	0	3	0	9	0	2	=	?	1	1	2	$C_R$
ASCII	49	50	51	48	48	51	48	57	48	50	61	63	49	49	50	13

Data response: 633 Hz

Actual rotation speed (parameter [P:309], device address slave: "123")

$\circ \Rightarrow \square \checkmark$	1	2	3	1	0	3	0	9	0	6	0	0	6	3	3	0	3	7	$C_R$
ASCII	49	50	51	49	48	51	48	57	48	54	48	48	54	51	51	48	51	55	13

### 8.2.2 Example 2

**Control command**

Switch on pumping station (parameter [P:010], device address slave: "042")

☐⇒○!	0	4	2	1	0	0	1	0	0	6	1	1	1	1	1	1	0	2	0	C <sub>R</sub>
ASCII	48	52	50	49	48	48	49	48	48	54	49	49	49	49	49	49	48	50	48	13

**Control command understood**

Switch on pumping station (parameter [P:010], device address slave: "042")

○⇒☐!	0	4	2	1	0	0	1	0	0	6	1	1	1	1	1	1	0	2	0	C <sub>R</sub>
ASCII	48	52	50	49	48	48	49	48	48	54	49	49	49	49	49	49	48	50	48	13

### 8.3 Applied data types

Data type	Description	Size I1 - I0	Example
0 - boolean_old	Boolean value (false / true)	06	000000 / 111111
1 - u_integer	Positive integer number	06	000000 to 999999
2 - u_real	Positive fixed point number	06	001571 equal to 15.71
4 - string	String	06	TC_400
6 - boolean_new	Boolean value (false / true)	01	0 / 1
7 - u_short_int	Positive integer number	03	000 to 999
10 - u_expo_new	Positive exponential number	06	100023
11 - string	String	16	BrezelBier&Wurst



## 9 Malfunctions

### 9.1 General

Turbopump and electronic drive unit malfunctions always result in a warning or error message. In both cases, the electronic drive unit outputs an error code. Operating messages are generally displayed via the LEDs on the electronic drive unit. If an error occurs, the turbopump and connected devices will be switched off. The selected venting mode will be triggered after the preset delay.



WARNING	
<b>Automatic start-up after power failure or malfunction acknowledgement</b>	
The function "pumping station" of the electronic drive unit remains active after power failure or errors that lead to shut down the pump or the system. The turbopump runs up automatically after power is restored or malfunction acknowledgement.	
<ul style="list-style-type: none"> <li>→ Switch off the function "pumping station" if necessary.</li> <li>→ Provide safety measures against interference in the high vacuum flange while the turbopump is running.</li> </ul>	

### 9.2 Operation display via LED

LEDs in the front panel of the electronic drive unit show basic operating conditions of the turbopump. A differentiated malfunction and warning display is possible only for operation with DCU or HPU.










LED	Symbol	LED status	Display	Meaning
Green 		Off	—	currentless
		On, flashing		"Pumping Station OFF", rotation speed $\leq 60 \text{ min}^{-1}$
		On, invers flashing		"Pumping Station ON", set rotation speed not attained
		On, constantly		"Pumping Station ON", set rotation speed attained
		On, blinking		"Pumping Station OFF", rotation speed $> 60 \text{ min}^{-1}$
Yellow 	△	Off	—	no warning
		On, constantly		Warning
Red 	⚡	Off	—	no malfunction
		On, constantly		Malfunction

Fig. 8: Behaviour and meaning of LEDs on the electronic drive unit

### 9.3 Error codes

Error code	Problem	Possible causes	Remedy
Err001	Overspeed		<ul style="list-style-type: none"> <li>⇒ Call Pfeiffer Vacuum Service</li> <li>⇒ Only acknowledge for rotational speed <math>f = 0</math></li> </ul>
Err002	Overvoltage	– Incorrect power pack used	<ul style="list-style-type: none"> <li>⇒ Check power pack type</li> <li>⇒ Check partial mains voltage</li> </ul>
Err006	Run-up fault	<ul style="list-style-type: none"> <li>– Run-up time threshold set too low</li> <li>– Gas flow in recipient through leaks or open valves</li> <li>– Speed-control switching point not reached upon expiration of run-up time</li> </ul>	<ul style="list-style-type: none"> <li>⇒ Adjust run-up time to process conditions</li> <li>⇒ Check recipient for leakage and closed valves</li> <li>⇒ Adjust speed-control switching point</li> </ul>
Err007	Insufficient operating materials	– Insufficient operating materials	<ul style="list-style-type: none"> <li>⇒ Check operating materials</li> <li>⇒ Only acknowledge for rotational speed <math>f = 0</math></li> </ul>
Err008	Connection from electronic drive unit to pump faulty	– Connection to pump faulty	<ul style="list-style-type: none"> <li>⇒ Check connections</li> <li>⇒ Only acknowledge for rotational speed <math>f = 0</math></li> </ul>

Error code	Problem	Possible causes	Remedy
Err010	Internal device error		⇒ Call Pfeiffer Vacuum Service ⇒ Only acknowledge for rotational speed f = 0
Err021	Drive electronics fail to identify pump		⇒ Call Pfeiffer Vacuum Service ⇒ Only acknowledge for rotational speed f = 0
Err043	Internal configuration error		⇒ Call Pfeiffer Vacuum Service
Err044	Excess temperature electronics	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Err045	Motor overheated	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Err046	Internal initialization error		⇒ Call Pfeiffer Vacuum Service
Err091	Internal device error		⇒ Call Pfeiffer Vacuum Service
Err092	Unknown terminal panel		⇒ Call Pfeiffer Vacuum Service
Err093	Temperature evaluation on motor is faulty		⇒ Call Pfeiffer Vacuum Service
Err094	Temperature evaluation on electronics is faulty		⇒ Call Pfeiffer Vacuum Service
Err098	Internal communication error		⇒ Call Pfeiffer Vacuum Service
Err107	Combined error for output stage		⇒ Call Pfeiffer Vacuum Service ⇒ Only acknowledge for rotational speed f = 0
Err108	Speed measurement fault		⇒ Call Pfeiffer Vacuum Service ⇒ Only acknowledge for rotational speed f = 0
Err109	Software not released		⇒ Call Pfeiffer Vacuum Service
Err110	Operating material analysis contains errors		⇒ Call Pfeiffer Vacuum Service ⇒ Only acknowledge for rotational speed f = 0
Err111	Operating materials pump communication error		⇒ Call Pfeiffer Vacuum Service ⇒ Only acknowledge for rotational speed f = 0
Err112	Operating materials pump collective fault		⇒ Call Pfeiffer Vacuum Service ⇒ Only acknowledge for rotational speed f = 0
Err114	Temperature evaluation on output stage is faulty		⇒ Call Pfeiffer Vacuum Service
Err117	Excess temperature on pump base	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Err118	Excess temperature on output stage	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Err119	Excess temperature on bearings	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Err143	Operating materials pump overtemperature	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions ⇒ Only acknowledge for rotational speed f = 0
Err777	Nominal speed not confirmed	– Nominal speed not confirmed after replacing drive electronics	⇒ Confirm nominal speed with <b>[P:777]</b> ⇒ Only acknowledge for rotational speed f = 0
Wrn001	TMS warm-up time elapsed	– Internal timer for warm-up monitoring elapsed	⇒ Check deployment conditions
Wrn003	TMS heating circuit temperature sensor	– TMS temperature not in the permissible range between +5 °C and 85 °C	⇒ Check deployment conditions ⇒ Call Pfeiffer Vacuum Service
Wrn007	Undervoltage/mains failure	– Mains failure	⇒ Check power supply
Wrn018	Authorization level conflict	– Pumping station switched on with <b>[P:010]</b> , while E74 input "start/stop" is off (open)	⇒ Switch on pumping station E74 ⇒ <b>[P:010]</b> switch off
Wrn021	Sealing gas signal invalid	– Sealing gas monitoring unit signal outside the valid range	⇒ Check connections for sealing gas monitoring ⇒ Check parameter options for accessory outputs
Wrn034	Low sealing gas flow	– Sealing gas monitoring unit signal valid, but below the set threshold <b>[P:791]</b>	⇒ Check and improve sealing gas supply ⇒ Check deployment conditions
Wrn045	High motor temperature	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Wrn076	High electronics temperature	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Wrn097	Invalid pump information	– Pump data error	⇒ Factory setting through acknowledgement
Wrn098	Insufficient pump information	– Connection to pump faulty	⇒ Call Pfeiffer Vacuum Service
Wrn100	Speed increased to minimum value	– Permitted specifications for speed set-up mode or standby not correct	⇒ Check <b>[P:707]</b> or <b>[P:717]</b> ⇒ Refer to technical data for the turbopump for valid speed range
Wrn115	Temperature evaluation on pump base is faulty		⇒ Call Pfeiffer Vacuum Service

<b>Error code</b>	<b>Problem</b>	<b>Possible causes</b>	<b>Remedy</b>
Wrn116	Temperature evaluation on bearings is faulty		⇒ Call Pfeiffer Vacuum Service
Wrn117	High pump base temperature	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Wrn118	High output stage temperature	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Wrn119	High bearing temperature	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Wrn143	High temperature of operating materials pump	– Insufficient cooling	⇒ Improve cooling ⇒ Check deployment conditions
Wrn168	High delay	– Pressure increase speed too high; venting rate to high	⇒ Check and adjust venting rate on pump-specific basis



# Declaration of conformity

We hereby declare that the product cited below satisfies all relevant provisions according to the following **EC directives**:

- **Electromagnetic Compatibility 2014/30/EU**
- **Low Voltage 2014/35/EU**
- **Restriction of the use of certain Hazardous Substances 2011/65/EU**

## TC 110 PB

Harmonised standards and national standards and specifications which have been applied:

DIN EN 61000-3-2 : 2014  
DIN EN 61000-3-3 : 2013  
DIN EN 61010-1 : 2010  
DIN EN 61326-1 : 2013  
DIN EN 62061 : 2013  
Semi F47-0200  
Semi S2-0706

Signature:

Pfeiffer Vacuum GmbH  
Berliner Straße 43  
35614 Asslar  
Germany

---

(Dr. Ulrich von Hülsen)  
Managing Director

Asslar, 2017-10-26

## **VACUUM SOLUTIONS FROM A SINGLE SOURCE**

Pfeiffer Vacuum stands for innovative and custom vacuum solutions worldwide, technological perfection, competent advice and reliable service.

## **COMPLETE RANGE OF PRODUCTS**

From a single component to complex systems:

We are the only supplier of vacuum technology that provides a complete product portfolio.

## **COMPETENCE IN THEORY AND PRACTICE**

Benefit from our know-how and our portfolio of training opportunities!

We support you with your plant layout and provide first-class on-site service worldwide.

Are you looking for a  
perfect vacuum solution?  
Please contact us:

**Pfeiffer Vacuum GmbH**  
Headquarters • Germany  
T +49 6441 802-0  
info@pfeiffer-vacuum.de

[www.pfeiffer-vacuum.com](http://www.pfeiffer-vacuum.com)

**PFEIFFER**  **VACUUM**